


Magic Chef W26D6W 02 - CONTROL PANEL (REV. A)

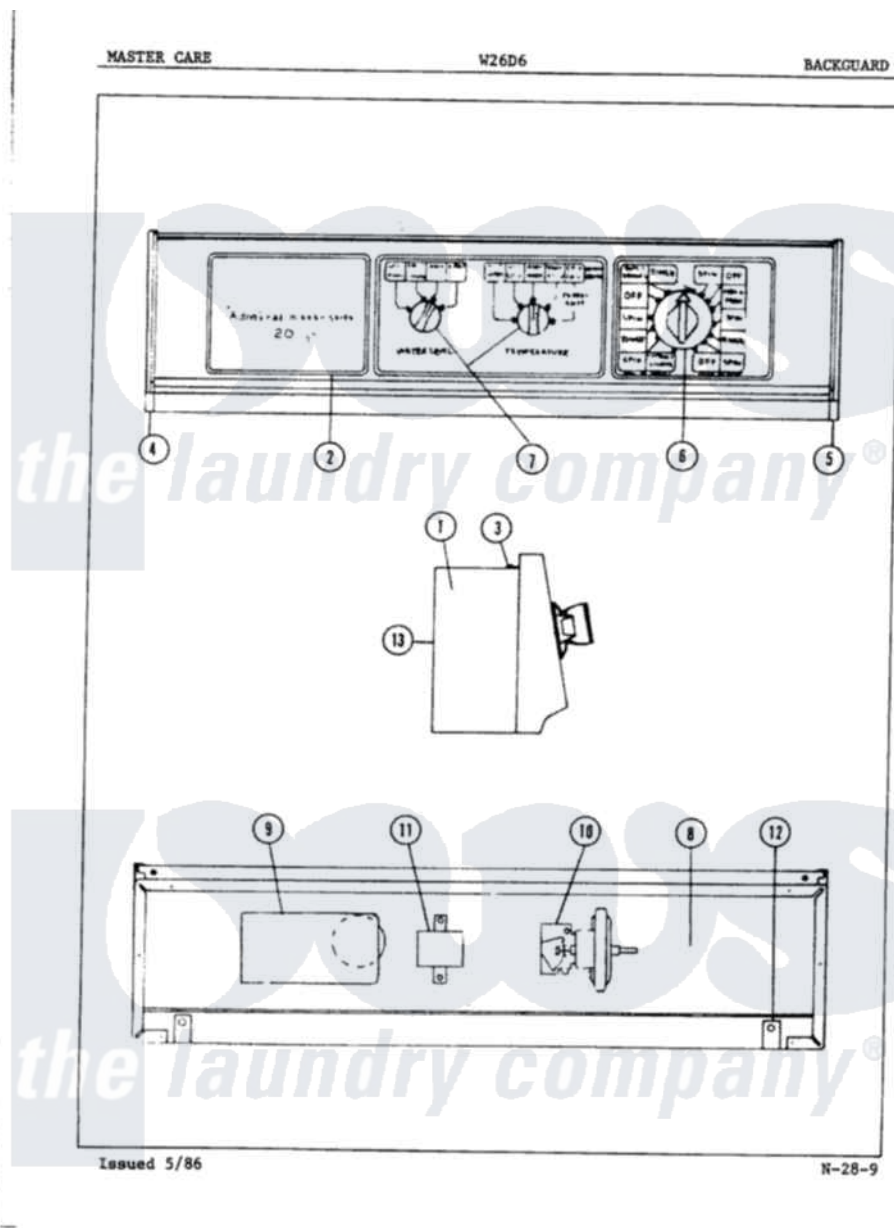

Magic Chef [Residential Magic Chef W26D6W Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. A)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33-9668		Not Available	WRAPPER
2	33-8912		Not Available	CONTROL PANEL
3	25-7649	910187		Screw
"	25-0129		Not Available	CODE H
4	33-6765			LH End Cap
5	25-7496	25-7760		Screw
"	33-6766			RH End Cap
6	33-7343		Not Available	KNOB ASM
"	25-6044			Set Screw
7	33-5804		Not Available	KNOB
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-9367		Not Available	SHIELD
9	25-0205	216412		Screw, Bracket To Timer
"	33-9694		Not Available	TIMER {EXPORT}
"	33-7996		Not Available	TIMER MOTOR
10	33-9732			Pressure Switch

"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6937		Selector Switch
12	25-7461	Not Available	CLIP
13	33-8909	Not Available	SHIELD
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

