


Magic Chef W26EN2 02 - CONTROL PANEL

BACKGUARD

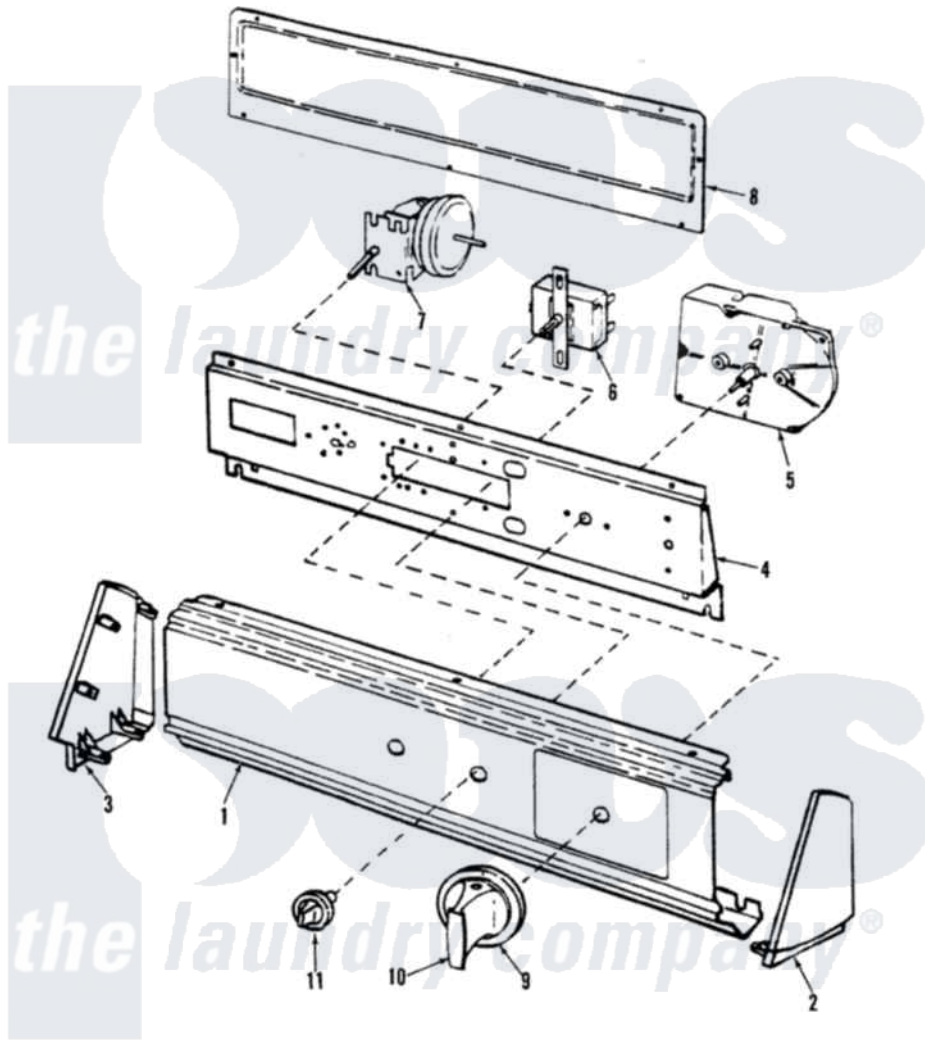

W26EN2

E-6

Magic Chef [Residential Magic Chef W26EN2 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
"	35-0754		Not Available	CONTROL PANEL
2	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0264			RH Endcap
"	25-7760			Screw
3	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0265			LH Endcap
"	25-7760			Screw
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0365	53-1676		Shield, Control
5	35-0492		Not Available	EXPORT TIMER
"	35-0117			Timer Motor 1/2rpm

"	25-0088	489483		Screw 10-32 X 1/2
6	35-0119			Rotary Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	35-0782			Pressure Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	25-7583		Not Available	PLASTIC NUT
"	25-7592		Not Available	SCREW
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	53-0268	21001460		Shield, Rear
"	25-7851			Speedclip, End Cap To Top
9	35-0318		Not Available	HUB/SKIRT ASM
10	35-0498	12500058		Knob Ski
11	35-0147		Not Available	SELECTOR KNOB

