


EXTERIOR

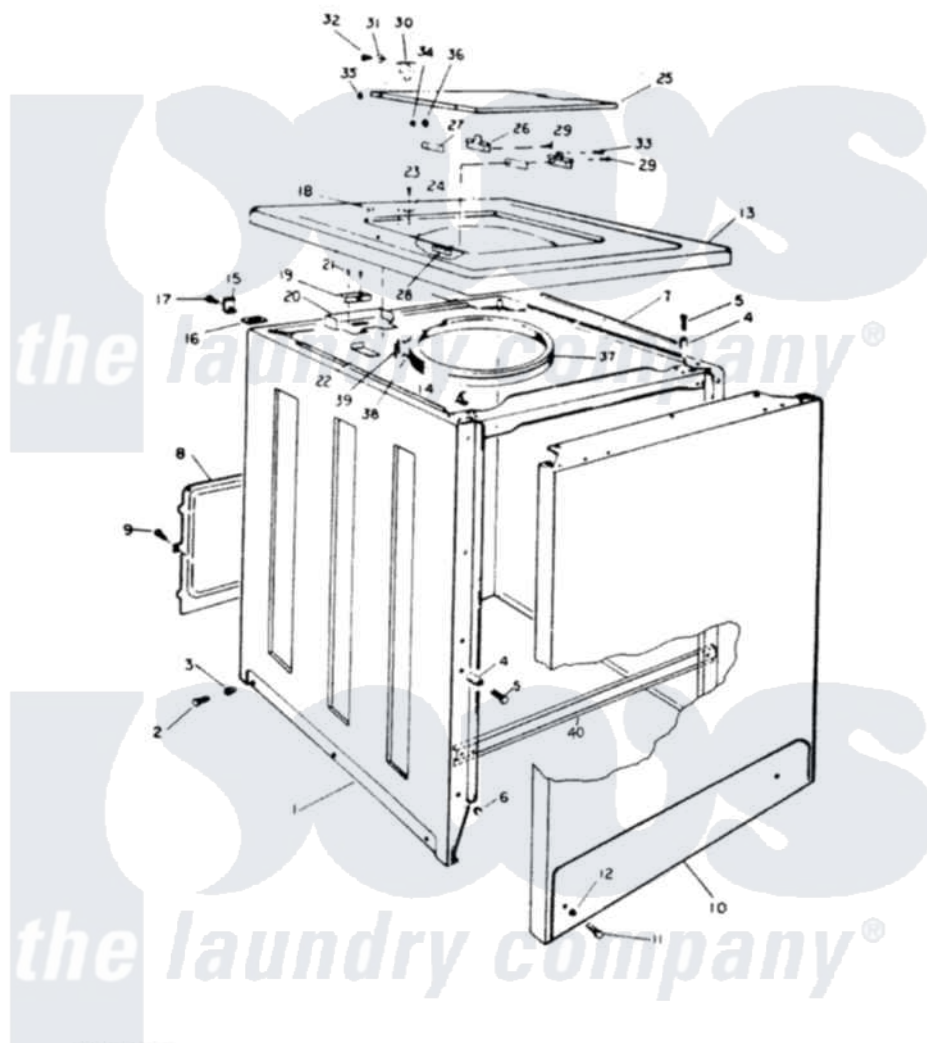

W26EN2

D-6

Magic Chef [Residential Magic Chef W26EN2 Washer Parts](#) Parts Diagram 03 - EXTERIOR  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061		Not Available	CABINET BODY
3	33-2088		Not Available	SLEEVE
"	25-7458	<a href="#">308685</a>		Side Trim )
4	<a href="#">34-9701</a>			Guide, Cabinet
5	<a href="#">25-6109</a>			Screw
6	<a href="#">33-2653</a>			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
10	35-0056		Not Available	FRONT PANEL
11	25-7001	<a href="#">308685</a>		Side Trim )
13	35-0586		Not Available	CABINET TOP
14	<a href="#">25-7285</a>			Clip
15	33-7450	<a href="#">35-2846</a>		Hinge, Cabinet Top
16	<a href="#">33-0930</a>			Pad, Top Hinge
17	25-7732	<a href="#">681414</a>		Screw, 10AB X 1/2
18	<a href="#">33-2653</a>			Bumper, Cabinet

19	33-8911	<a href="#">12001187</a>	Kit, Lid Switch Assembly
20	33-8289	<a href="#">12001187</a>	Kit, Lid Switch Assembly
21	25-7437	<a href="#">40040701</a>	Screw, Tapping No.6b-20
22	33-8828	<a href="#">12001187</a>	Kit, Lid Switch Assembly
23	25-7463	<a href="#">7101P012-60</a>	Screw
24	<a href="#">25-7436</a>		Nylite Washer
25	35-0610	Not Available	CLOTHES DOOR
26	<a href="#">33-6956</a>		Hinge
27	<a href="#">33-6957</a>		Hinge Pad
28	33-8058	Not Available	SPEEDNUT
29	25-7455	<a href="#">99002757</a>	Screw
30	<a href="#">43-0057</a>		Actuator, Door Switch
31	<a href="#">25-7436</a>		Nylite Washer
32	<a href="#">25-7438</a>		Screw
33	25-7455	<a href="#">99002757</a>	Screw
34	25-7086	<a href="#">Y0308025</a>	Washer, Stainless Steel
35	<a href="#">25-7436</a>		Nylite Washer
36	25-8057	Not Available	PLASTIC NUT
37	33-9399	Not Available	SPLASH GUARD
38	33-6093	Not Available	RETAINING RING
39	<a href="#">33-0767</a>		Spring
40	35-0663	Not Available	CABT BRACE
"	<a href="#">25-7883</a>		Screw

