


Magic Chef W26FY2K 02 - CONTROL PANEL (REV. A)

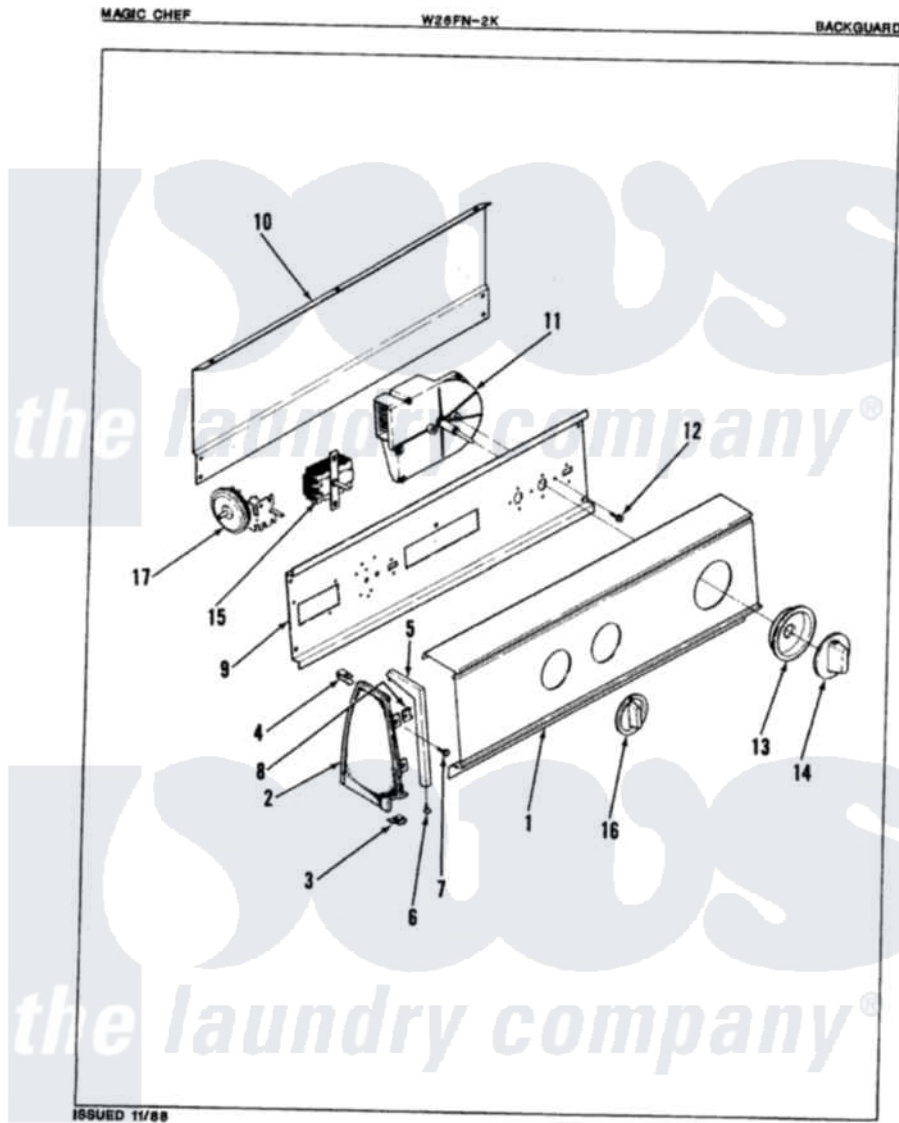

Magic Chef [Residential Magic Chef W26FY2K Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. A)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0903		Not Available	CONTROL PANEL
2	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0265			LH Endcap
"	53-0264			RH Endcap
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-0365	53-1676	Shield, Control
10	25-7583		Not Available
"	25-3457		PLASTIC NUT
"	25-3092	90767	Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0268	21001460	Shield, Rear
11	35-0117		Timer Motor 1/2rpm
"	35-0491		Timer
12	25-0088	489483	Screw 10-32 X 1/2
13	35-0318		Not Available
14	35-0498	12500058	HUB/SKIRT ASM
15	35-0498	12500058	Knob Ski
15	35-0119		Rotary Switch
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-0168		Not Available
17	35-0782		SELECTOR KNOB
"	25-3092	90767	Pressure Switch
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

