


Magic Chef W26HY5K 02 - CONTROL PANEL

SECTION: BACKGUARD
MODEL: W26H-5K

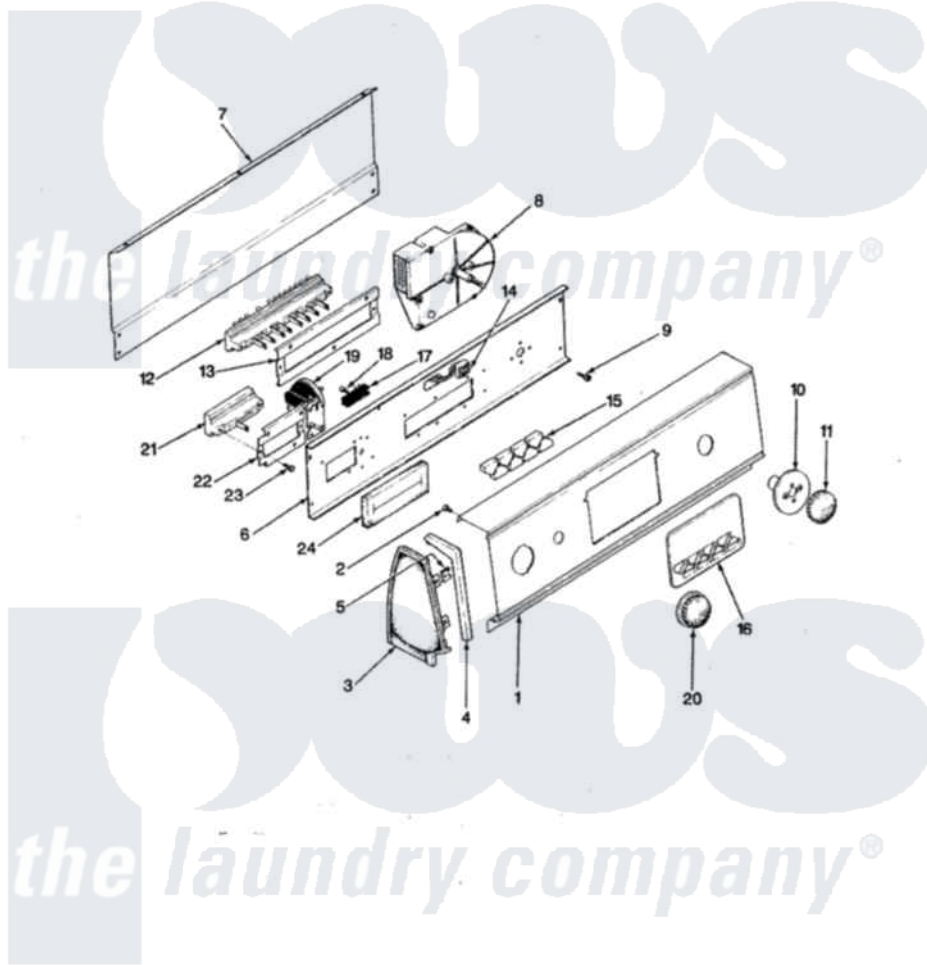

Issue Date: 5/90

Magic Chef [Residential Magic Chef W26HY5K Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2166		Not Available	CONTROL PANEL
2	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
3	25-7649	910187		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7435	33002917		Screw, No.10-16
"	25-7697	25-2219		Screw
"	25-7852			Speedclip, Rr Shld To End Cap
"	25-7851			Speedclip, End Cap To Top
"	53-0265			LH Endcap
"	53-0264			RH Endcap
"	25-7702			Speedclip, End Cap To Control Panel
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)

"	25-7760		Screw
5	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702		Speedclip, End Cap To Control Panel
6	35-0686-1	Not Available	CONTROL SHIELD
7	53-0268	21001460	Shield, Rear
"	25-7583	Not Available	PLASTIC NUT
"	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
8	35-2325	35-2789	Timer
9	25-0205	216412	Screw, Bracket To Timer
10	35-2254	12500058	Knob Ski
11	35-2187	12500058	Knob Ski
12	35-2198		Switch
13	33-6623	Not Available	BRACKET
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
14	35-0691-06	Not Available	LIGHT ASSY
"	35-0691-05	Not Available	LIGHT ASSY
"	35-2392-04	Not Available	LIGHT, SPIN SPEED
"	35-0691-01	Not Available	SIGNAL LIGHT
15	35-2163-03		Pushbutton
"	35-2163-02		Pushbutton
"	35-2163-04		Pushbutton
"	35-2163-05		Pushbutton
"	35-2163-06		Pushbutton
"	35-2163-07		Pushbutton
"	35-2163-08		Pushbutton
"	35-2163-01		Pushbutton
16	25-7882	Not Available	PALNUT
"	35-0685	Not Available	PB BEZEL
"	35-0690	Not Available	LENS
"	35-2164	Not Available	LENS
17	35-2257	7401P037-60	Block, Terminal
18	25-7649	910187	Screw
19	35-2145	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
20	35-2475	Not Available	SELECTOR KNOB
21	35-0688	Not Available	PB SWITCH
22	33-6621	Not Available	BRACKET, SWITCH
23	25-7712	Not Available	SCREW
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
24	33-8541	Not Available	SWITCH PAD
"	35-0872	Not Available	MANUAL, USE & CARE