


# Magic Chef WCZ1050W 02 - CONTROL PANEL

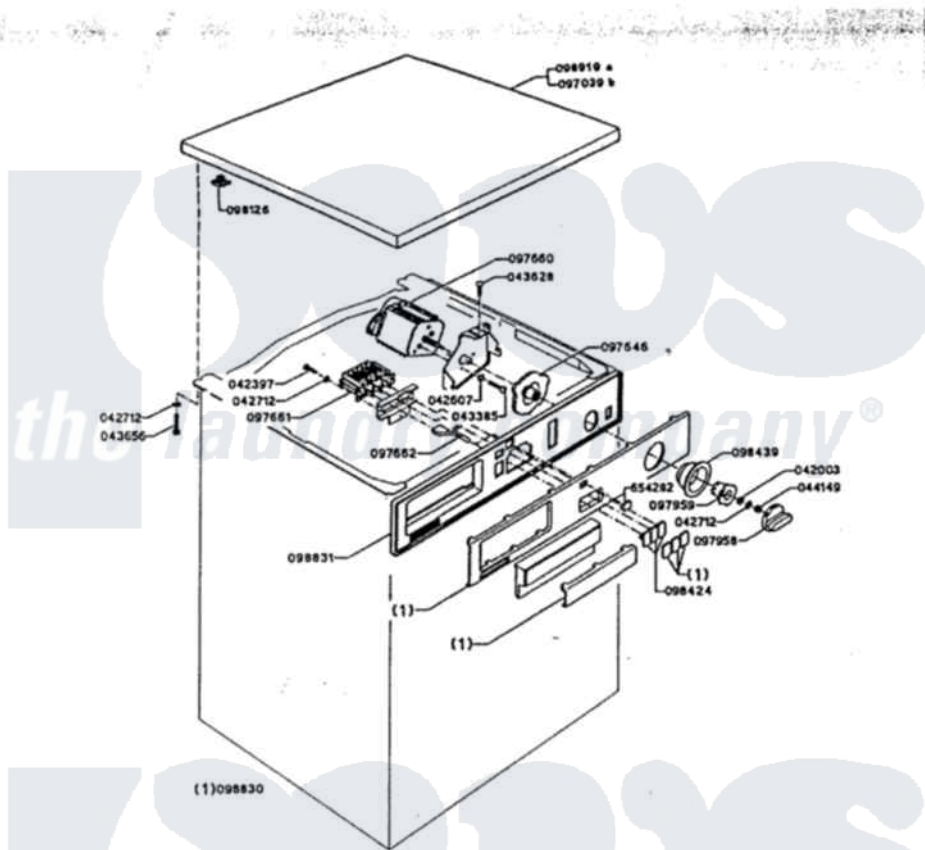

N/S 33-9845

MODELS COVERED:		From serial Number
a	b	
W10AA-1	W10AN-1	
WCZ1050AM	WCZ1050W	

FIRST PUBLICATION (4-84)

PM-1526-00

REVISION SHEET 0 (4-84)

A-2

Magic Chef [Residential Magic Chef WCZ1050W Washer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	042003		Not Available	FLAT WASHER
2	042397	<a href="#">8-1400-0-6</a>		Small Round Box
3	042607		Not Available	WASHER
4	042712		Not Available	LOCKWASHER
5	043385		Not Available	SCREW
6	043628		Not Available	SCREW
7	043656		Not Available	SCREW
8	044149		Not Available	NUT
9	097039		Not Available	TOP
10	097646		Not Available	CAM
11	097660		Not Available	TIMER
12	097661		Not Available	KEYBOARD
13	097662		Not Available	WARNING LIGHT
14	097958		Not Available	TIMR KNOB COVER
15	<a href="#">Y097959</a>			Timer Knob
16	098126		Not Available	LID BACK PIECE

17	098424	Not Available	PUSHBUTTON
18	098439	Not Available	PROGRAM INDEX
19	098830	Not Available	NORGE TRIM KIT
20	098831	Not Available	CONTROL PANEL
22	654282	Not Available	GLASS
"	33-9845	Not Available	NAMEPLATE

