


# Magic Chef YE14EA1 01 - CONTROL PANEL

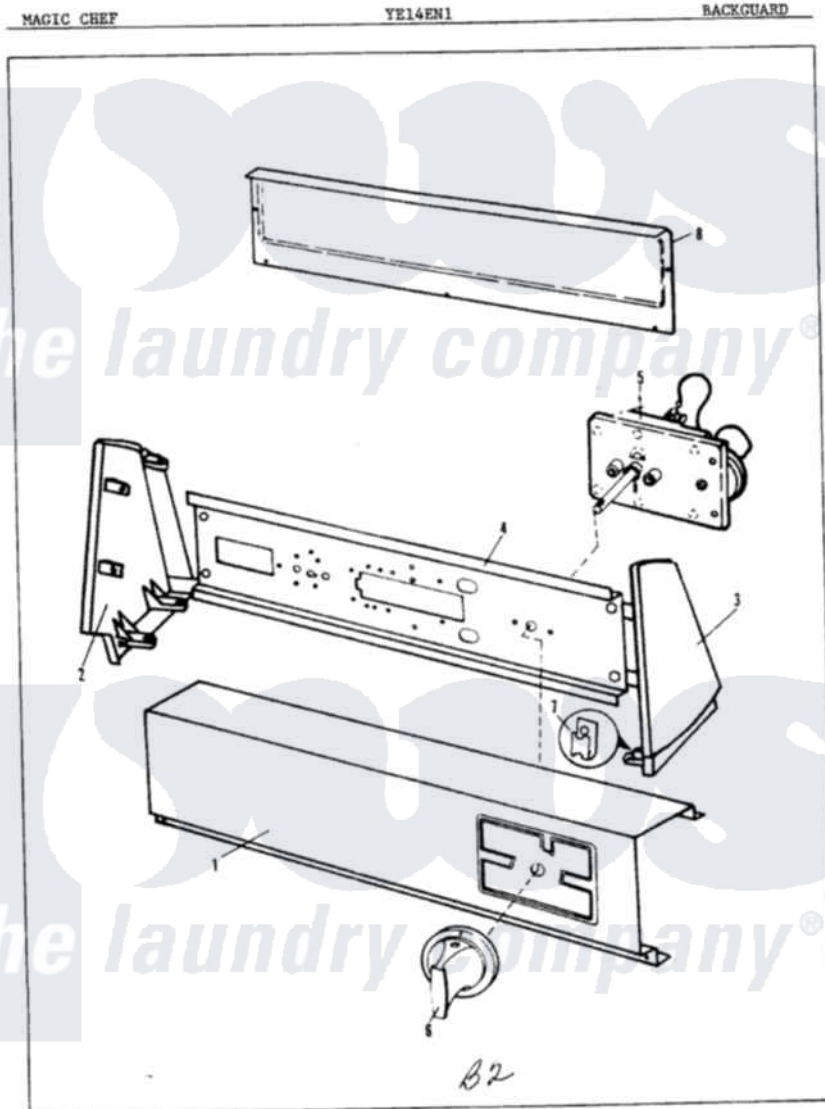

Magic Chef [Residential Magic Chef YE14EA1 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0827		Not Available	CONTROL PANEL
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
2	<a href="#">53-0265</a>			LH Endcap
3	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	<a href="#">53-0264</a>			RH Endcap
"	<a href="#">25-7760</a>			Screw
4	53-0365	<a href="#">53-1676</a>		Shield, Control
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
5	25-0289		Not Available	SCREW
"	<a href="#">53-0662</a>			Timer
"	53-0635		Not Available	TIMER MOTOR

"	53-0496	Not Available	TIMER
6	53-0684	Not Available	KNOB/SKIRT ASM
"	<a href="#">25-6044</a>		Set Screw
"	53-0494	Not Available	KNOB ASM
7	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
8	34-9487	Not Available	PLATE, REINFORCEMENT
"	<a href="#">25-3457</a>		Screw, Sems
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	<a href="#">33002917</a>	Screw, No.10-16
"	25-7697	<a href="#">25-2219</a>	Screw
"	<a href="#">25-7852</a>		Speedclip, Rr Shld To End Cap
"	53-0268	<a href="#">21001460</a>	Shield, Rear
"	<a href="#">25-7851</a>		Speedclip, End Cap To Top

