


Magic Chef YE14EA1 04 - HEATER

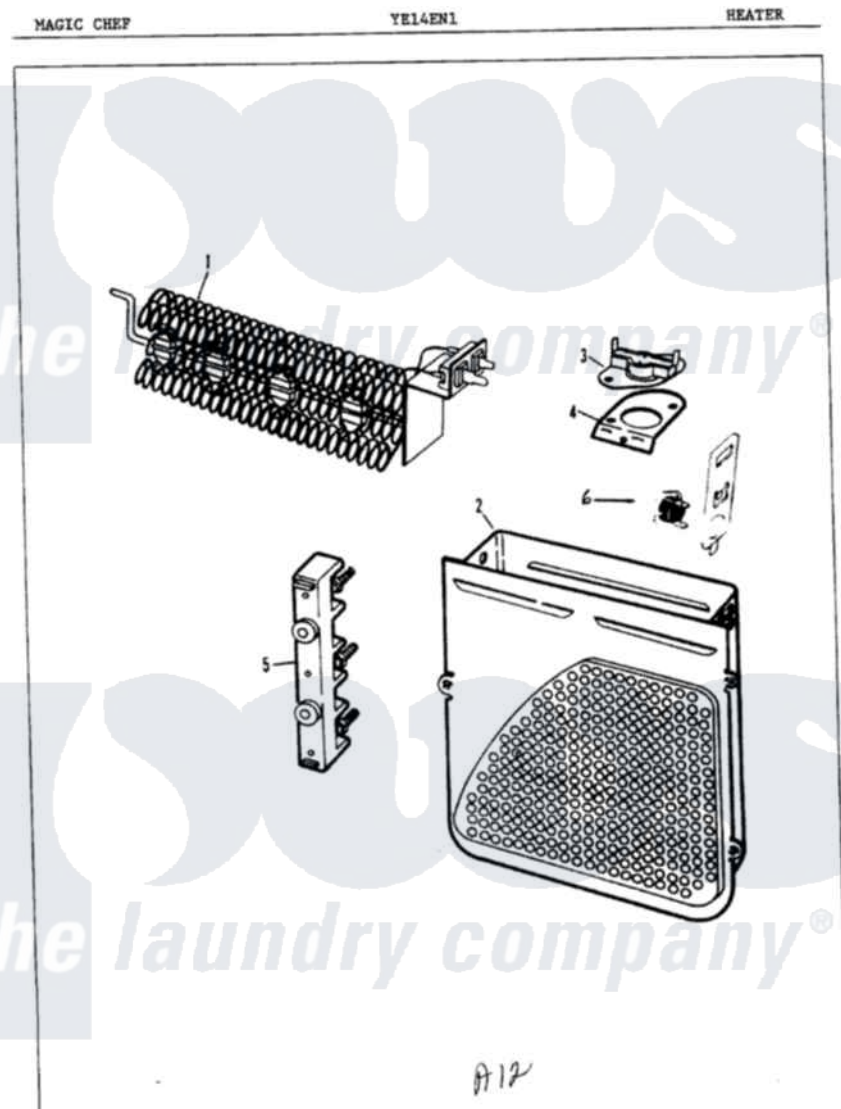

Magic Chef [Residential Magic Chef YE14EA1 Dryer Parts](#) Parts Diagram 04 - HEATER
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7863			Screw
"	53-0920	LA-1044		Element
"	53-0919	LA-1044		Element
2	25-7819	M0217225		Screw
"	53-0191			Heater Housing Assembly
"	53-1232			Heater Housing Assembly
3	53-0306	53-0771		Thermostat, Hi-Limit
"	53-0771			Thermostat, Hi-Limit
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE (PURCHASE LOCALLY)
4	53-0285			Bracket, Thermostat
"	53-1181			Bracket, Thermal Fuse
"	25-7741	W10116760		Screw
5	25-7803	3400074		Screw
"	25-6124		Not Available	NUT
"	25-3123		Not Available	WASHER, CUP

"	25-3122		Washer, Flat
"	25-0027	112432	Nut
"	53-0166	53-1518	Block, Terminal
6	53-1182		Fuse, Thermal

