


Magic Chef YE14EY1 01 - CONTROL PANEL

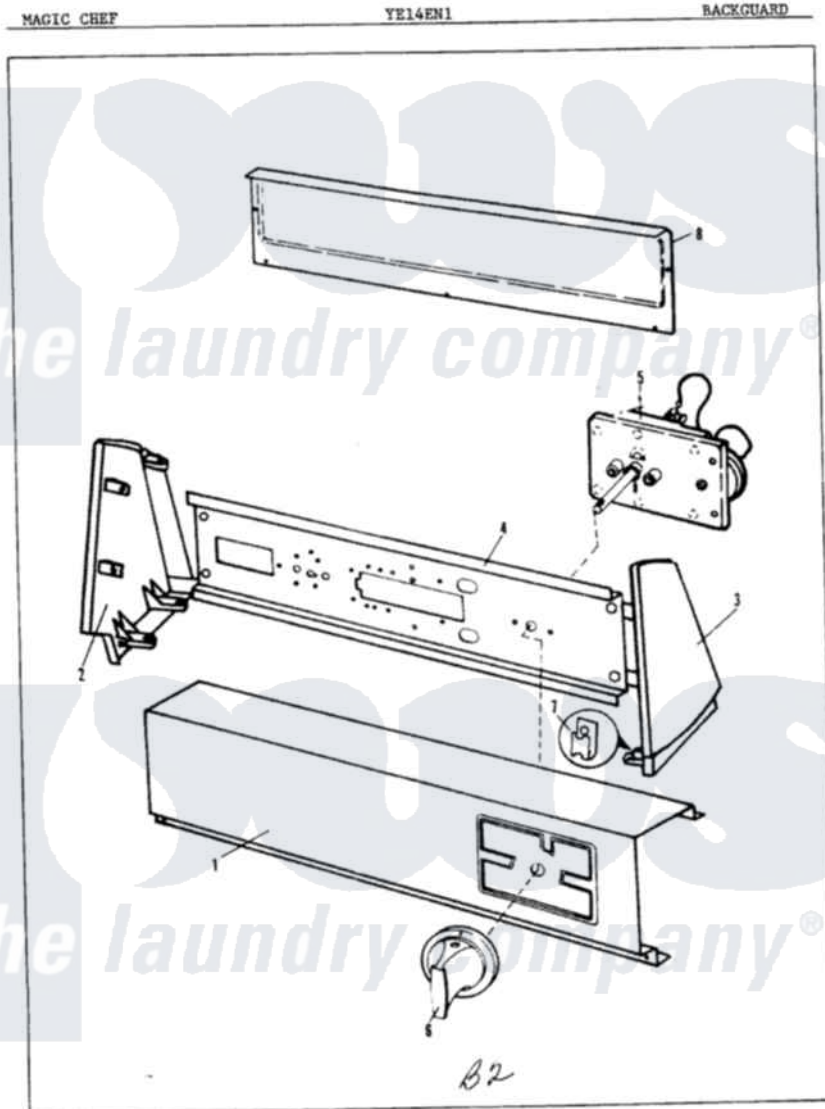

Magic Chef [Residential Magic Chef YE14EY1 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0827		Not Available	CONTROL PANEL
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
2	53-0265			LH Endcap
3	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0264			RH Endcap
"	25-7760			Screw
4	53-0365	53-1676		Shield, Control
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
5	25-0289		Not Available	SCREW
"	53-0662			Timer
"	53-0635		Not Available	TIMER MOTOR

"	53-0496	Not Available	TIMER
6	53-0684	Not Available	KNOB/SKIRT ASM
"	25-6044		Set Screw
"	53-0494	Not Available	KNOB ASM
7	25-7702		Speedclip, End Cap To Control Panel
8	34-9487	Not Available	PLATE, REINFORCEMENT
"	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	33002917	Screw, No.10-16
"	25-7697	25-2219	Screw
"	25-7852		Speedclip, Rr Shld To End Cap
"	53-0268	21001460	Shield, Rear
"	25-7851		Speedclip, End Cap To Top

