


Magic Chef YE14JY1 01 - CONTROL PANEL

SECTION: BACKGUARD

MODEL: YE14J(*)1

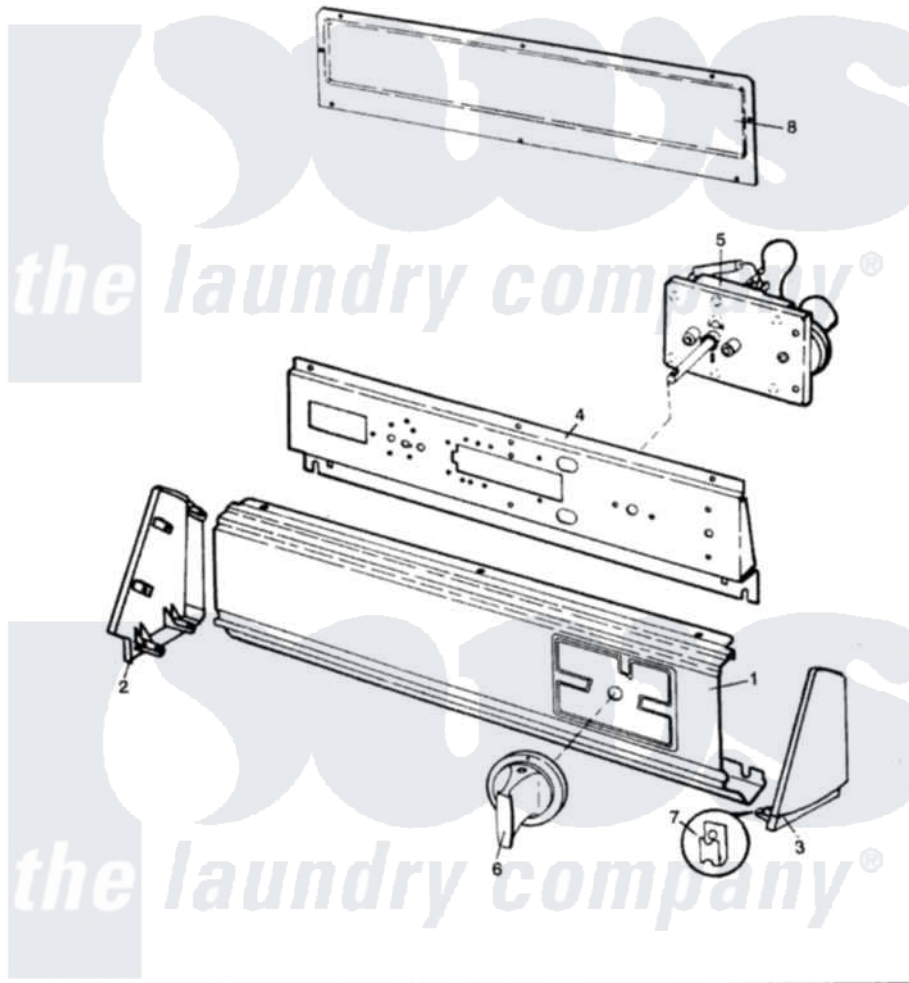

Issue Date: 6/90

Magic Chef [Residential Magic Chef YE14JY1 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	53-1612		Not Available	CONTROL PANEL
"	25-7649	910187		Screw
2	53-0265			LH Endcap
"	35-2488	21001452		Cap- End
"	53-0279		Not Available	TRIM, END CAP (RT)
3	25-7760			Screw
"	53-0264			RH Endcap
"	35-2487	21001451		Cap- End
"	53-0280		Not Available	TRIM, END CAP (LT)
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0365	53-1676		Shield, Control
"	25-7702			Speedclip, End Cap To Control Panel
"	53-1676			Shield, Control

5	53-0635	Not Available	TIMER MOTOR
"	53-1547		Timer
"	53-1803		Timer
"	25-0289	Not Available	SCREW
6	53-1529	31001219	Knob Ski
"	25-6044		Set Screw
7	25-7702		Speedclip, End Cap To Control Panel
8	25-3457		Screw, Sems
"	25-7435	33002917	Screw, No.10-16
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7697	25-2219	Screw
"	25-7851		Speedclip, End Cap To Top
"	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	34-9487	Not Available	PLATE, REINFORCEMENT
"	35-2688	21001460	Shield, Rear
"	53-0268	21001460	Shield, Rear
"	53-1620	Not Available	MANUAL, USE & CARE
"	25-7852		Speedclip, Rr Shld To End Cap

