


Magic Chef YE204KAC 01 - CONTROL PANEL

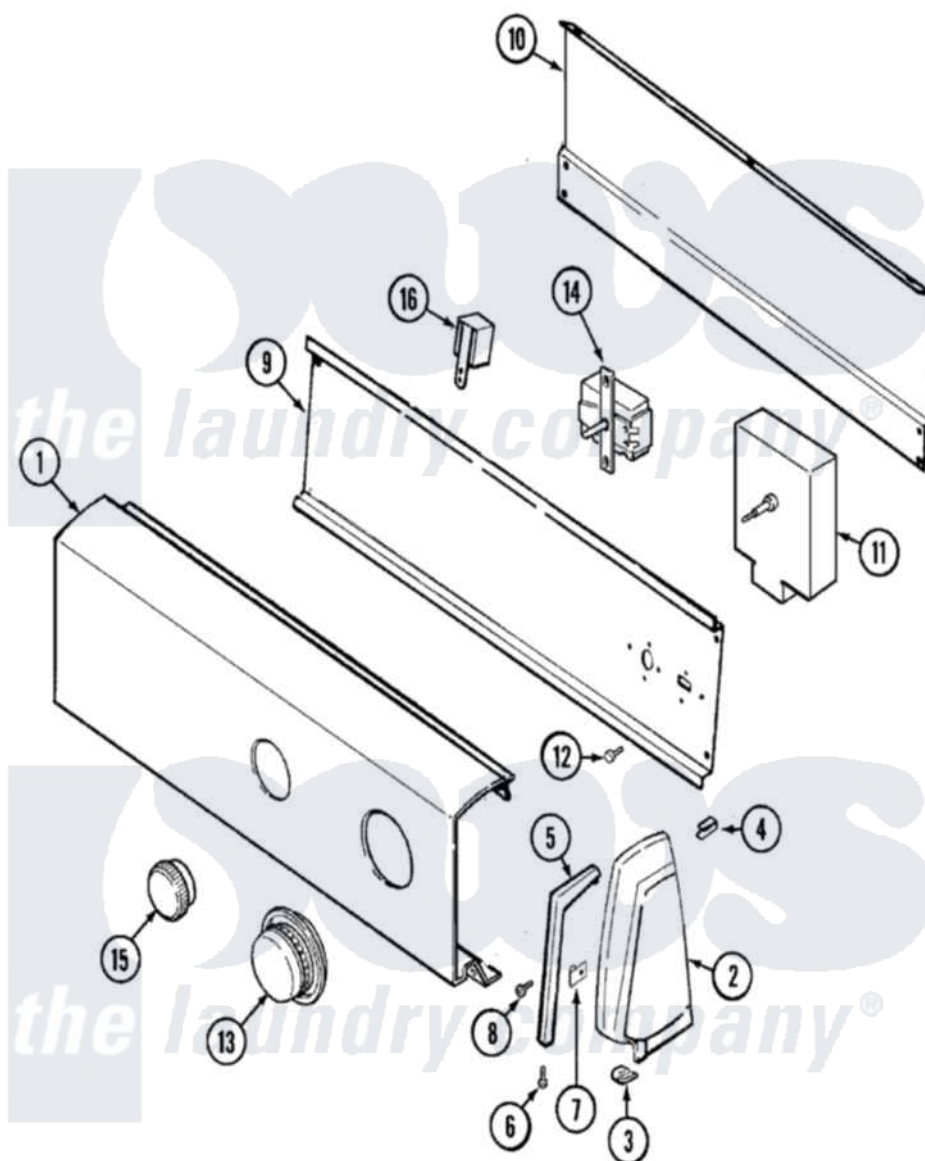

Magic Chef [Residential Magic Chef YE204KAC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2469		Not Available	PANEL, CONTROL
2	35-2487	21001451		Cap- End
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
"	35-2488	21001452		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
"	25-7435	33002917		Screw, No.10-16
5	53-0280		Not Available	TRIM, END CAP (LT)
"	53-0279		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7025	25-7748		Clip
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-1676		Shield, Control
"	53-2504	31001193	Pad, Shield
10	35-2688	21001460	Shield, Rear
11	63-6743	31001484	Resistor Assembly
"	53-1803		Timer
12	25-7435	33002917	Screw, No.10-16
13	53-2501	31001219	Knob Ski
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
14	53-0456		Switch, Selector
15	35-3960	21001283	Knob, Selector---Piq
16	53-1639		Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
17	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	31001050	Not Available	MANUAL, USE & CARE
"	31001020	Not Available	MANUAL, USE & CARE

