


Magic Chef YE204KW 02 - CONTROL PANEL

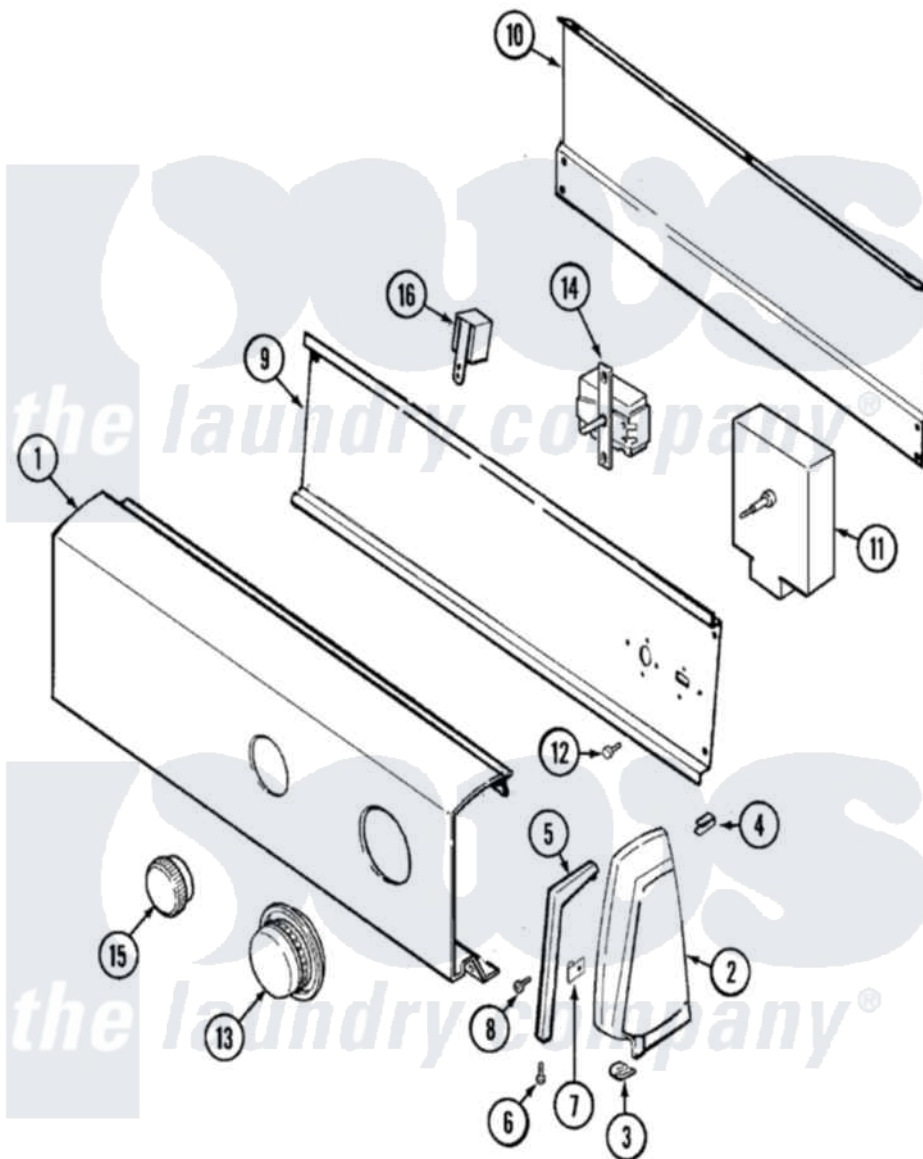

Magic Chef [Residential Magic Chef YE204KW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2469		Not Available	PANEL, CONTROL
2	35-2488	21001452		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
5	53-0280		Not Available	TRIM, END CAP (LT)
"	53-0279		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7025	25-7748		Clip
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-2504	31001193		Pad, Shield
"	53-1676			Shield, Control
10	35-2688	21001460		Shield, Rear
11	63-6743	31001484		Resistor Assembly
"	53-1803			Timer
12	25-7435	33002917		Screw, No.10-16
13	53-2501	31001219		Knob Ski
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
14	53-0456			Switch, Selector
15	35-3960	21001283		Knob, Selector---Piq
16	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1639			Buzzer Assembly
17	31001050		Not Available	MANUAL, USE & CARE
18	53-2485		Not Available	MANUAL, USE & CARE
19	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

