


Magic Chef YE205KA 01 - CONTROL PANEL

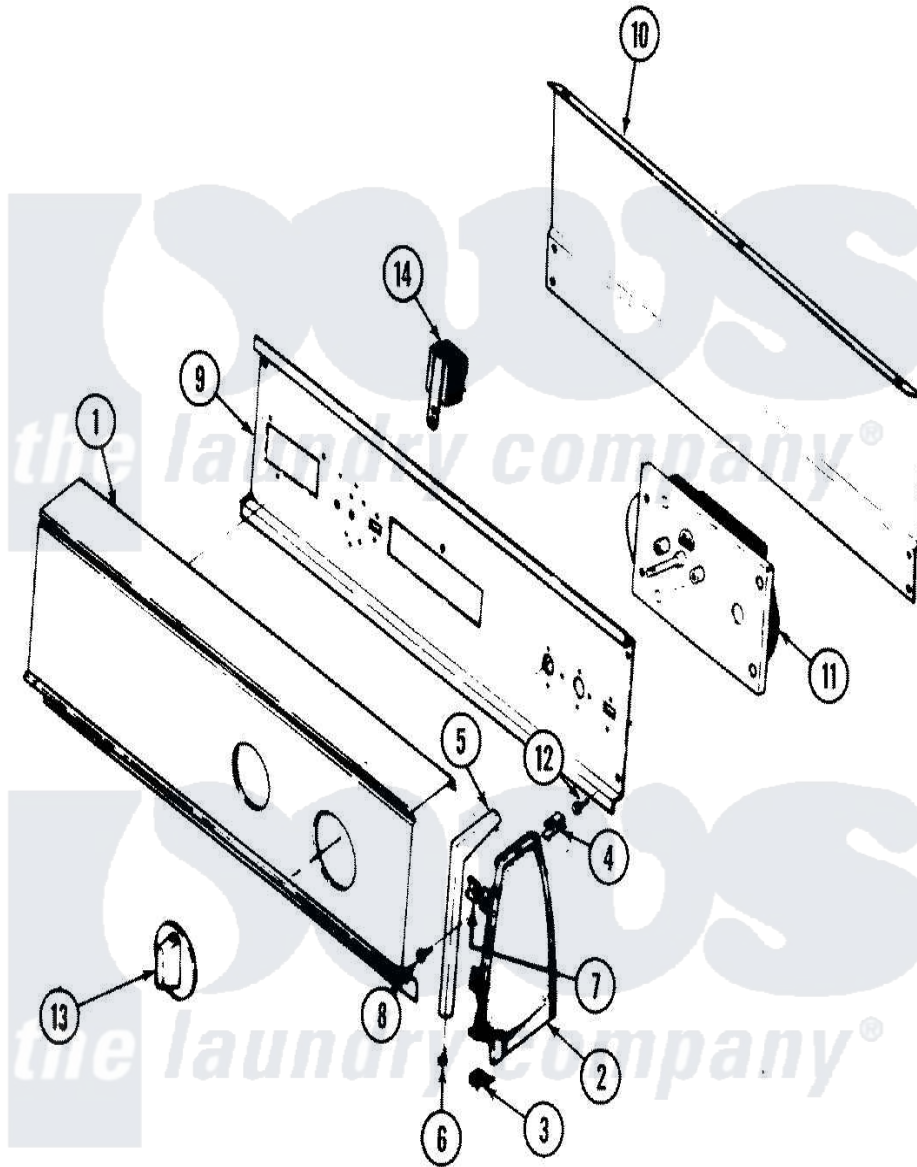

Magic Chef [Residential Magic Chef YE205KA Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2470		Not Available	PANEL, CONTROL
2	35-2487	21001451		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2488	21001452		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
5	53-2413			End Trim L.H.
"	53-2412			End Trim RH
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	31001128		Not Available	SHIELD, CONTROL

"	53-1676		Shield, Control
"	53-2504	31001193	Pad, Shield
10	35-2688	21001460	Shield, Rear
11	63-6743	31001484	Resistor Assembly
"	53-1758		Timer
12	25-7435	33002917	Screw, No.10-16
13	53-2501	31001219	Knob Ski
14	53-1639		Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
15	53-2486	Not Available	MANUAL, USE & CARE
"	31001050	Not Available	MANUAL, USE & CARE
16	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]

the laundry company[®]