


Magic Chef YE205KAC 01 - CONTROL PANEL

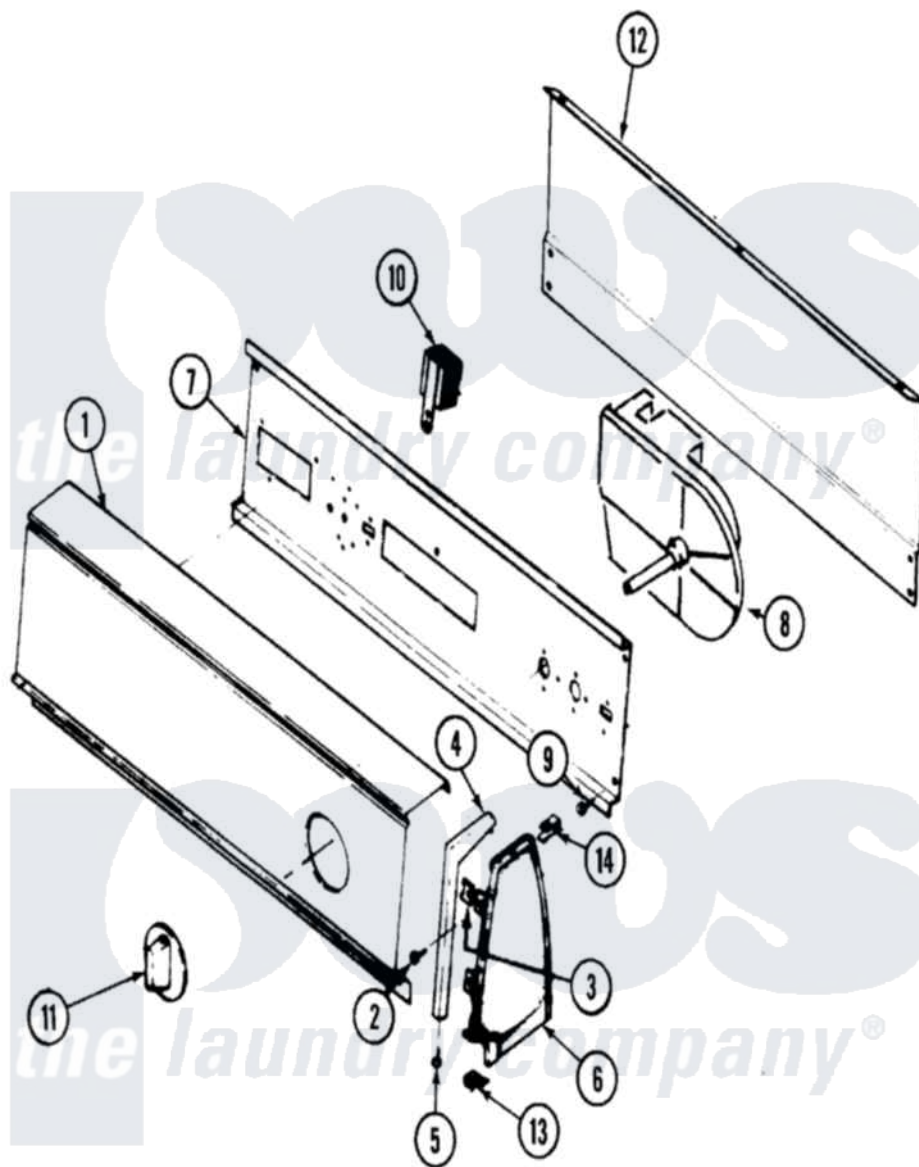

Magic Chef [Residential Magic Chef YE205KAC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2470		Not Available	PANEL, CONTROL
2	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-7025	25-7748		Clip
4	53-2413			End Trim L.H.
"	53-2412			End Trim RH
5	25-7760			Screw
6	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
7	31001128		Not Available	SHIELD, CONTROL
"	53-1676			Shield, Control
"	53-2504	31001193		Pad, Shield
8	53-1758			Timer
"	63-6743	31001484		Resistor Assembly

9	25-7435	33002917		Screw, No.10-16
10	53-1639			Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	53-2501	31001219		Knob Ski
12	35-2688	21001460		Shield, Rear
13	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
14	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
15	31001050		Not Available	MANUAL, USE & CARE
"	31001021		Not Available	MANUAL, USE & CARE
16	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]

the laundry company[®]