


# Magic Chef YE205KGV 02 - CONTROL PANEL (YE205KGV)

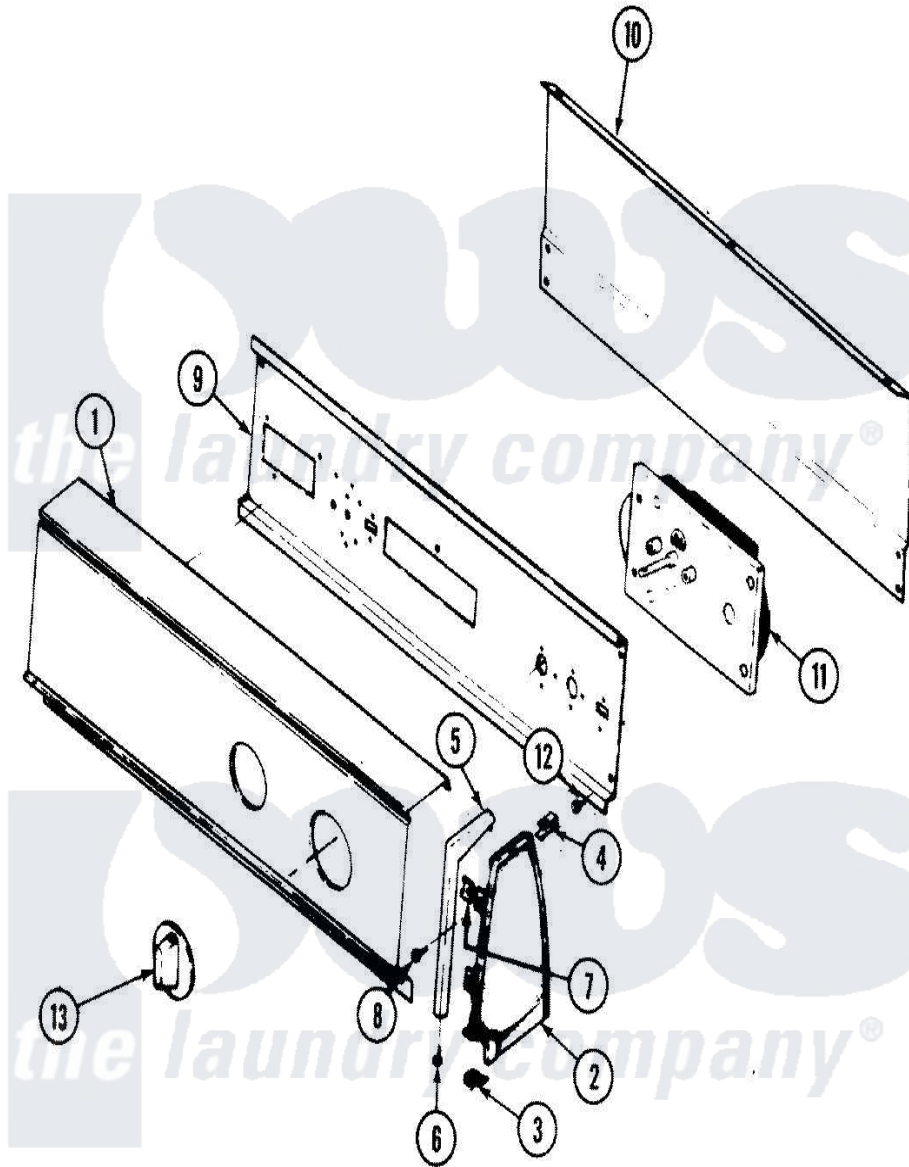

Magic Chef [Residential Magic Chef YE205KGV Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (YE205KGV)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001014		Not Available	PANEL, CONTROL
2	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	<a href="#">21001453</a>		Cap- End
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
5	31001055		Not Available	TRIM, ENDCAP (LT WHT)
"	53-2411		Not Available	END TRIM L.H. (WHT)
"	53-2410		Not Available	END TRIM R.H. (WHT)
"	31001054		Not Available	TRIM, ENDCAP (RT WHT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
8	25-3002	<a href="#">00767</a>		Screw, 8A X 3/8 HeX Washer

8	25-3092	<a href="#">30707</a>		Head Tapping
9	53-2504	<a href="#">31001193</a>		Pad, Shield
"	31001128		Not Available	SHIELD, CONTROL
"	<a href="#">53-1676</a>			Shield, Control
10	35-2688	<a href="#">21001460</a>		Shield, Rear
11	<a href="#">53-1812</a>			Timer
"	31001069	<a href="#">31001514</a>		Resistor Assembly
12	25-7435	<a href="#">33002917</a>		Screw, No.10-16
13	<a href="#">53-2502</a>			Knob And Skirt Assembly
14	31001050		Not Available	MANUAL, USE & CARE
"	31001022		Not Available	MANUAL, USE & CARE
15	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

*the laundry company*<sup>®</sup>

**PLWS**  
*the laundry company*<sup>®</sup>

**PLWS**  
*the laundry company*<sup>®</sup>