


Magic Chef YE205KKW 02 - CONTROL PANEL

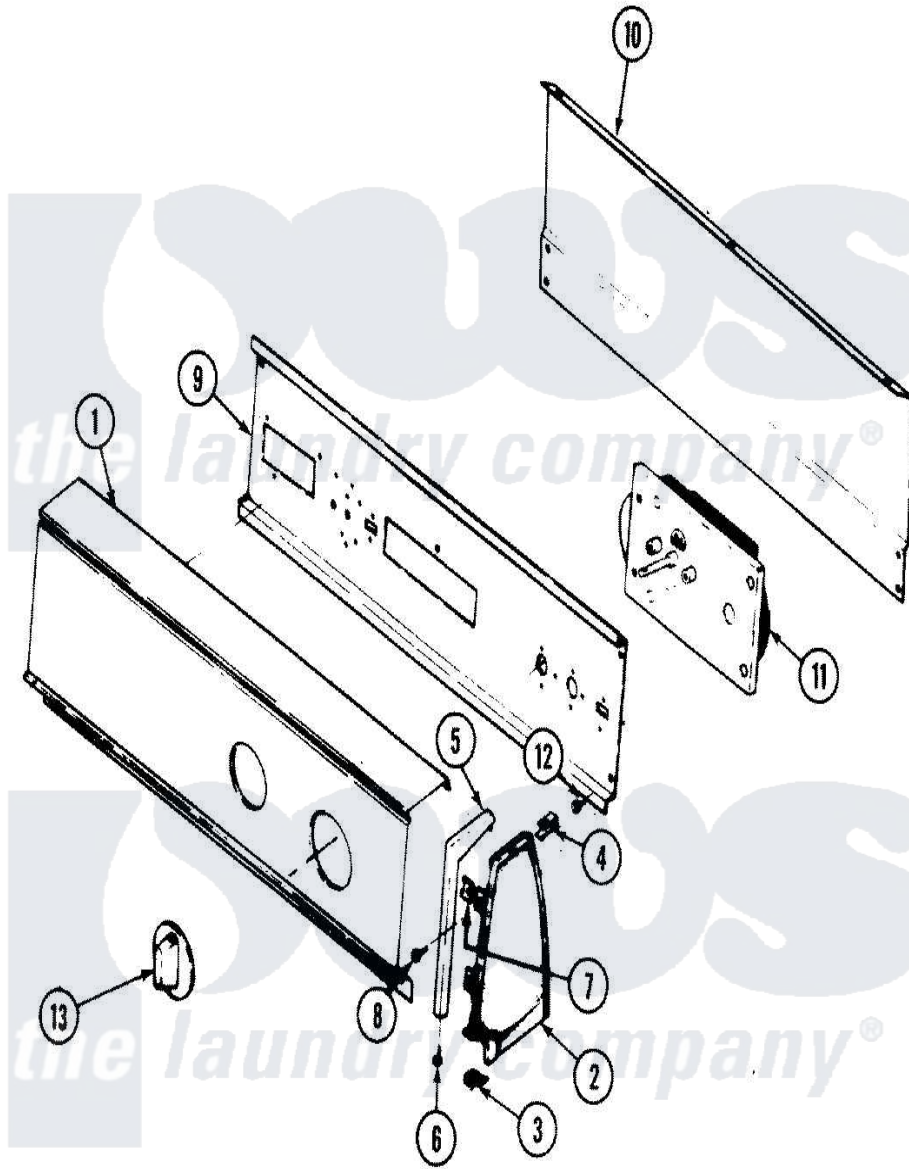

Magic Chef [Residential Magic Chef YE205KKW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001013			Panel, Control
2	35-2487	21001451		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2488	21001452		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
5	53-2413			End Trim L.H.
"	53-2412			End Trim RH
"	53-0280		Not Available	TRIM, END CAP (LT)
"	53-0279		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3002	00767		Screw, 8A X 3/8 HeX Washer

8	25-3032	30707		Head Tapping
9	31001128		Not Available	SHIELD, CONTROL
"	53-1676			Shield, Control
"	53-2504	31001193		Pad, Shield
10	35-2688	21001460		Shield, Rear
11	31001069	31001514		Resistor Assembly
"	53-1811			Timer
12	25-7435	33002917		Screw, No.10-16
13	53-2501	31001219		Knob Ski
14	31001050		Not Available	MANUAL, USE & CARE
"	31001022		Not Available	MANUAL, USE & CARE
15	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]