


# Magic Chef YE205KW 02 - CONTROL PANEL

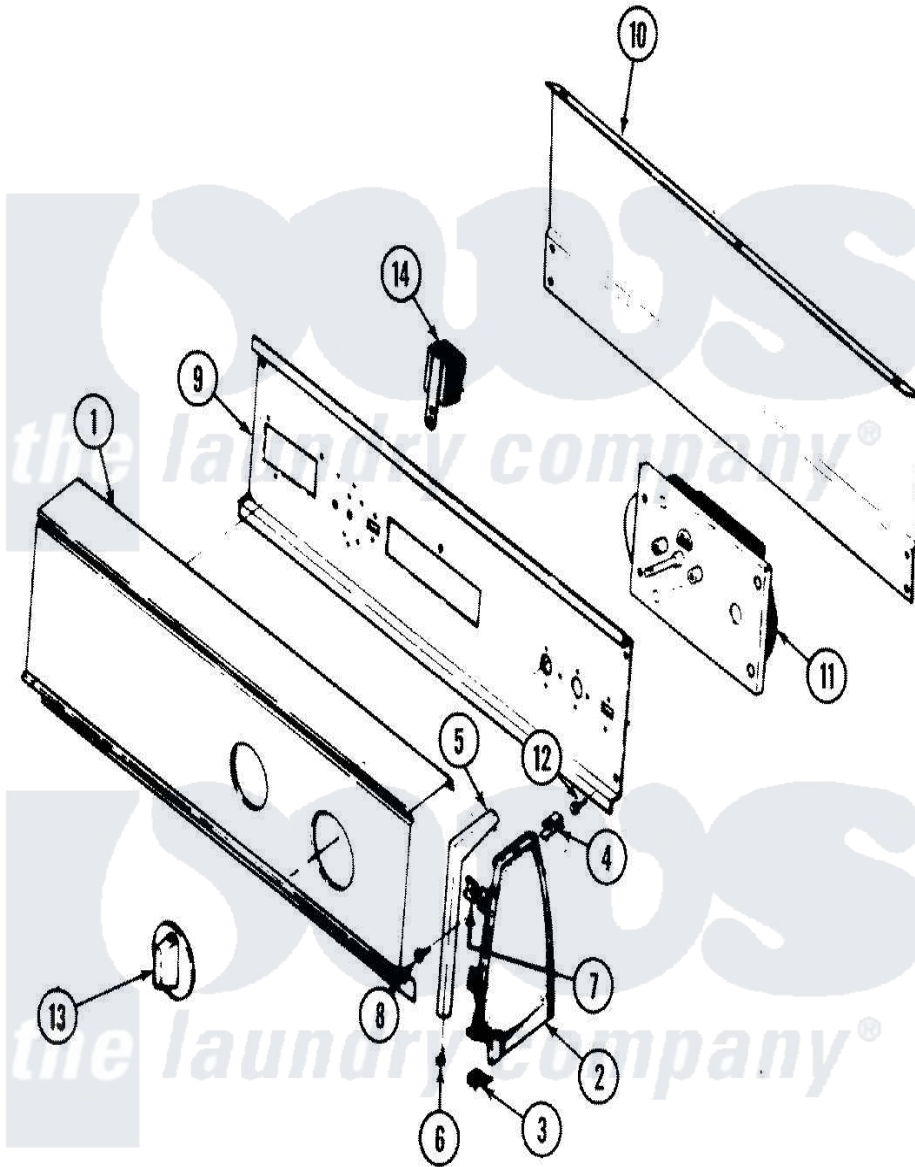

Magic Chef [Residential Magic Chef YE205KW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2470		Not Available	PANEL, CONTROL
2	35-2487	<a href="#">21001451</a>		Cap- End
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2488	<a href="#">21001452</a>		Cap- End
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
5	<a href="#">53-2413</a>			End Trim L.H.
"	<a href="#">53-2412</a>			End Trim RH
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	31001128		Not Available	SHIELD, CONTROL

"	<a href="#">53-1676</a>		Shield, Control
"	53-2504	<a href="#">31001193</a>	Pad, Shield
10	35-2688	<a href="#">21001460</a>	Shield, Rear
11	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	<a href="#">53-1758</a>		Timer
12	25-7435	<a href="#">33002917</a>	Screw, No.10-16
13	53-2501	<a href="#">31001219</a>	Knob Ski
14	<a href="#">53-1639</a>		Buzzer Assembly
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
15	53-2486	Not Available	MANUAL, USE & CARE
"	31001050	Not Available	MANUAL, USE & CARE
16	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>