


Magic Chef YE205KW 03 - DOOR

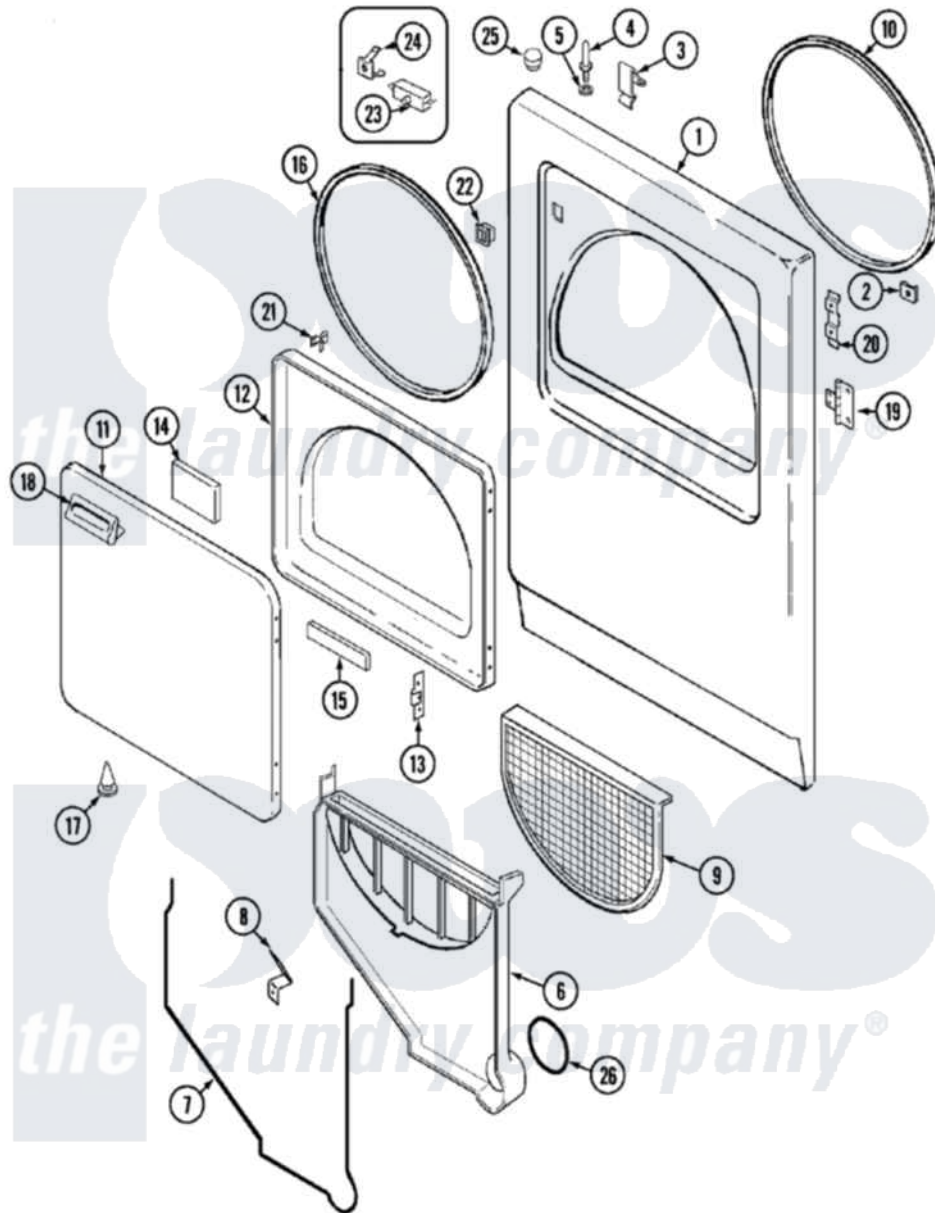

Magic Chef [Residential Magic Chef YE205KW Dryer Parts](#) Parts Diagram 03 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0726	31001771		Panel, Front
2	25-7820	489478		Screw, 8 X 1/2
"	25-7817		Not Available	CLIP, U-TYPE
3	25-7220			Clip, Cabinet Top
4	53-0643			Pin, Locator
5	53-0200			Sleeve, Locator Pin
"	25-0224	3400029		Nut, Adapter Plate
6	53-1299	12001324		Duct Kit, Collector
"	25-7810	415013-35		Screw
7	53-0204			Seal
8	53-0123			Clip
9	53-0918			Filter, Lint
10	53-1756	31001747		Seal Assembly
11	53-0154			Panel, Outer Door
12	53-0912		Not Available	PANEL, INNER DOOR (WHT)
13	53-0119			Clip, Hinge

14	53-1490		Door Pad
15	53-1491		Door Pad
16	53-0648	31001529	Seal, Door
"	25-7770	3196169	Screw, Element
17	25-3534	25-7889	Plug Button
18	53-0927		Handle, Door
"	53-0928	53-0927	Handle, Door
"	25-7810	415013-35	Screw
19	53-1492		Hinge, Dryer Door
"	25-7809		Screw, No.6-20 1/2 Flthd Torx
20	53-0121	Not Available	TWIN NUT
21	53-2364	LA-1003	Door Catch Kit
"	LA-1003		Door Catch Kit
22	25-7828	489483	Screw 10-32 X 1/2
"	53-0187	LA-1003	Door Catch Kit
23	53-0148		Switch, Door
"	LA-1005		Switch Kit
24	63-5990	31001319	Clip, Switch
25	33-2653		Bumper, Cabinet
26	53-0203	12001324	Duct Kit, Collector

