


Magic Chef YE206KA 01 - CONTROL PANEL

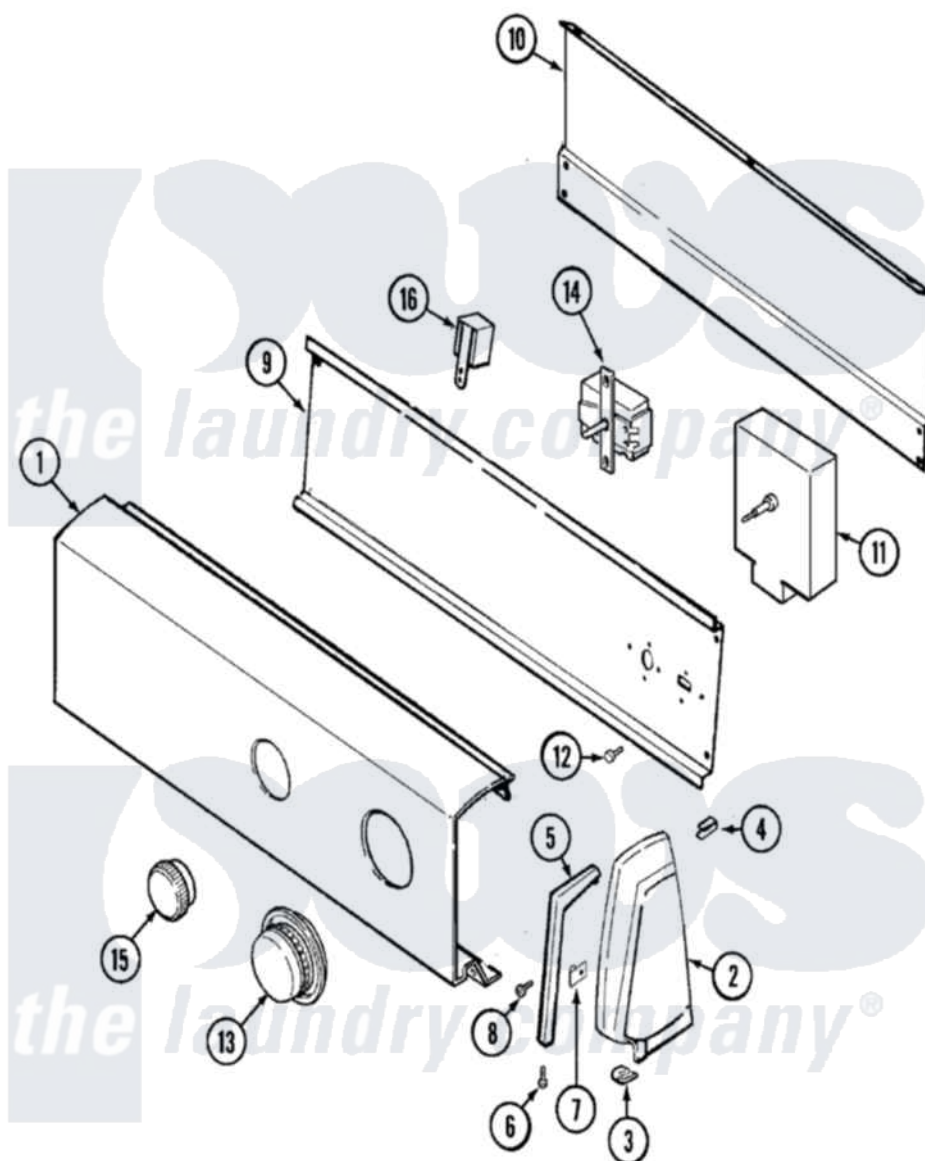

Magic Chef [Residential Magic Chef YE206KA Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|--------------------------|---------------|-------------------------------------|
| 1 | 53-2472 | | Not Available | PANEL, CONTROL |
| 2 | 35-2488 | 21001452 | | Cap- End |
| " | 25-7851 | | | Speedclip, End Cap To Top |
| " | 25-7702 | | | Speedclip, End Cap To Control Panel |
| " | 35-2487 | 21001451 | | Cap- End |
| " | 25-7697 | 25-2219 | | Screw |
| " | 25-7649 | 910187 | | Screw |
| 3 | 25-7851 | | | Speedclip, End Cap To Top |
| " | 25-7697 | 25-2219 | | Screw |
| 4 | 25-7852 | | | Speedclip, Rr Shld To End Cap |
| " | 25-7435 | 33002917 | | Screw, No.10-16 |
| 5 | 53-2412 | | | End Trim RH |
| " | 53-2413 | | | End Trim L.H. |
| 6 | 25-7760 | | | Screw |
| 7 | 25-7702 | | | Speedclip, End Cap To Control |

| | | | |
|----|--------------------------|--------------------------|---|
| | 25-1192 | | Panel |
| 8 | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 9 | 53-1676 | | Shield, Control |
| " | 31001128 | Not Available | SHIELD, CONTROL |
| " | 53-2504 | 31001193 | Pad, Shield |
| 10 | 35-2688 | 21001460 | Shield, Rear |
| 11 | 63-6743 | 31001484 | Resistor Assembly |
| " | 53-1758 | | Timer |
| 12 | 25-0205 | 216412 | Screw, Bracket To Timer |
| 13 | 53-2501 | 31001219 | Knob Ski |
| 14 | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| " | 53-0344 | Not Available | SWITCH, TEMPERATURE |
| " | 31001129 | | Switch, Temperature |
| 15 | 35-3960 | 21001283 | Knob, Selector----Piq |
| 16 | 53-1639 | | Buzzer Assembly |
| " | 25-3092 | 90767 | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 17 | 16000329 | Not Available | GUIDE, QUICK REF. - MAGIC CHEF |
| " | 31001050 | Not Available | MANUAL, USE & CARE |
| " | 31001002 | Not Available | MANUAL, USE & CARE |