


Magic Chef YE206KW 02 - CONTROL PANEL

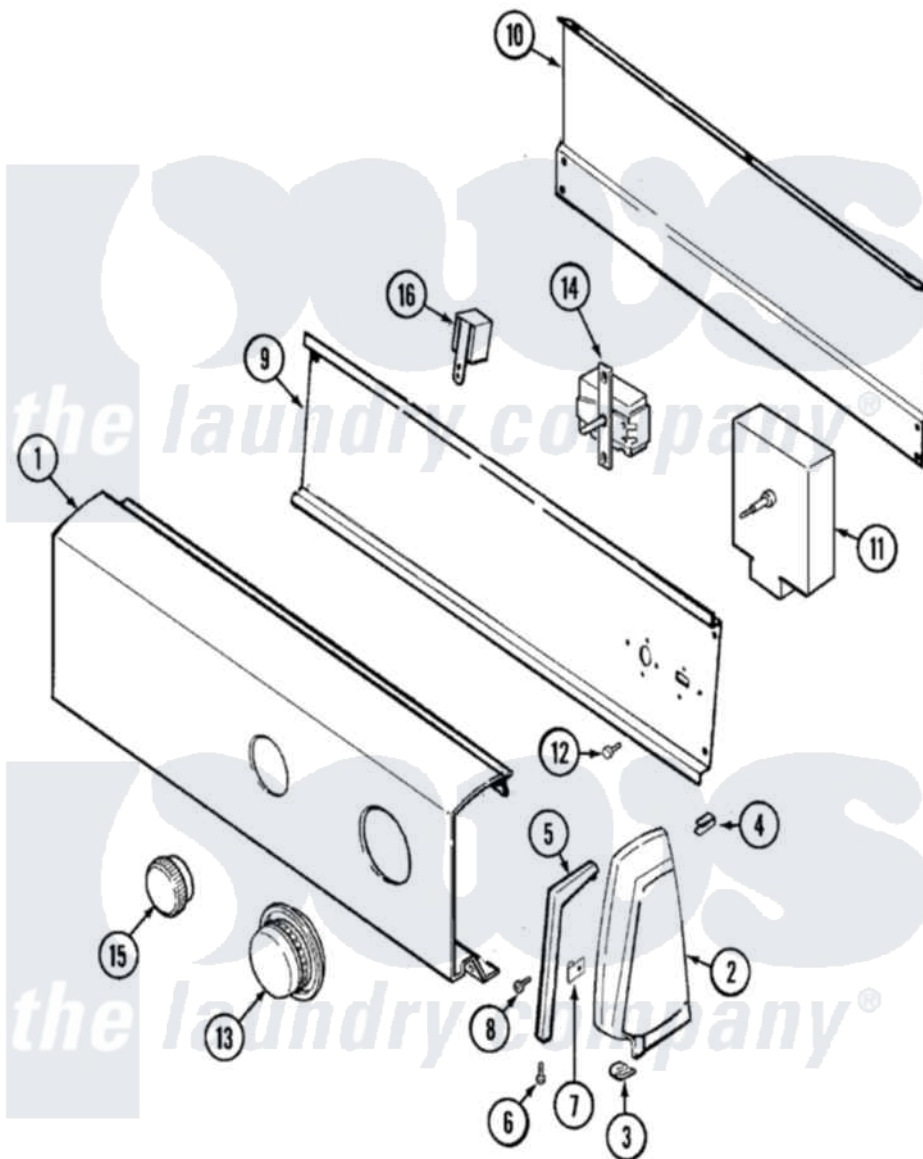

Magic Chef [Residential Magic Chef YE206KW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2472		Not Available	PANEL, CONTROL
2	35-2488	21001452		Cap- End
"	25-7851			Speedclip, End Cap To Top
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	25-7697	25-2219		Screw
"	25-7649	910187		Screw
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
5	53-2412			End Trim RH
"	53-2413			End Trim L.H.
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

	45-1192		Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676		Shield, Control
"	31001128	Not Available	SHIELD, CONTROL
"	53-2504	31001193	Pad, Shield
10	35-2688	21001460	Shield, Rear
11	63-6743	31001484	Resistor Assembly
"	53-1758		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	53-2501	31001219	Knob Ski
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0344	Not Available	SWITCH, TEMPERATURE
"	31001129		Switch, Temperature
15	35-3960	21001283	Knob, Selector---Piq
16	53-1639		Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
17	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	31001050	Not Available	MANUAL, USE & CARE
"	31001002	Not Available	MANUAL, USE & CARE

