


# Magic Chef YE208KW 01 - CABINET

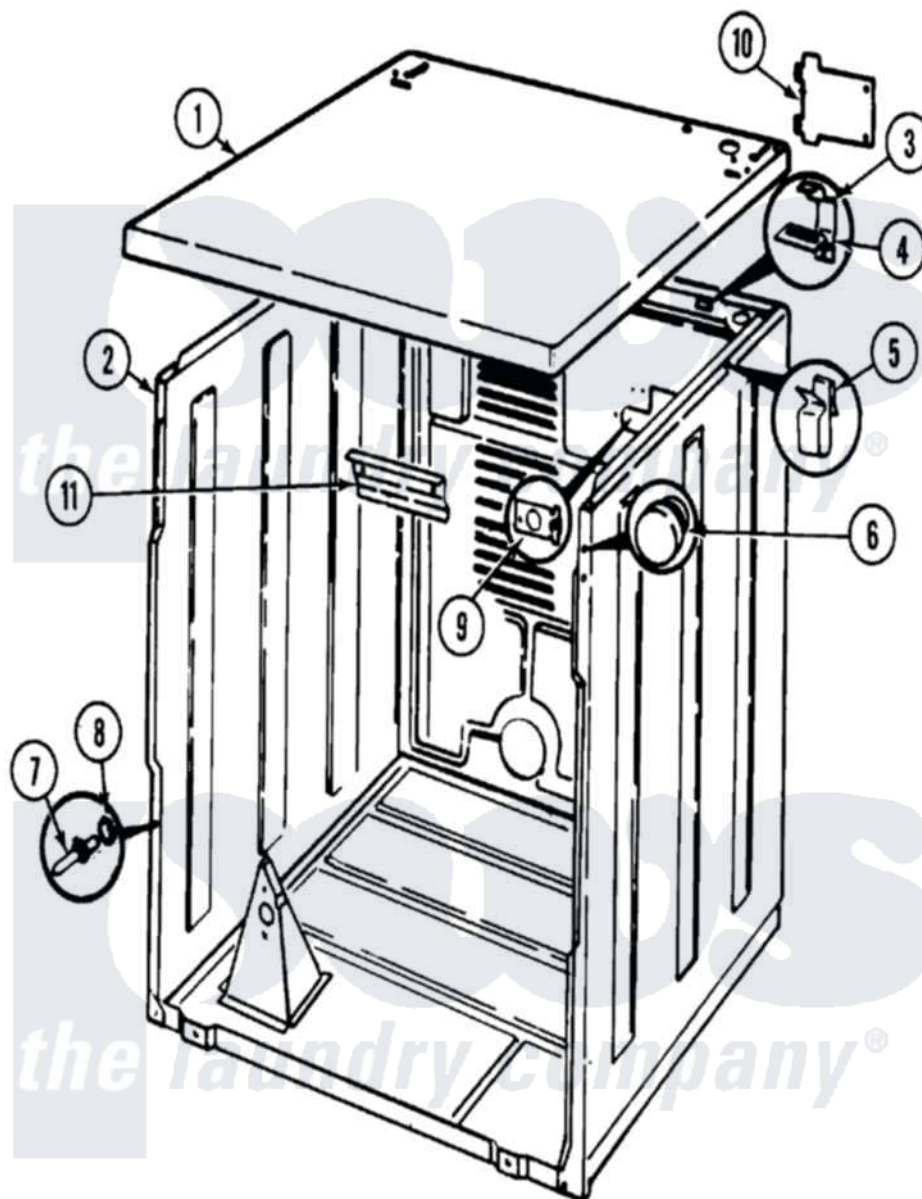

Magic Chef [Residential Magic Chef YE208KW Dryer Parts](#) Parts Diagram 01 - CABINET  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2435		Not Available	TOP, CABINET
2	53-2559	<a href="#">31001714</a>		Cabinet And Base Assembly
"	53-2147	<a href="#">31001714</a>		Cabinet And Base Assembly
3	<a href="#">63-5712</a>			Hinge, Cabinet Top
4	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">33-0930</a>			Pad, Top Hinge
5	<a href="#">25-3034</a>			Clip, Wiring
6	<a href="#">33-2653</a>			Bumper, Cabinet
7	<a href="#">53-0643</a>			Pin, Locator
8	<a href="#">53-0200</a>			Sleeve, Locator Pin
"	25-0224	<a href="#">3400029</a>		Nut, Adapter Plate
9	53-0135		Not Available	SUPPORT, POWER CORD
"	25-7828	<a href="#">489483</a>		Screw 10-32 X 1/2
10	<a href="#">53-0284</a>			Cover, Terminal
"	25-7857	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

11

[25-3457](#)

Screw, Sems

"

[53-0133](#)

Shield, Heat

"

[53-2350](#)

Shield, Heat

"

[53-0133](#)

Shield, Heat

