


# Magic Chef YE209KA 02 - CONTROL PANEL

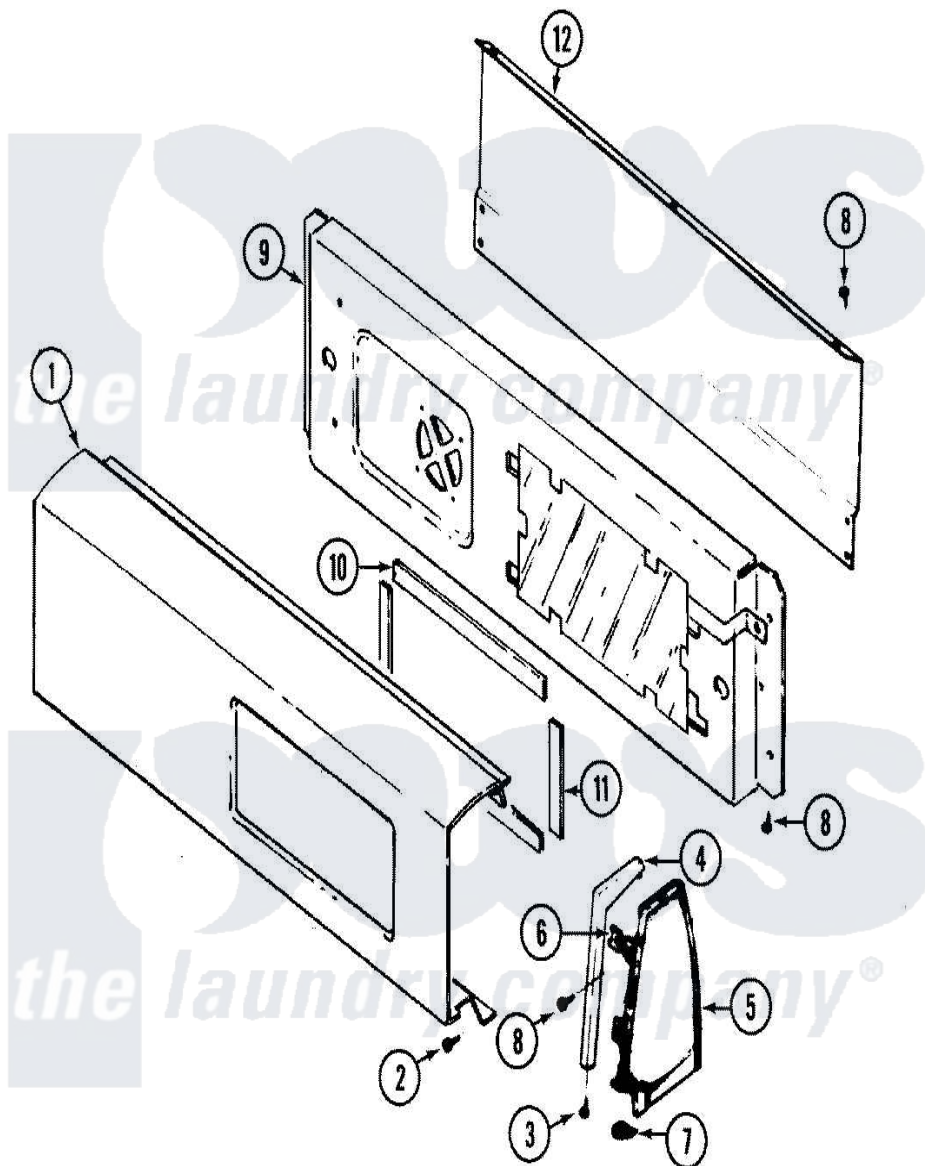

Magic Chef [Residential Magic Chef YE209KA Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3852		Not Available	CONTROL PANEL
2	<a href="#">25-7793</a>			Screw
3	<a href="#">25-7760</a>			Screw
4	<a href="#">53-2412</a>			End Trim RH
"	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	<a href="#">53-2413</a>			End Trim L.H.
5	35-2488	<a href="#">21001452</a>		Cap- End
"	35-2487	<a href="#">21001451</a>		Cap- End
6	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
7	<a href="#">25-7851</a>			Speedclip, End Cap To Top
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	<a href="#">53-2238</a>			Control Shield And Electronic As
"	<a href="#">35-3540</a>			Speaker Assembly

10	<a href="#">35-3450</a>		Seal, Panel Long
11	<a href="#">35-3453</a>		Seal, Panel Short
12	53-1040	Not Available	MANUAL, USE & CARE
"	<a href="#">25-3457</a>		Screw, Sems
"	53-2405	Not Available	MANUAL, USE & CARE
"	35-2688	<a href="#">21001460</a>	Shield, Rear
13	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

