


Magic Chef YE20EA2 01 - CONTROL PANEL

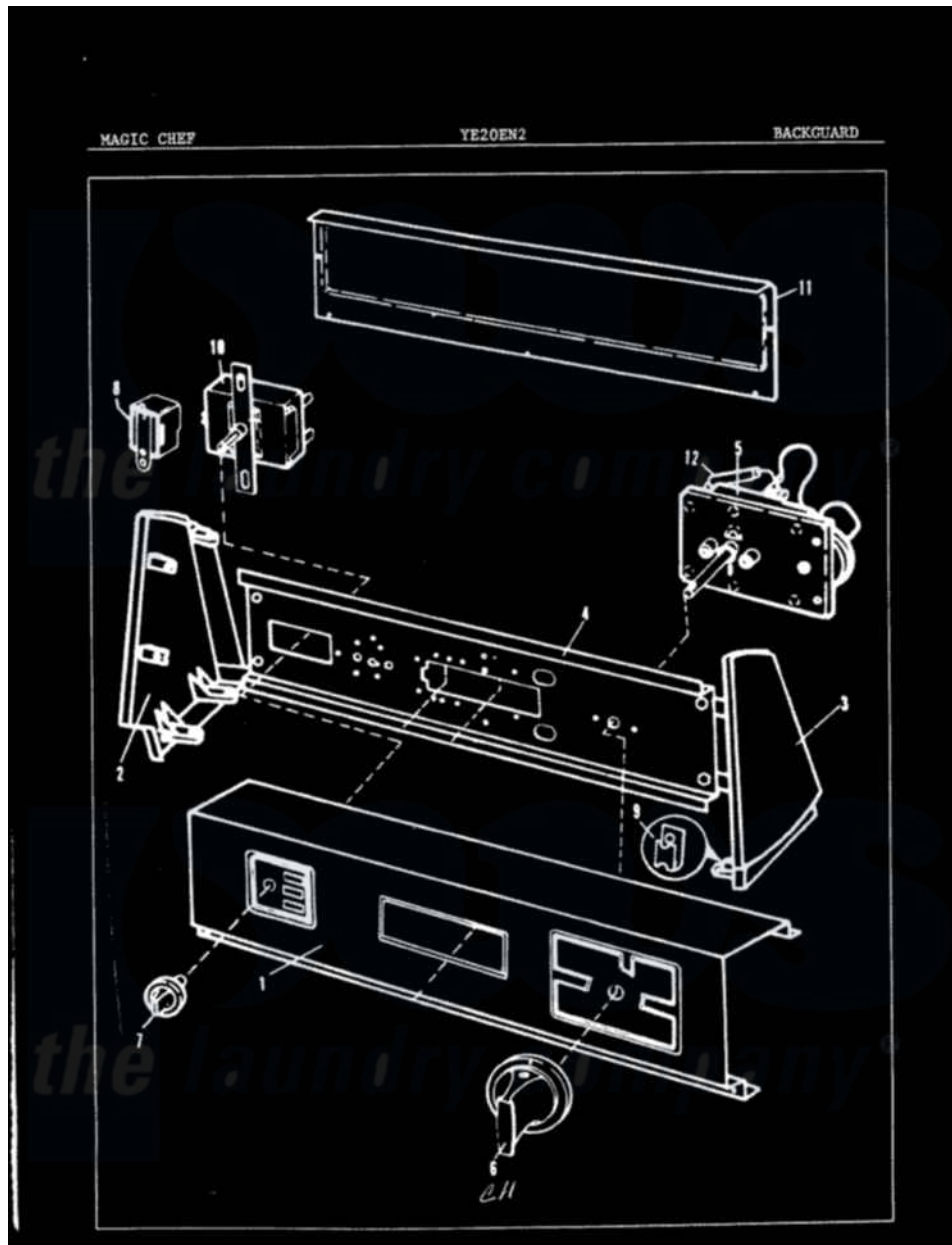

Magic Chef [Residential Magic Chef YE20EA2 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0830		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
3	25-7760			Screw
"	53-0264			RH Endcap
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0365	53-1676		Shield, Control
"	25-7702			Speedclip, End Cap To Control Panel
5	25-0289		Not Available	SCREW
"	53-0497	LA-1026		Timer Kit
"	63-6752		Not Available	TIMER MOTOR

"	53-0657		Timer
6	53-0495	Not Available	TIMER KNOB
"	53-0653	31001219	Knob Ski
"	25-6044		Set Screw
7	35-0168	Not Available	SELECTOR KNOB
8	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-7702		Speedclip, End Cap To Control Panel
10	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0344	Not Available	SWITCH, TEMPERATURE
11	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	33002917	Screw, No.10-16
"	25-7697	25-2219	Screw
"	25-7851		Speedclip, End Cap To Top
"	34-9487	Not Available	PLATE, REINFORCEMENT
"	53-0268	21001460	Shield, Rear
"	25-7852		Speedclip, Rr Shld To End Cap
12	63-6743	31001484	Resistor Assembly

