


Magic Chef YE20EY1 03 - BACKGUARD

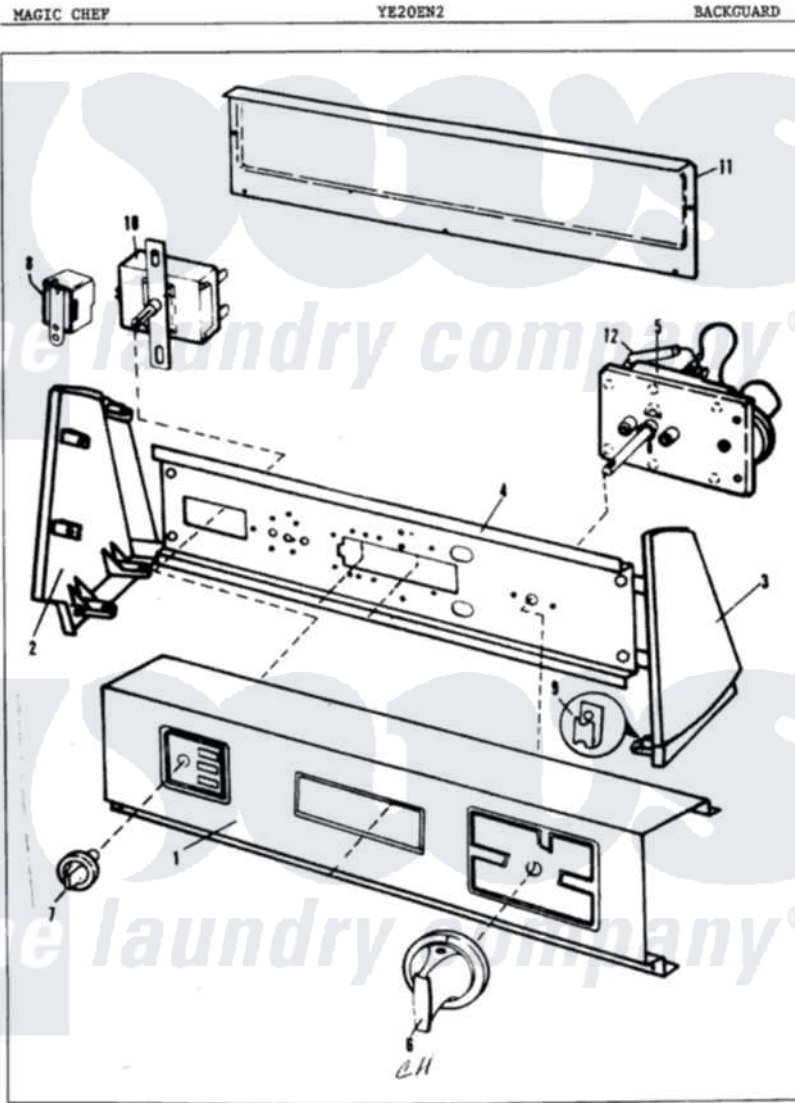

Magic Chef [Residential Magic Chef YE20EY1 Dryer Parts](#) Parts Diagram 03 - BACKGUARD
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0829		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
3	25-7760			Screw
"	53-0264			RH Endcap
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0365	53-1676		Shield, Control
5	25-0289		Not Available	SCREW
"	53-0662			Timer
"	53-0635		Not Available	TIMER MOTOR

"	53-0496		Not Available	TIMER
6	25-6044			Set Screw
"	53-0495		Not Available	TIMER KNOB
"	53-0653	31001219		Knob Ski
7	35-0168		Not Available	SELECTOR KNOB
8	25-7702			Speedclip, End Cap To Control Panel
9	53-0456			Switch, Selector
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
10	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	25-7435	33002917		Screw, No.10-16
"	25-7697	25-2219		Screw
"	25-7852			Speedclip, Rr Shld To End Cap
"	53-0268	21001460		Shield, Rear
"	25-7851			Speedclip, End Cap To Top

