


# Magic Chef YE20EY4 03 - HEATER

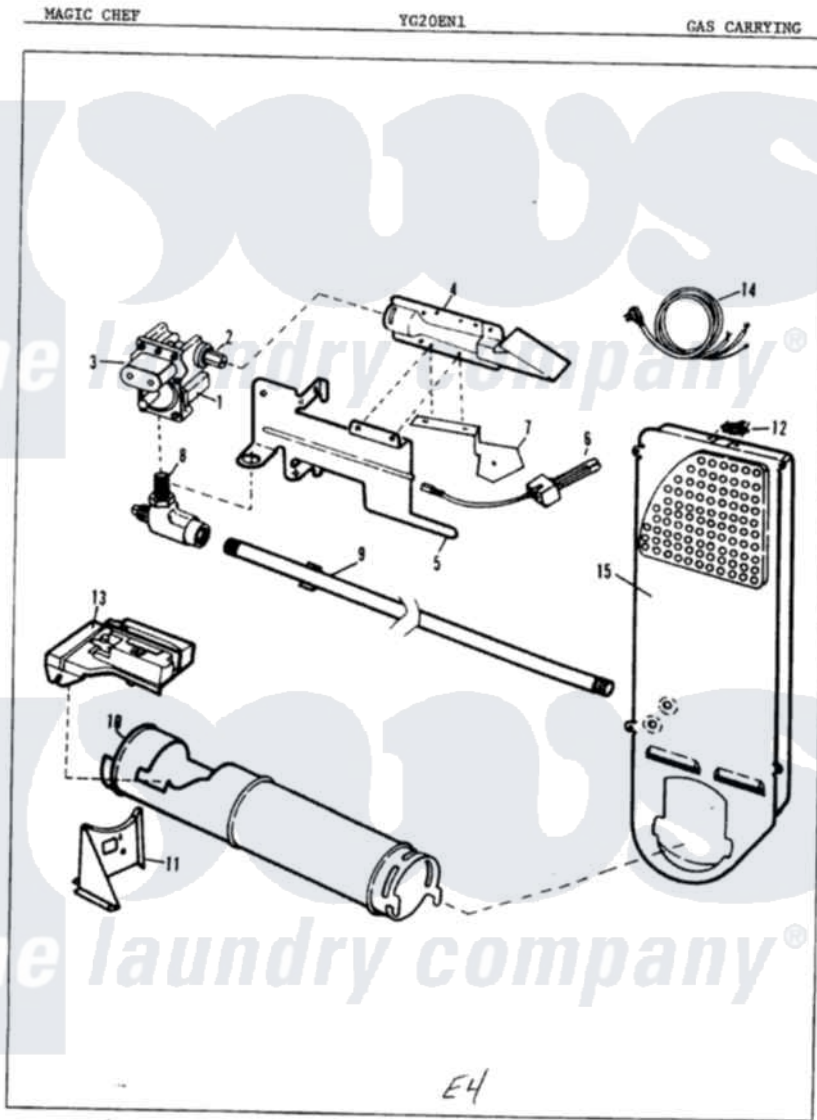

Magic Chef [Residential Magic Chef YE20EY4 Dryer Parts](#) Parts Diagram 03 - HEATER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7863</a>			Screw
"	53-0919	<a href="#">LA-1044</a>		Element
"	53-0920	<a href="#">LA-1044</a>		Element
2	25-7819	<a href="#">M0217225</a>		Screw
"	<a href="#">53-0191</a>			Heater Housing Assembly
3	53-0306	<a href="#">53-0771</a>		Thermostat, Hi-Limit
"	<a href="#">53-0771</a>			Thermostat, Hi-Limit
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE (PURCHASE LOCALLY)
4	<a href="#">53-0285</a>			Bracket, Thermostat
"	25-7741	<a href="#">W10116760</a>		Screw
5	53-0166	<a href="#">53-1518</a>		Block, Terminal
"	25-6124		Not Available	NUT
"	25-3123		Not Available	WASHER, CUP
"	<a href="#">25-3122</a>			Washer, Flat
"	25-0027	<a href="#">112432</a>		Nut

