


Magic Chef YE20FA3 01 - CONTROL PANEL

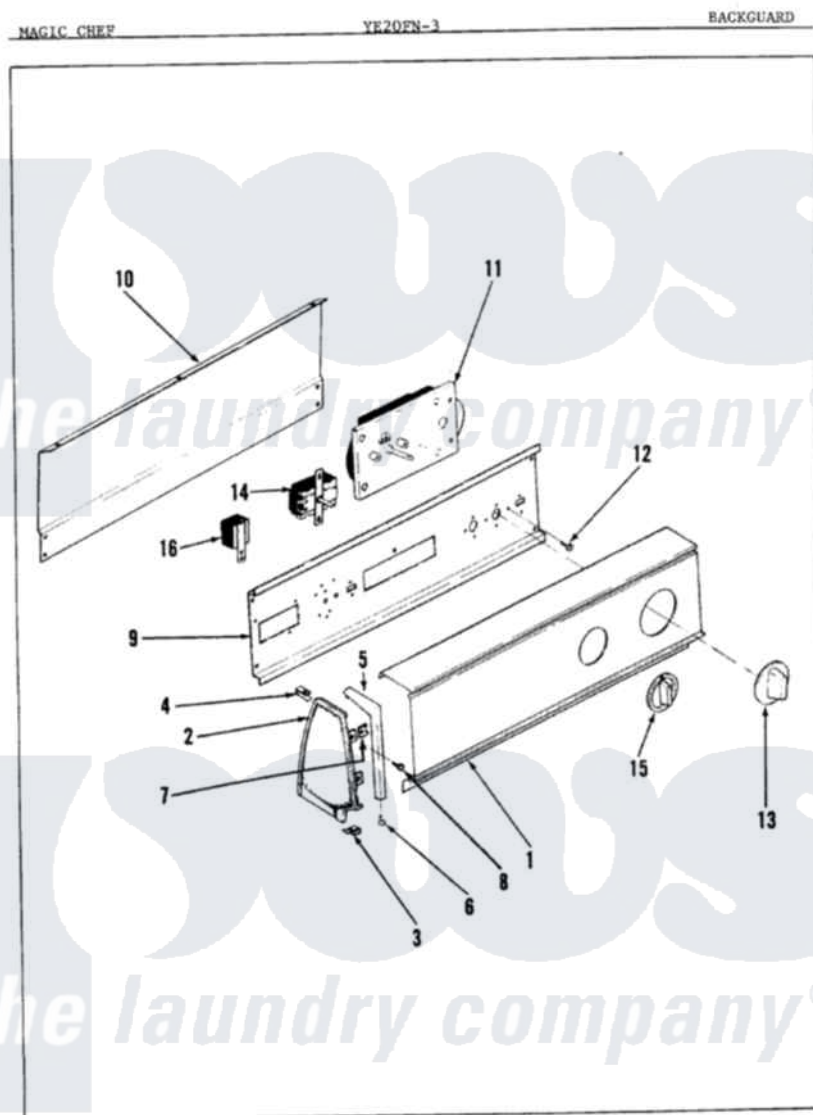

Magic Chef [Residential Magic Chef YE20FA3 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1067		Not Available	CONTROL PANEL
2	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7851			Speedclip, End Cap To Top
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

7	25-1192		Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	53-1676	Shield, Control
10	53-0268	21001460	Shield, Rear
11	53-0657		Timer
"	63-6743	31001484	Resistor Assembly
"	63-6752		Not Available
			TIMER MOTOR
12	25-0205	216412	Screw, Bracket To Timer
13	53-0653	31001219	Knob Ski
14	53-0344		Not Available
			SWITCH, TEMPERATURE
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-0168		Not Available
			SELECTOR KNOB
16	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

