


# Magic Chef YE20FN1 01 - CONTROL PANEL

MAGIC CHEF YE20FN-1 BACKGUARD

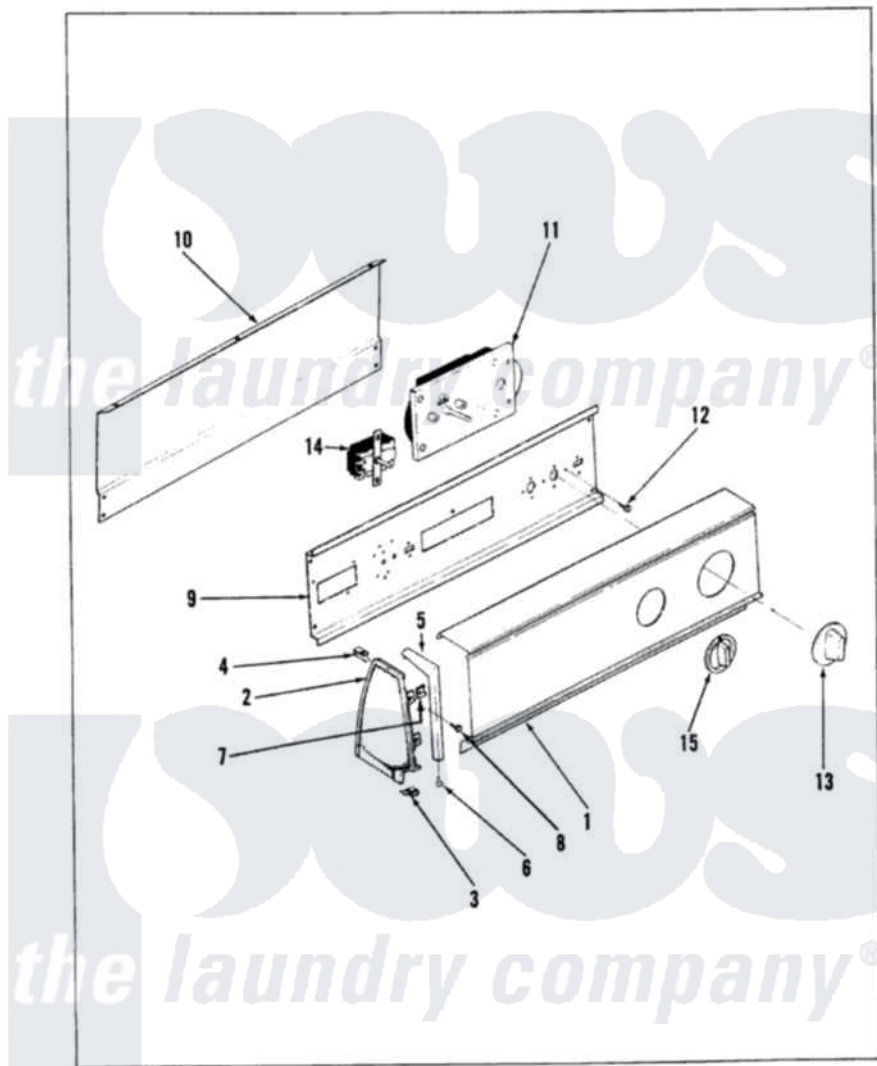

Issued 11/87

Magic Chef [Residential Magic Chef YE20FN1 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0991		Not Available	CONTROL PANEL
2	<a href="#">53-0264</a>			RH Endcap
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">53-0265</a>			LH Endcap
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-0365	<a href="#">53-1676</a>	Shield, Control
10	53-0268	<a href="#">21001460</a>	Shield, Rear
11	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	53-0635	Not Available	TIMER MOTOR
"	<a href="#">53-0662</a>		Timer
12	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	53-0653	<a href="#">31001219</a>	Knob Ski
14	<a href="#">53-0456</a>		Switch, Selector
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-0168	Not Available	SELECTOR KNOB

**Howes**  
the laundry company®

**Howes**  
the laundry company®

**Howes**  
the laundry company®