


# Magic Chef YE20FN5 01 - CONTROL PANEL

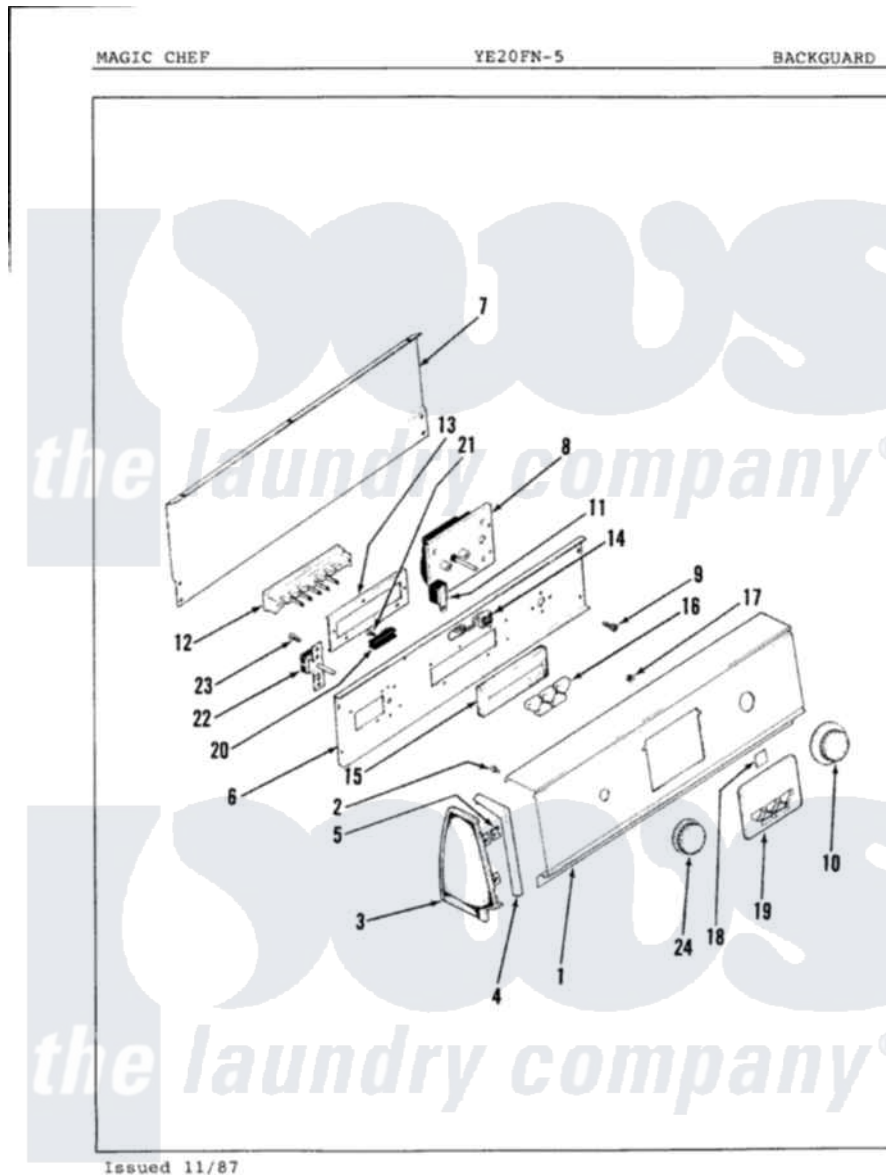

Magic Chef [Residential Magic Chef YE20FN5 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0855		Not Available	CONTROL PANEL
2	<a href="#">25-3457</a>			Screw, Sems
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
3	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">53-0264</a>			RH Endcap
"	<a href="#">53-0265</a>			LH Endcap
4	<a href="#">25-7760</a>			Screw
"	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
5	<a href="#">25-7702</a>			Speedclip, End Cap To Control

	<a href="#">25-7192</a>		Panel
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
6	35-0686-1		Not Available CONTROL SHIELD
7	<a href="#">25-3457</a>		Screw, Sems
"	53-0268	<a href="#">21001460</a>	Shield, Rear
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
8	63-5685	<a href="#">63-5613</a>	Timer
"	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	53-0660	<a href="#">LA-1027</a>	Timer Kit
9	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
10	53-0850		Not Available TIMER KNOB ASM
11	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	<a href="#">53-1639</a>	Buzzer Assembly
12	53-0856		Not Available PB SWITCH
13	25-7712		Not Available SCREW
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6620		Not Available BRACKET
14	35-0691-01		Not Available SIGNAL LIGHT
"	35-0691-02		Not Available SIGNAL LIGHT
"	35-0691-03		Not Available SIGNAL LIGHT
15	33-8541		Not Available SWITCH PAD
16	53-0853-01		Not Available PUSHBUTTON
"	53-0853-02		Not Available PUSHBUTTON
"	53-0853-03		Not Available PUSHBUTTON
"	53-0853-04		Not Available PUSHBUTTON
17	25-7882		Not Available PALNUT
18	35-0690		Not Available LENS
19	53-0857		Not Available LENS
"	53-0854		Not Available PB BEZEL
20	35-0729	<a href="#">7401P037-60</a>	Block, Terminal
21	25-7649	<a href="#">910187</a>	Screw
22	53-0346	<a href="#">53-1263</a>	Rotary Switch
23	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
24	53-0849		Not Available SELECTOR KNOB - FAB

