


Magic Chef YE20FY4 01 - CONTROL PANEL

MAGIC CHEF YE20FN-4 BACKGUARD

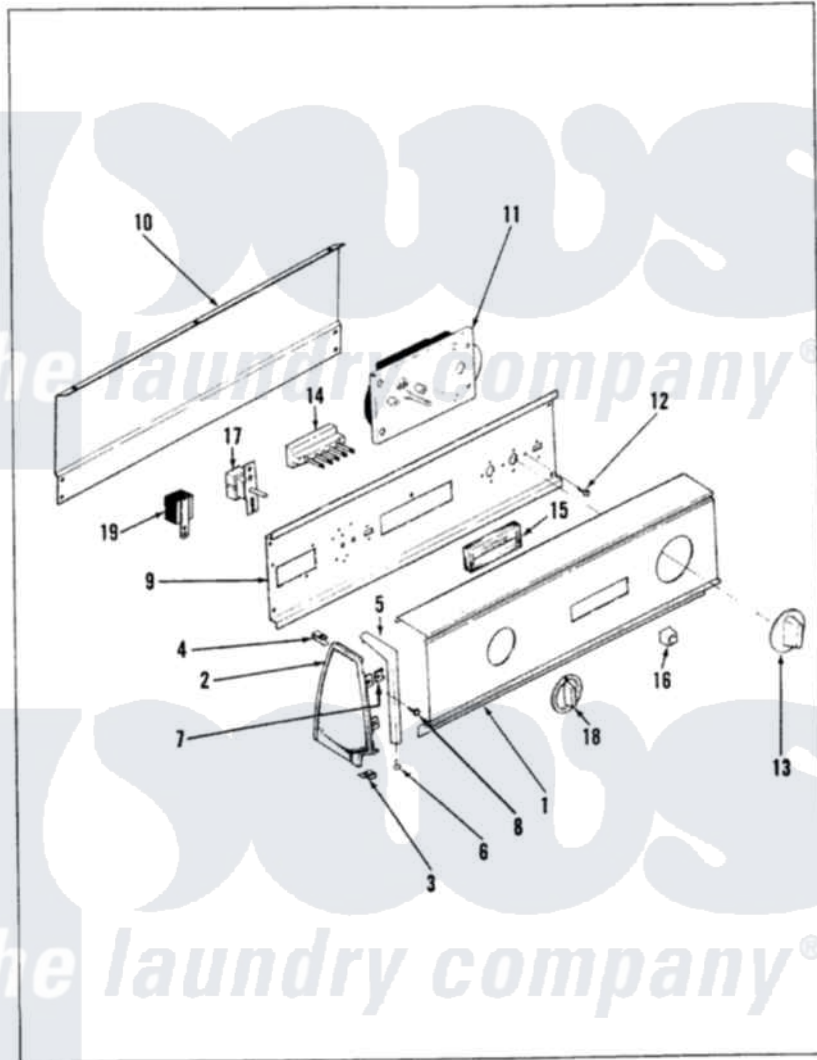

Issued 11/87

Magic Chef [Residential Magic Chef YE20FY4 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0993		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
"	53-0264			RH Endcap
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7435	33002917		Screw, No.10-16
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-0323		Not Available	CONTROL SHIELD
10	53-0268	21001460		Shield, Rear
"	25-3457			Screw, Sems
11	53-0660	LA-1027		Timer Kit
"	63-6743	31001484		Resistor Assembly
12	25-0205	216412		Screw, Bracket To Timer
13	53-0653	31001219		Knob Ski
14	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-5483		Not Available	5 PB SWITCH
"	33-6621		Not Available	BRACKET, SWITCH
"	25-7712		Not Available	SCREW
15	35-0168		Not Available	SELECTOR KNOB
"	33-8541		Not Available	SWITCH PAD
16	63-6731	53-1639		Buzzer Assembly
17	53-0346	53-1263		Rotary Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
18	35-0168		Not Available	SELECTOR KNOB
19	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639		Buzzer Assembly

