


Magic Chef YE20HA3 01 - CONTROL PANEL (REV. A-D)

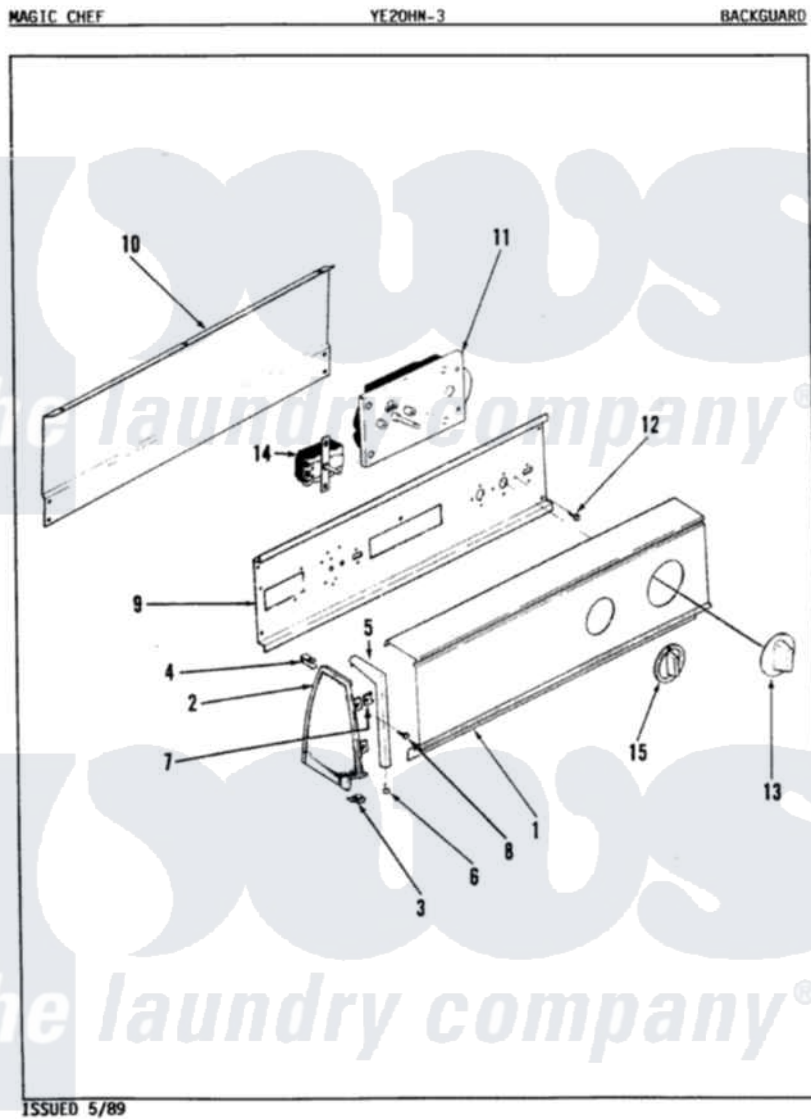

Magic Chef [Residential Magic Chef YE20HA3 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1276		Not Available	CONTROL PANEL
2	53-0264			RH Endcap
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
"	53-0265			LH Endcap
3	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

	53-1752			Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	53-1676		Shield, Control
"	53-1676			Shield, Control
10	35-2688	21001460		Shield, Rear
"	53-0268	21001460		Shield, Rear
11	53-1303		Not Available	TIMER
"	63-6752		Not Available	TIMER MOTOR
"	53-1758			Timer
"	63-6743	31001484		Resistor Assembly
12	25-0205	216412		Screw, Bracket To Timer
13	53-1529	31001219		Knob Ski
14	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0344		Not Available	SWITCH, TEMPERATURE
15	35-2185	21001283		Knob, Selector---Piq
"	63-6731	53-1639		Buzzer Assembly
"	53-1442		Not Available	MANUAL, USE & CARE
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

