


Magic Chef YE20HA3 03 - CONTROL PANEL (REV. G-K/10)

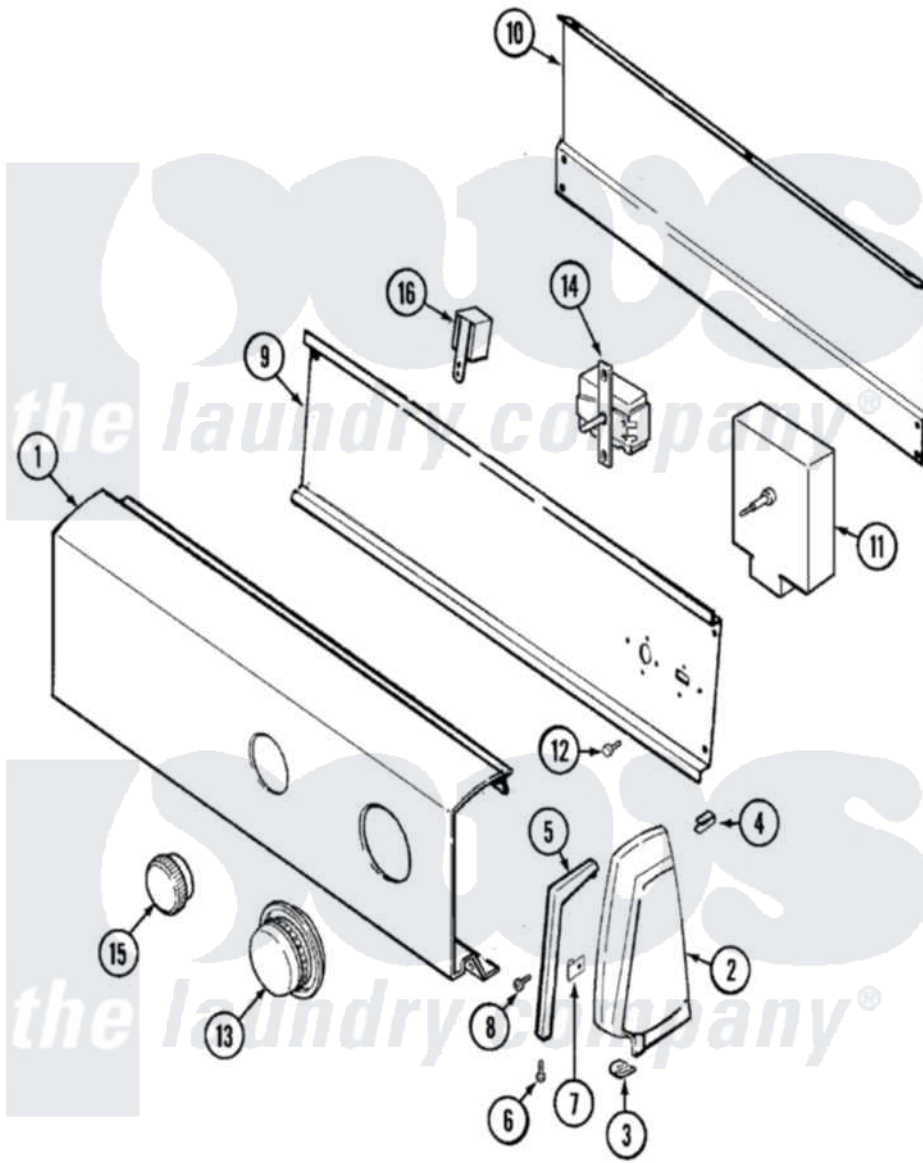

Magic Chef [Residential Magic Chef YE20HA3 Dryer Parts](#) Parts Diagram 03 - CONTROL PANEL (REV. G-K/10)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1276		Not Available	CONTROL PANEL
2	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

7	25-1192		Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	31001146	31001193	Pad, Shield
"	53-1676		Shield, Control
"	31001128	Not Available	SHIELD, CONTROL
10	35-2688	21001460	Shield, Rear
11	63-6743	31001484	Resistor Assembly
"	53-1758		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	53-1529	31001219	Knob Ski
14	31001129		Switch, Temperature
"	53-0344	Not Available	SWITCH, TEMPERATURE
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2185	21001283	Knob, Selector---Piq
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	53-1639	Buzzer Assembly
17	53-1040	Not Available	MANUAL, USE & CARE
"	53-1442	Not Available	MANUAL, USE & CARE
18	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

