


# Magic Chef YE20HA3 07 - EXTERIOR (REV. E-F)

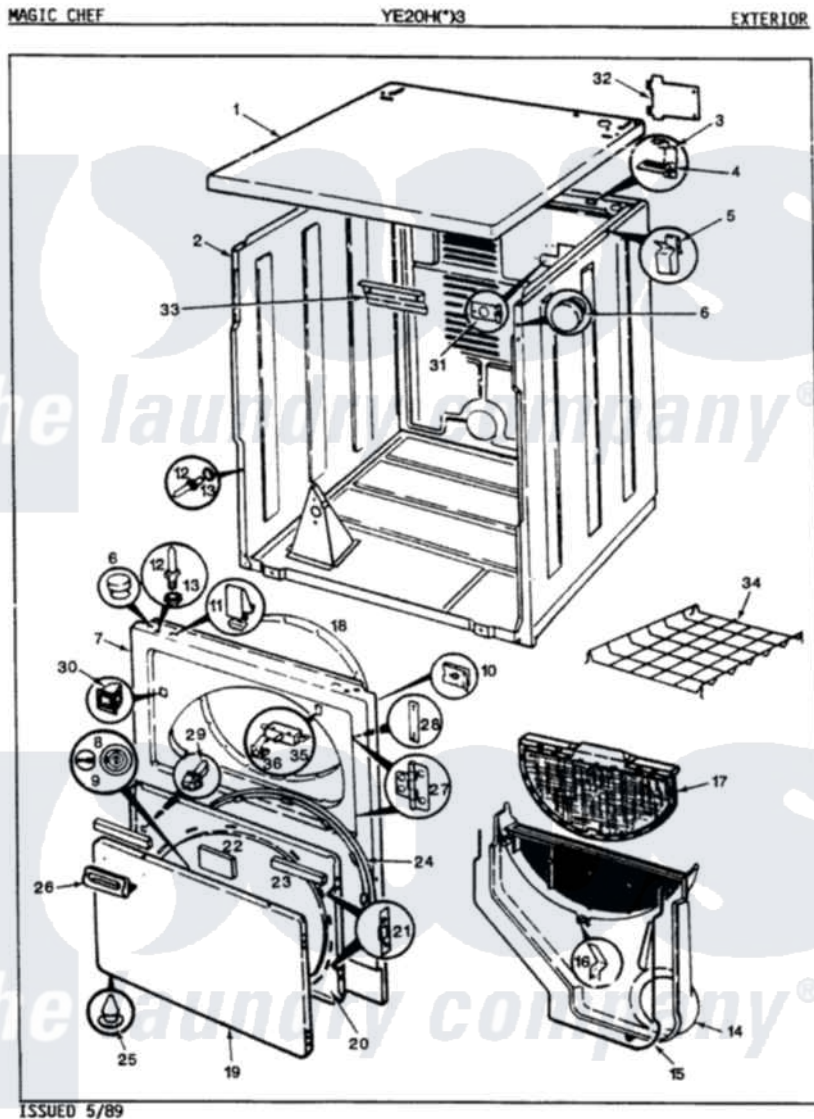

Magic Chef [Residential Magic Chef YE20HA3 Dryer Parts](#) Parts Diagram 07 - EXTERIOR (REV. E-F)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1711		Not Available	CABINET TOP (DRYER)
"	53-1711-24	<a href="#">53-2435-24</a>		Top, Cabinet
"	53-1711-25		Not Available	CABINET TOP (DRYER)
2	53-1644-24	<a href="#">31001715</a>		Cabinet And Base Assembly
"	53-1644	<a href="#">31001714</a>		Cabinet And Base Assembly
"	53-1644-25		Not Available	CABINET & BASE ASSY.(WHT)
3	<a href="#">63-5712</a>			Hinge, Cabinet Top
4	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">33-0930</a>			Pad, Top Hinge
5	<a href="#">25-3034</a>			Clip, Wiring
6	<a href="#">33-2653</a>			Bumper, Cabinet
7	53-0726-25		Not Available	PANEL, FRONT (H WHT)ELECTRIC
"	53-0726-24		Not Available	PANEL, FRONT (ALM)-ELECTRIC
"	53-0726	<a href="#">31001771</a>		Panel, Front

8	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
10	25-7817		Not Available	CLIP, U-TYPE
"	25-7820	<a href="#">489478</a>		Screw, 8 X 1/2
11	<a href="#">25-7220</a>			Clip, Cabinet Top
12	63-6148	<a href="#">53-0643</a>		Pin, Locator
13	25-0224	<a href="#">3400029</a>		Nut, Adapter Plate
"	<a href="#">53-0200</a>			Sleeve, Locator Pin
14	25-7810	<a href="#">415013-35</a>		Screw
"	53-0917	<a href="#">12001324</a>		Duct Kit, Collector
"	53-1299	<a href="#">12001324</a>		Duct Kit, Collector
15	<a href="#">53-0204</a>			Seal
16	<a href="#">53-0123</a>			Clip
17	<a href="#">53-0918</a>			Filter, Lint
18	53-0282	<a href="#">31001637</a>		Seal Assembly, Cylinder Front
19	53-0154-25		Not Available	PANEL, OUTER DOOR (H WHT)
"	<a href="#">53-0154</a>			Panel, Outer Door
"	<a href="#">53-0154-24</a>			Panel, Outer Door
20	53-0912		Not Available	PANEL, INNER DOOR (WHT)
21	<a href="#">53-0119</a>			Clip, Hinge
22	53-0251	<a href="#">53-1490</a>		Door Pad
23	53-0252	<a href="#">53-1491</a>		Door Pad
24	25-7770	<a href="#">3196169</a>		Screw, Element
"	53-0112	<a href="#">31001529</a>		Seal, Door
25	25-3534	<a href="#">25-7889</a>		Plug Button
26	53-0928	<a href="#">53-0927</a>		Handle, Door
"	25-7810	<a href="#">415013-35</a>		Screw
27	53-0122	<a href="#">53-1492</a>		Hinge, Dryer Door
28	<a href="#">LA-1003</a>			Door Catch Kit
"	<a href="#">25-7809</a>			Screw, No.6-20 1/2 Flthd Torx
"	53-0121		Not Available	TWIN NUT
29	73-0033	<a href="#">LA-1003</a>		Door Catch Kit
30	53-0187	<a href="#">LA-1003</a>		Door Catch Kit
31	25-7828	<a href="#">489483</a>		Screw 10-32 X 1/2
"	53-0135		Not Available	SUPPORT, POWER CORD
32	25-7857	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-0284</a>			Cover, Terminal
33	<a href="#">53-0133</a>			Shield, Heat
"	<a href="#">25-3457</a>			Screw, Sems
34	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
"	<a href="#">LA-1005</a>			Switch Kit
35	<a href="#">53-0148</a>			Switch, Door
36	63-5990	<a href="#">31001319</a>		Clip, Switch