


Magic Chef YE20HN3C 02 - CONTROL PANEL (REV. A-D)

MAGIC CHEF YE20HN3C BACKGUARD

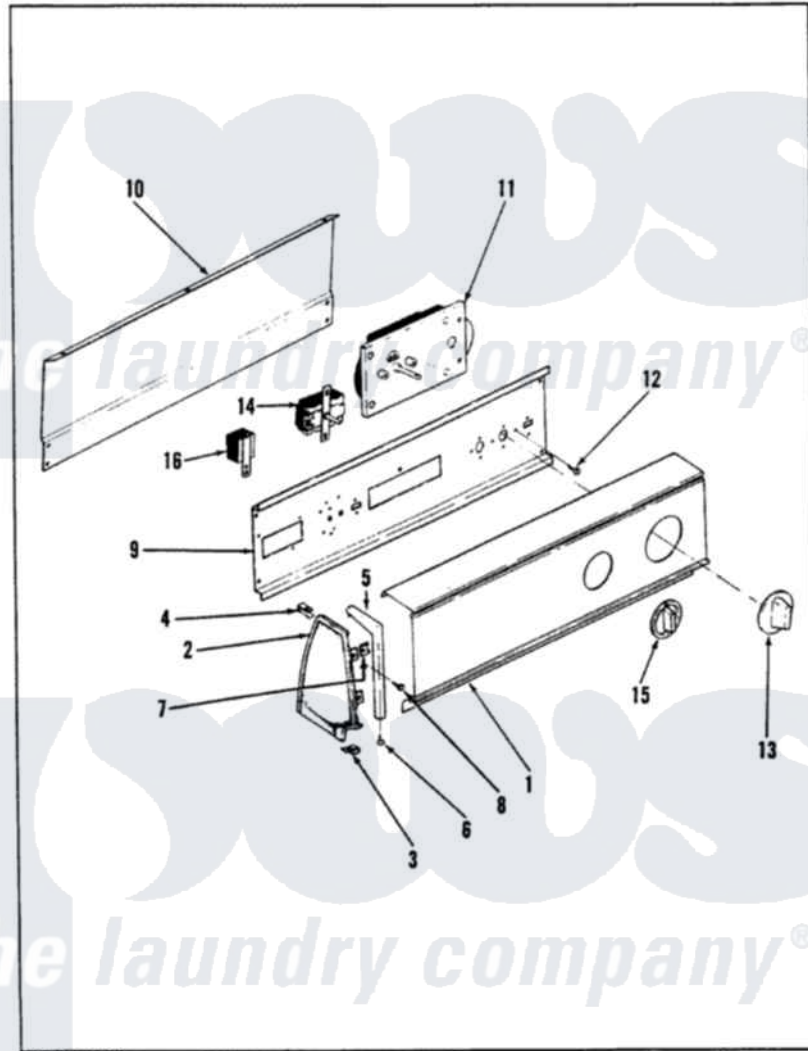

ISSUED 4/90

Magic Chef [Residential Magic Chef YE20HN3C Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1276		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7851			Speedclip, End Cap To Top
"	35-2487	21001451		Cap- End
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)

6	25-7760		Screw
7	25-7702		Speedclip, End Cap To Control Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676		Shield, Control
"	53-0365	53-1676	Shield, Control
10	53-0268	21001460	Shield, Rear
"	35-2688	21001460	Shield, Rear
11	53-1758		Timer
"	53-1363	Not Available	TIMER
"	63-6752	Not Available	TIMER MOTOR
"	63-6743	31001484	Resistor Assembly
12	25-0205	216412	Screw, Bracket To Timer
"	25-7435	33002917	Screw, No.10-16
13	53-1529	31001219	Knob Ski
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0344	Not Available	SWITCH, TEMPERATURE
15	35-2185	21001283	Knob, Selector----Piq
16	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1456-2	Not Available	MANUAL, USE & CARE
17	63-5577	Not Available	MANUAL, USE & CARE

the laundry company[®]

the laundry company[®]