


Magic Chef YE20HN3C 06 - EXTERIOR (REV. A-D)

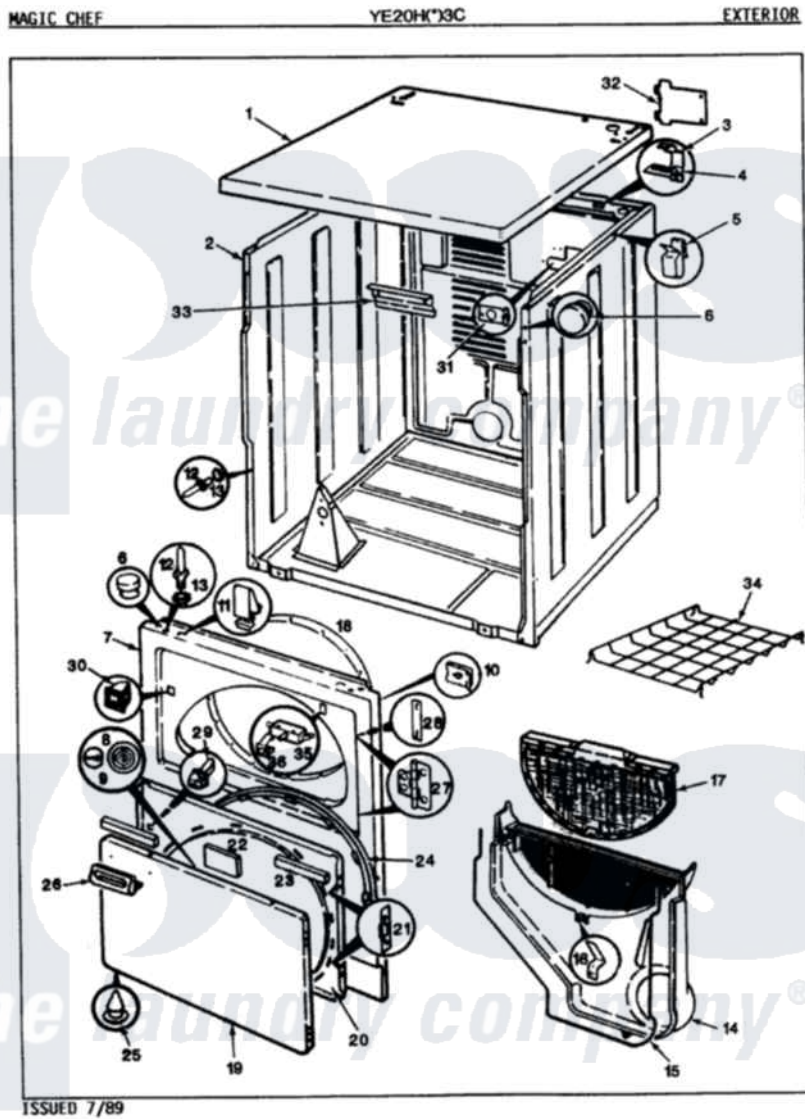

Magic Chef [Residential Magic Chef YE20HN3C Dryer Parts](#) Parts Diagram 06 - EXTERIOR (REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1711		Not Available	CABINET TOP (DRYER)
"	53-0314		Not Available	CABINET TOP
2	53-1644	31001714		Cabinet And Base Assembly
"	53-0687	31001714		Cabinet And Base Assembly
3	63-5712			Hinge, Cabinet Top
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-0930			Pad, Top Hinge
5	25-3034			Clip, Wiring
6	33-2653			Bumper, Cabinet
7	53-0726	31001771		Panel, Front
8	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
10	25-7820	489478		Screw, 8 X 1/2
"	25-7817		Not Available	CLIP, U-TYPE

11	25-7220		Clip, Cabinet Top
12	63-6148	53-0643	Pin, Locator
13	25-0224	3400029	Nut, Adapter Plate
"	53-0200		Sleeve, Locator Pin
14	53-1299	12001324	Duct Kit, Collector
"	25-7810	415013-35	Screw
"	53-0917	12001324	Duct Kit, Collector
15	53-0203	12001324	Duct Kit, Collector
16	53-0123		Clip
17	53-0918		Filter, Lint
18	53-0282	31001637	Seal Assembly, Cylinder Front
19	53-0154		Panel, Outer Door
20	53-0912	Not Available	PANEL, INNER DOOR (WHT)
21	53-0119		Clip, Hinge
22	53-0251	53-1490	Door Pad
23	53-0252	53-1491	Door Pad
24	53-0112	31001529	Seal, Door
"	25-7770	3196169	Screw, Element
25	25-3534	25-7889	Plug Button
26	53-0928	53-0927	Handle, Door
"	25-7810	415013-35	Screw
27	53-0122	53-1492	Hinge, Dryer Door
28	53-0121	Not Available	TWIN NUT
"	25-7809		Screw, No.6-20 1/2 Flthd Torx
"	LA-1003		Door Catch Kit
29	73-0033	LA-1003	Door Catch Kit
30	53-0187	LA-1003	Door Catch Kit
31	25-7828	489483	Screw 10-32 X 1/2
"	53-0135	Not Available	SUPPORT, POWER CORD
32	53-0284		Cover, Terminal
"	25-7857	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
33	25-3457		Screw, Sems
"	53-0133		Shield, Heat
34	LA-1005		Switch Kit
"	W10124350	Not Available	NOT REQUIRED PART OR SEE NOTE
35	53-0148		Switch, Door
36	63-5990	31001319	Clip, Switch