


Magic Chef YE20HV3 02 - CONTROL PANEL (YE20HV3)

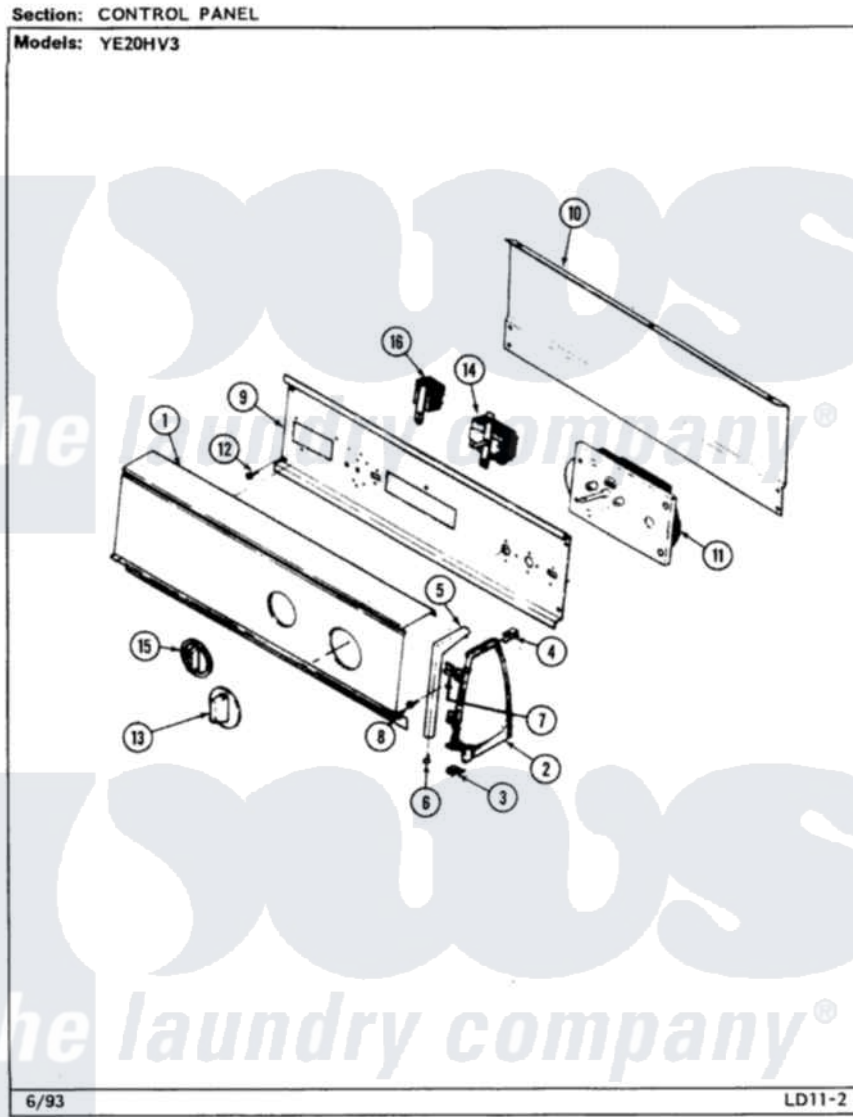

Magic Chef [Residential Magic Chef YE20HV3 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (YE20HV3)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
2	35-2668	21001453		Cap- End
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
"	35-2669		Not Available	CAP, END (LT)(WHT)
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel

8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
11	53-1758		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	53-1671	53-2129	Knob, And Skirt Assembly
14	53-0344		Not Available SWITCH, TEMPERATURE
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2673	21001239	Knob, Selector
16	53-1639		Buzzer Assembly
"	63-6743	31001484	Resistor Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
17	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF
"	53-2384		Not Available MANUAL, USE & CARE
18	53-1040		Not Available MANUAL, USE & CARE

