


# Magic Chef YE20HY3 02 - CONTROL PANEL (REV. E-F)

MAGIC CHEF YE20HY3 BACKGUARD

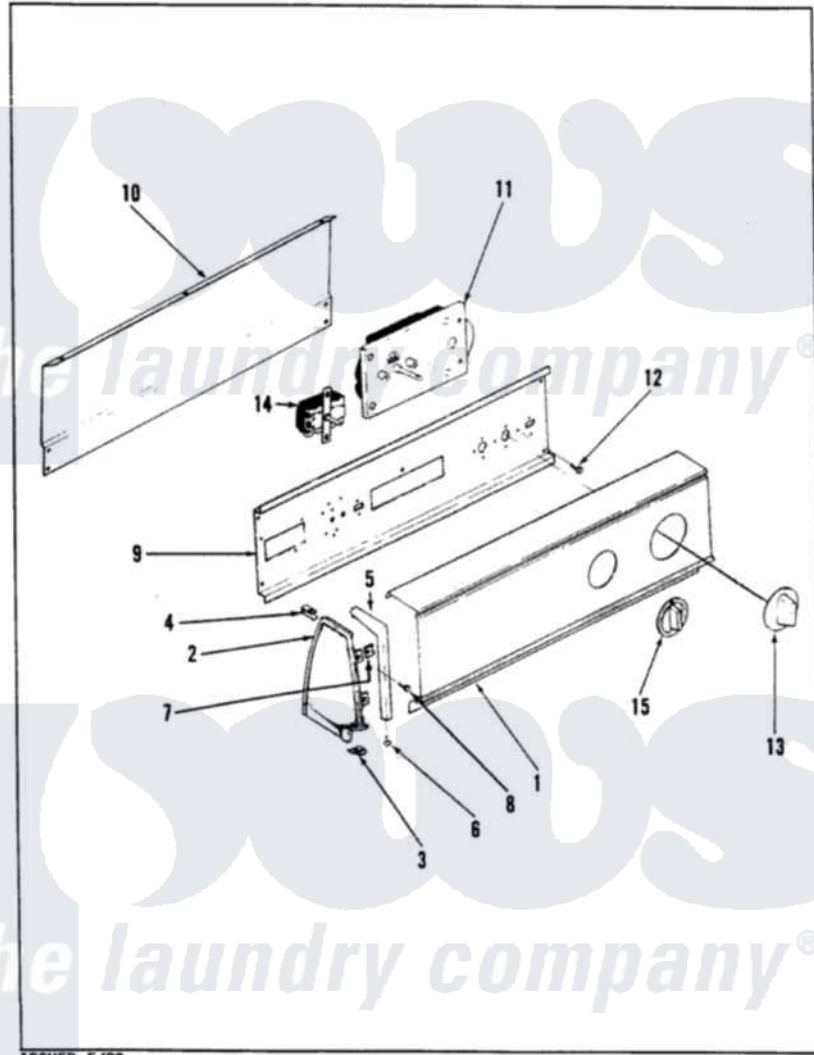

ISSUED 5/89

Magic Chef [Residential Magic Chef YE20HY3 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. E-F)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1276		Not Available	CONTROL PANEL
2	35-2487	<a href="#">21001451</a>		Cap- End
"	53-2488	<a href="#">31001109</a>		Owners Man
"	25-7649	<a href="#">910187</a>		Screw
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
3	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	<a href="#">53-1676</a>			Shield, Control

10	35-2688	<a href="#">21001460</a>		Shield, Rear
11	53-1303		Not Available	TIMER
"	63-6743	<a href="#">31001484</a>		Resistor Assembly
"	<a href="#">53-1758</a>			Timer
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
12	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
13	53-1529	<a href="#">31001219</a>		Knob Ski
14	53-0344		Not Available	SWITCH, TEMPERATURE
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2185	<a href="#">21001283</a>		Knob, Selector---Piq
"	63-6731	<a href="#">53-1639</a>		Buzzer Assembly
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
16	53-1442		Not Available	MANUAL, USE & CARE

