


Magic Chef YE20HY3 07 - EXTERIOR (REV. E-F)

MAGIC CHEF YE20HY3 EXTERIOR

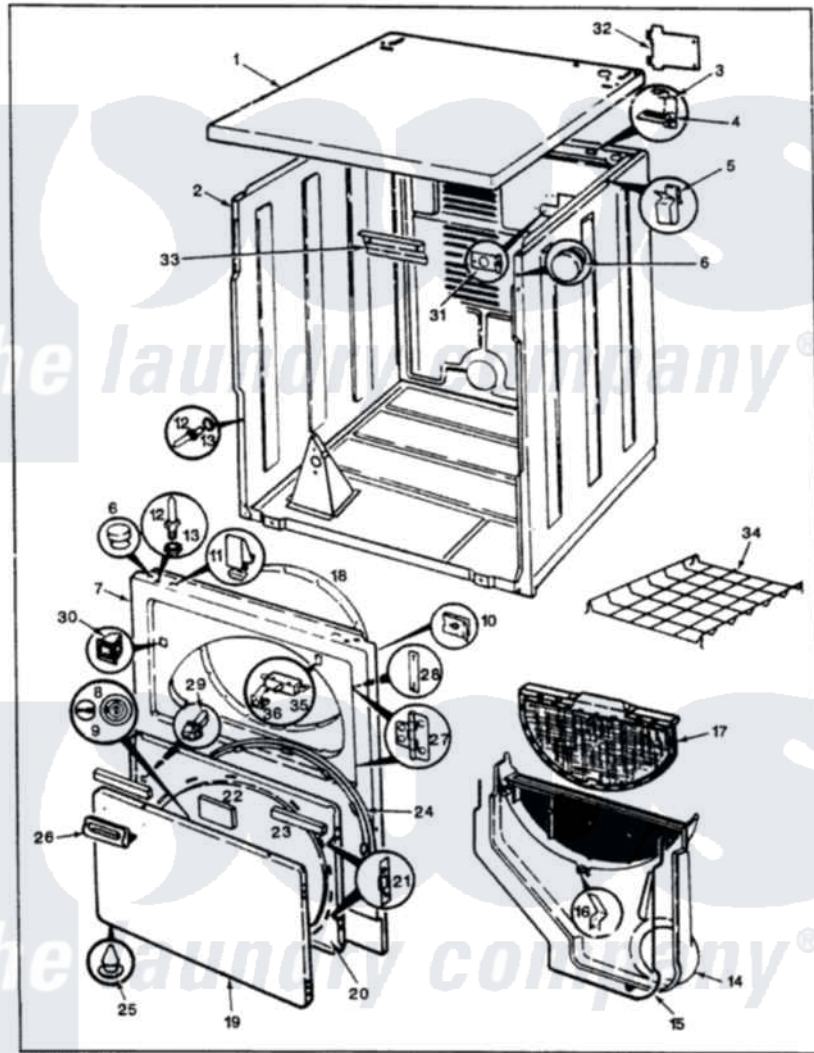

Magic Chef [Residential Magic Chef YE20HY3 Dryer Parts](#) Parts Diagram 07 - EXTERIOR (REV. E-F)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1711		Not Available	CABINET TOP (DRYER)
"	53-1711-24	53-2435-24		Top, Cabinet
"	53-1711-25		Not Available	CABINET TOP (DRYER)
2	53-1644-24	31001715		Cabinet And Base Assembly
"	53-1644	31001714		Cabinet And Base Assembly
"	53-1644-25		Not Available	CABINET & BASE ASSY.(WHT)
3	63-5712			Hinge, Cabinet Top
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-0930			Pad, Top Hinge
5	25-3034			Clip, Wiring
6	33-2653			Bumper, Cabinet
7	53-0726-25		Not Available	PANEL, FRONT (H WHT)ELECTRIC
"	53-0726-24		Not Available	PANEL, FRONT (ALM)-ELECTRIC
"	53-0726	31001771		Panel, Front

8	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
10	25-7817		Not Available	CLIP, U-TYPE
"	25-7820	489478		Screw, 8 X 1/2
11	25-7220			Clip, Cabinet Top
12	63-6148	53-0643		Pin, Locator
13	25-0224	3400029		Nut, Adapter Plate
"	53-0200			Sleeve, Locator Pin
14	25-7810	415013-35		Screw
"	53-0917	12001324		Duct Kit, Collector
"	53-1299	12001324		Duct Kit, Collector
15	53-0204			Seal
16	53-0123			Clip
17	53-0918			Filter, Lint
18	53-0282	31001637		Seal Assembly, Cylinder Front
19	53-0154-25		Not Available	PANEL, OUTER DOOR (H WHT)
"	53-0154			Panel, Outer Door
"	53-0154-24			Panel, Outer Door
20	53-0912		Not Available	PANEL, INNER DOOR (WHT)
21	53-0119			Clip, Hinge
22	53-0251	53-1490		Door Pad
23	53-0252	53-1491		Door Pad
24	25-7770	3196169		Screw, Element
"	53-0112	31001529		Seal, Door
25	25-3534	25-7889		Plug Button
26	53-0928	53-0927		Handle, Door
"	25-7810	415013-35		Screw
27	53-0122	53-1492		Hinge, Dryer Door
28	LA-1003			Door Catch Kit
"	25-7809			Screw, No.6-20 1/2 Flthd Torx
"	53-0121		Not Available	TWIN NUT
29	73-0033	LA-1003		Door Catch Kit
30	53-0187	LA-1003		Door Catch Kit
31	25-7828	489483		Screw 10-32 X 1/2
"	53-0135		Not Available	SUPPORT, POWER CORD
32	25-7857	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0284			Cover, Terminal
33	53-0133			Shield, Heat
"	25-3457			Screw, Sems
34	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
"	LA-1005			Switch Kit
35	53-0148			Switch, Door
36	63-5990	31001319		Clip, Switch