


Magic Chef YE20JA25 02 - CONTROL PANEL (REV. C)

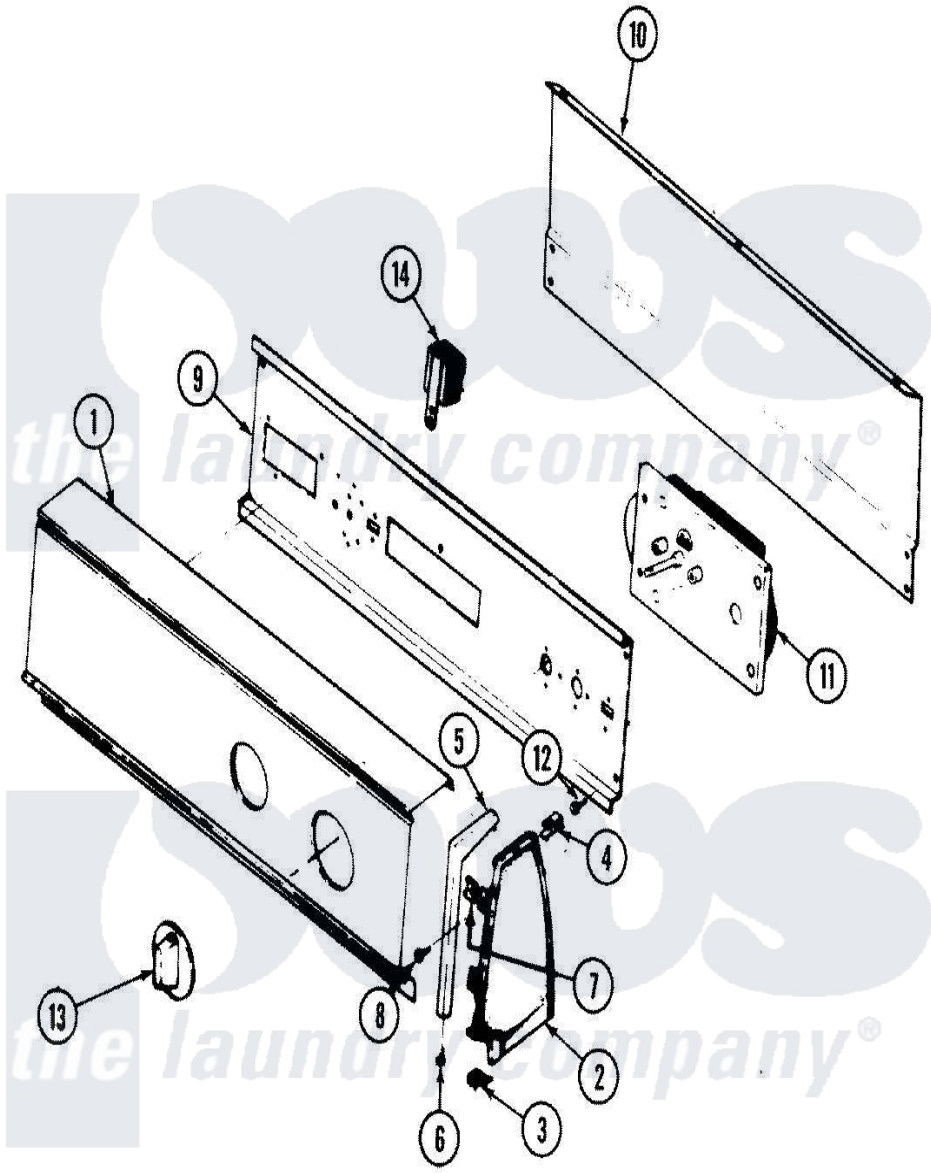

Magic Chef [Residential Magic Chef YE20JA25 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. C)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1603		Not Available	CONTROL PANEL
2	25-7851			Speedclip, End Cap To Top
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

7	25-1192		Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
11	53-1810		Timer
"	63-6743	31001484	Resistor Assembly
12	25-7435	33002917	Screw, No.10-16
13	53-1533	31001219	Knob Ski
14	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1607-1	Not Available	MANUAL, USE & CARE
15	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]