


# Magic Chef YE20JA5C 01 - CONTROL PANEL (YE20JA5C)(REV. A)

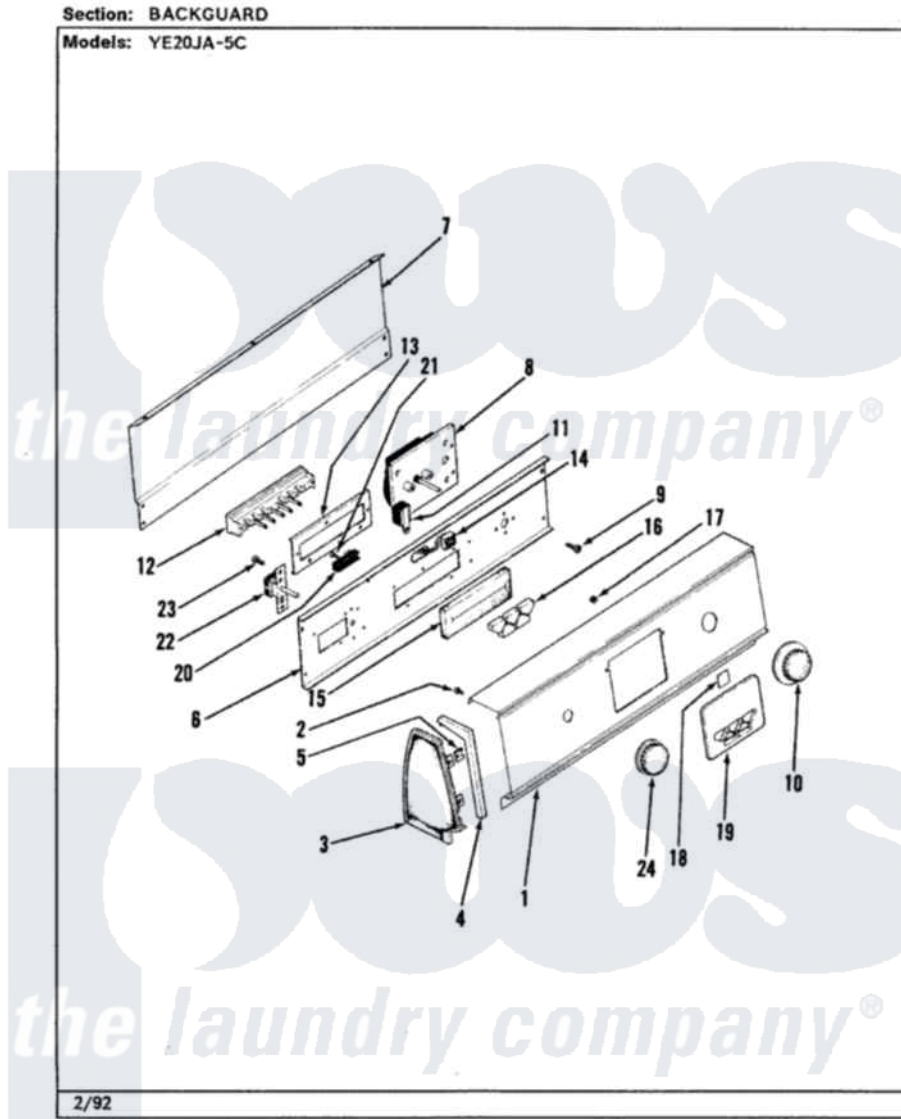

Magic Chef [Residential Magic Chef YE20JA5C Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (YE20JA5C)(REV. A)  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1819		Not Available	CONTROL PANEL
2	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-3457</a>			Screw, Sems
3	25-7649	<a href="#">910187</a>		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	35-2487	<a href="#">21001451</a>		Cap- End
"	35-2488	<a href="#">21001452</a>		Cap- End
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
4	53-0277		Not Available	TRIM, END CAP (RT)
"	<a href="#">25-7760</a>			Screw
"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-3002	<a href="#">00767</a>		Screw, 8A X 3/8 HeX Washer

			Head Tapping
"	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
6	35-2680	Not Available	CONTROL SHIELD
7	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	<a href="#">21001460</a>	Shield, Rear
"	<a href="#">25-3457</a>		Screw, Sems
8	53-1300	Not Available	TIMER
"	53-1816	Not Available	TIMER
"	63-6743	<a href="#">31001484</a>	Resistor Assembly
9	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
"	63-5685	<a href="#">63-5613</a>	Timer
10	53-1529	<a href="#">31001219</a>	Knob Ski
11	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1666</a>		Buzzer - Adjustable
12	53-1668	Not Available	SWITCH - 7 PUSHBUTTON
13	33-6620	Not Available	BRACKET
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712	Not Available	SCREW
14	35-0691-07	Not Available	LIGHT ASSY
"	35-0691-01	Not Available	SIGNAL LIGHT
"	35-0691-02	Not Available	SIGNAL LIGHT
"	35-0691-03	Not Available	SIGNAL LIGHT
15	33-8541	Not Available	SWITCH PAD
16	<a href="#">53-1271-03</a>		Push Button
"	53-1271-06	Not Available	PUSHBUTTON (OFF)
"	53-1271-05	Not Available	PUSHBUTTON (ON)
"	<a href="#">53-1271-04</a>		Push Button
"	<a href="#">53-1271-02</a>		Push Button
"	<a href="#">53-1271-01</a>		Push Button
17	25-7882	Not Available	PALNUT
18	35-0690	Not Available	LENS
19	53-1635	Not Available	BEZEL (BLACK) 7 POSITION
"	53-1665	Not Available	LENS DRYER
20	35-2257	<a href="#">7401P037-60</a>	Block, Terminal
21	25-7649	<a href="#">910187</a>	Screw
22	53-0346	<a href="#">53-1263</a>	Rotary Switch
23	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
24	53-1680	Not Available	KNOB, SELECTOR
25	53-2087	Not Available	MANUAL, USE & CARE