


Magic Chef YE20JY1 02 - CONTROL PANEL (REV. A-C)

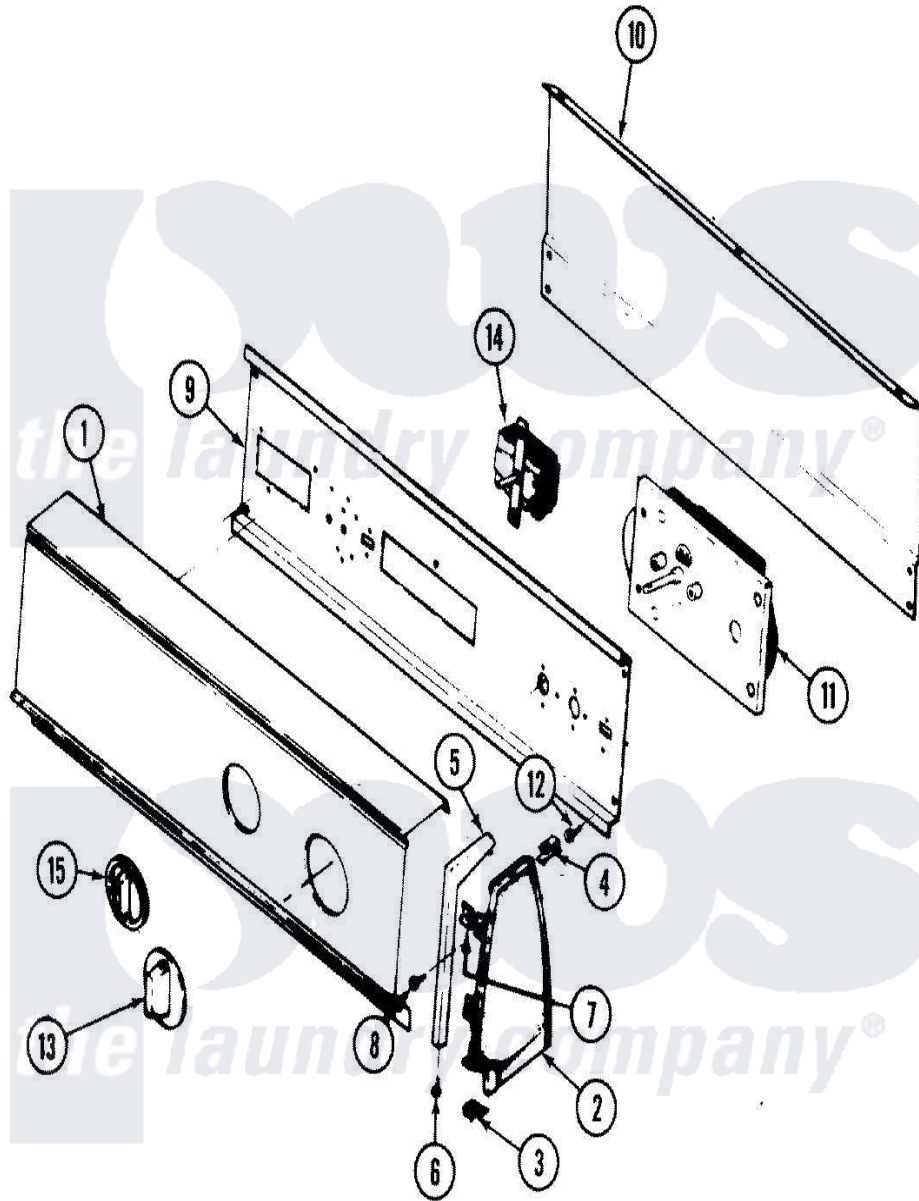

Magic Chef [Residential Magic Chef YE20JY1 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. A-C)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1277		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2488	21001452		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
11	53-1803		Timer
"	63-6743	31001484	Resistor Assembly
"	53-0635		Not Available
"	53-1547		TIMER MOTOR
"	53-1547		Timer
12	25-0205	216412	Screw, Bracket To Timer
"	25-7435	33002917	Screw, No.10-16
13	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1529	31001219	Knob Ski
14	53-1267	53-0456	Switch, Selector
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1639		Buzzer Assembly
15	35-2185	21001283	Knob, Selector---Piq
"	16000329		Not Available
"	53-1900		Not Available
			GUIDE, QUICK REF. - MAGIC CHEF
			MANUAL, USE & CARE

