


# Magic Chef YE20JY25 01 - BACKGUARD (REV. A-B)

SECTION: BACKGUARD  
 MODEL: YE20JC\*25

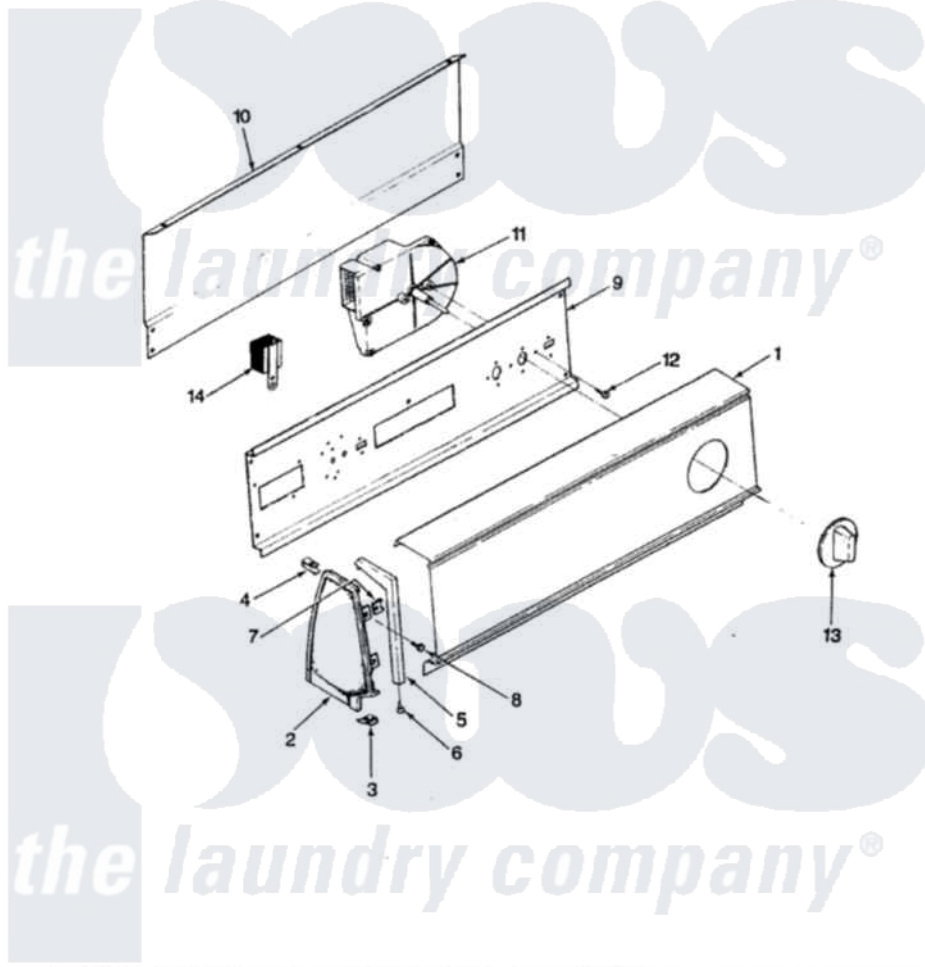

Issue Date: 5/90

Magic Chef [Residential Magic Chef YE20JY25 Dryer Parts](#) Parts Diagram 01 - BACKGUARD (REV. A-B)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1603		Not Available	CONTROL PANEL
2	35-2488	<a href="#">21001452</a>		Cap- End
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2487	<a href="#">21001451</a>		Cap- End
"	<a href="#">53-0264</a>			RH Endcap
"	<a href="#">53-0265</a>			LH Endcap
3	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	25-7697	<a href="#">25-2219</a>		Screw
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw
7	25-7435	<a href="#">33002917</a>		Screw, No.10-16

8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	<a href="#">53-1676</a>	Shield, Control
"	<a href="#">53-1676</a>		Shield, Control
10	53-0268	<a href="#">21001460</a>	Shield, Rear
"	<a href="#">25-3457</a>		Screw, Sems
"	<a href="#">25-3457</a>		Screw, Sems
"	35-2688	<a href="#">21001460</a>	Shield, Rear
11	<a href="#">53-0601</a>		Timer Motor
"	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	53-0656	Not Available	TIMER
12	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	53-1533	<a href="#">31001219</a>	Knob Ski
14	63-6731	<a href="#">53-1639</a>	Buzzer Assembly
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
15	53-0977	Not Available	MANUAL, USE & CARE-INSERT

