


Magic Chef YE20JY25 04 - EXTERIOR (REV. A-B)

SECTION: EXTERIOR

MODEL: YE20JY25

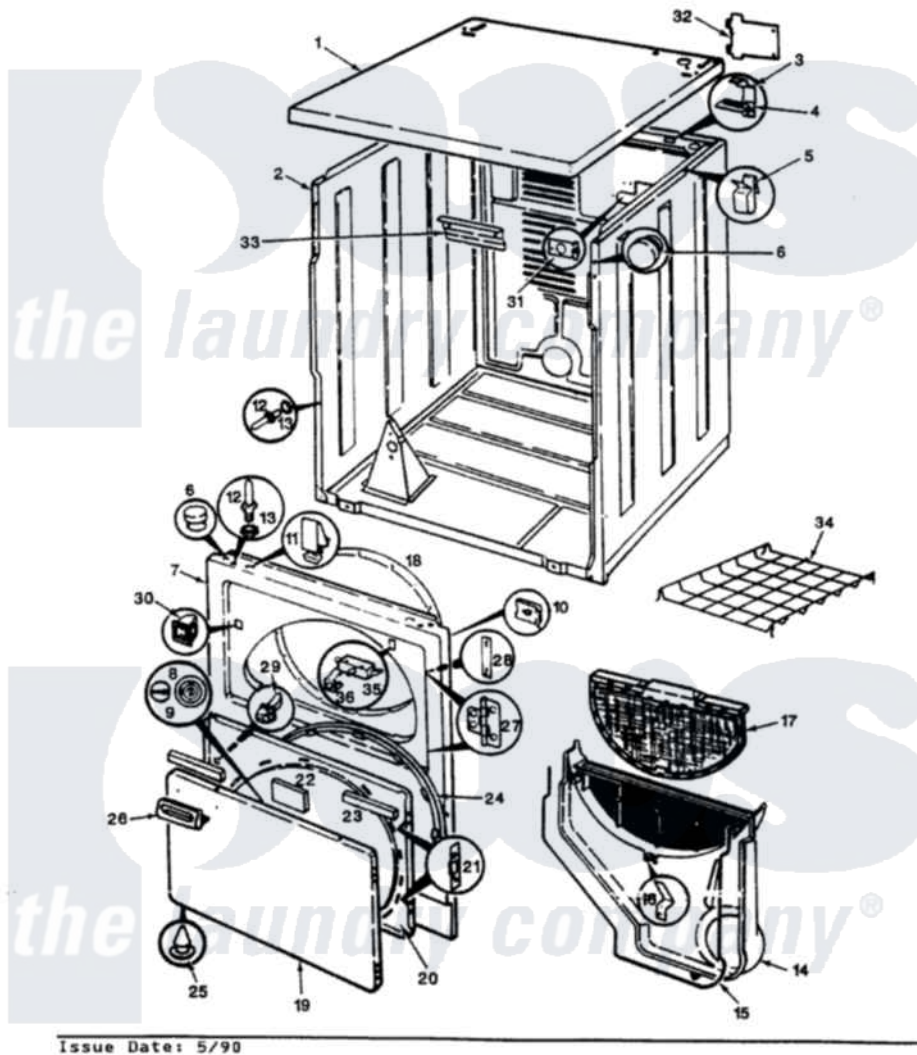

Issue Date: 5/90

Magic Chef [Residential Magic Chef YE20JY25 Dryer Parts](#) Parts Diagram 04 - EXTERIOR (REV. A-B)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0314-25		Not Available	CABINET TOP
"	53-1711-25		Not Available	CABINET TOP (DRYER)
2	53-1644-25		Not Available	CABINET & BASE ASSY.(WHT)
"	53-0160-25		Not Available	CABINET ASM
3	63-5712			Hinge, Cabinet Top
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-0930			Pad, Top Hinge
5	25-3034			Clip, Wiring
6	33-2653			Bumper, Cabinet
7	53-0726-25		Not Available	PANEL, FRONT (H WHT)ELECTRIC
8	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
10	25-7820	489478		Screw, 8 X 1/2

"	25-7817		Not Available	CLIP, U-TYPE
11	25-7220			Clip, Cabinet Top
12	63-6148	53-0643		Pin, Locator
13	53-0200			Sleeve, Locator Pin
"	25-0224	3400029		Nut, Adapter Plate
14	25-7810	415013-35		Screw
"	53-1299	12001324		Duct Kit, Collector
15	53-0203	12001324		Duct Kit, Collector
16	53-0123			Clip
17	53-0918			Filter, Lint
18	53-0282	31001637		Seal Assembly, Cylinder Front
19	53-0154-25		Not Available	PANEL, OUTER DOOR (H WHT)
20	53-0740		Not Available	INNER DOOR
21	53-0119			Clip, Hinge
22	53-0251	53-1490		Door Pad
23	53-0252	53-1491		Door Pad
24	25-7770	3196169		Screw, Element
"	53-0112	31001529		Seal, Door
25	25-3534	25-7889		Plug Button
26	25-7810	415013-35		Screw
"	53-0928	53-0927		Handle, Door
27	53-0122	53-1492		Hinge, Dryer Door
28	LA-1003			Door Catch Kit
"	25-7809			Screw, No.6-20 1/2 Flthd Torx
"	53-0121		Not Available	TWIN NUT
29	73-0033	LA-1003		Door Catch Kit
30	53-0187	LA-1003		Door Catch Kit
31	25-7828	489483		Screw 10-32 X 1/2
"	53-0135		Not Available	SUPPORT, POWER CORD
32	25-7857	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0284			Cover, Terminal
33	25-3457			Screw, Sems
"	53-0133			Shield, Heat
34	LA-1005			Switch Kit
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
35	53-0147	53-0148		Switch, Door
36	63-5990	31001319		Clip, Switch
37	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE