


Magic Chef YE216KW 02 - CONTROL PANEL

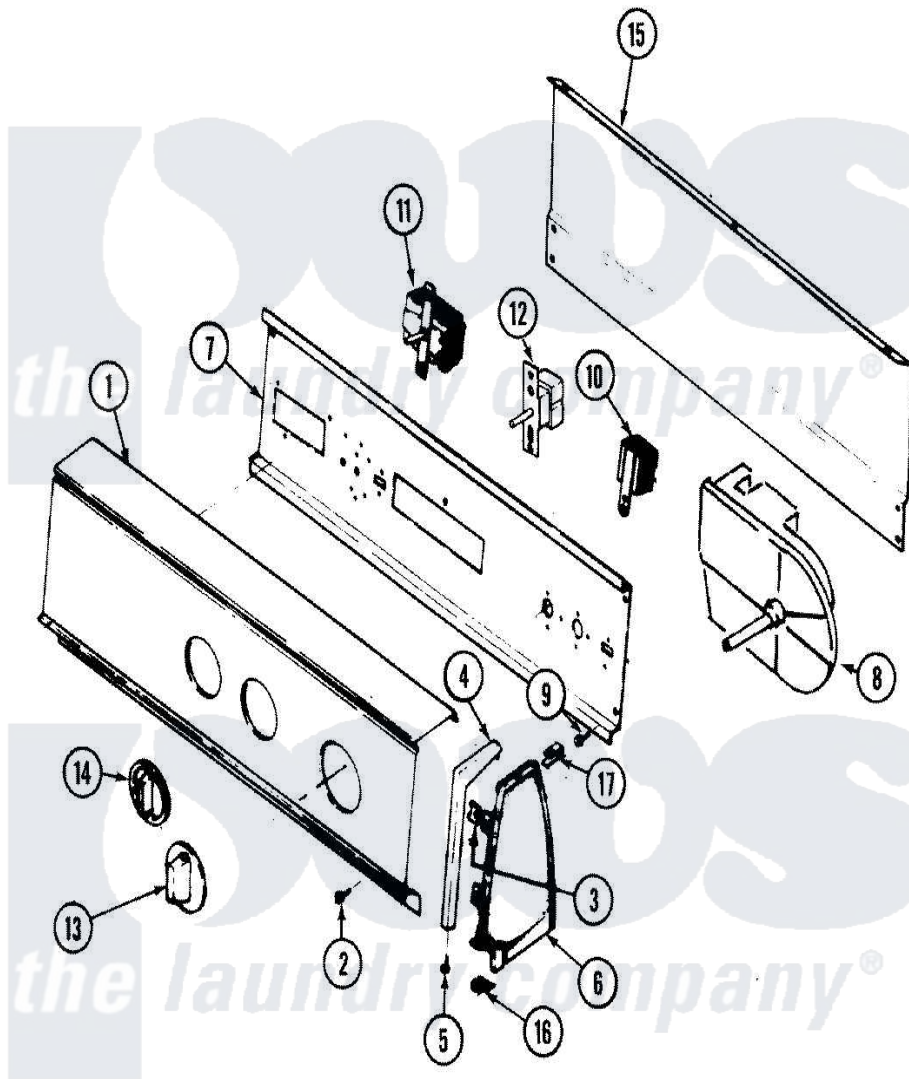

Magic Chef [Residential Magic Chef YE216KW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-3457			Screw, Sems
"	53-2473		Not Available	PANEL, CONTROL
2	25-7793			Screw
3	25-7702			Speedclip, End Cap To Control Panel
4	53-2413			End Trim L.H.
"	53-2412			End Trim RH
5	25-7760			Screw
6	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
7	31001146	31001193		Pad, Shield
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001128		Not Available	SHIELD, CONTROL
"	53-1676			Shield, Control
"	53-2504	31001193		Pad, Shield
8	53-1816		Not Available	TIMER

"	63-6743	31001484		Resistor Assembly
9	25-7435	33002917		Screw, No.10-16
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1639			Buzzer Assembly
11	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001129			Switch, Temperature
"	53-0344		Not Available	SWITCH, TEMPERATURE
"	31001087		Not Available	SWITCH, HEAT SELECTOR
12	31001190			Switch, Two Position Rotary
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	53-1263		Rotary Switch
13	53-2501	31001219		Knob Ski
14	35-3960	21001283		Knob, Selector---Piq
15	25-3457			Screw, Sems
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460		Shield, Rear
16	25-7851			Speedclip, End Cap To Top
"	25-2219			Screw
17	25-7852			Speedclip, Rr Shld To End Cap
18	31001050		Not Available	MANUAL, USE & CARE
"	53-2488	31001109		Owners Man
20	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

the laundry company[®]

the laundry company[®]