


Magic Chef YE224LV 02 - CONTROL PANEL

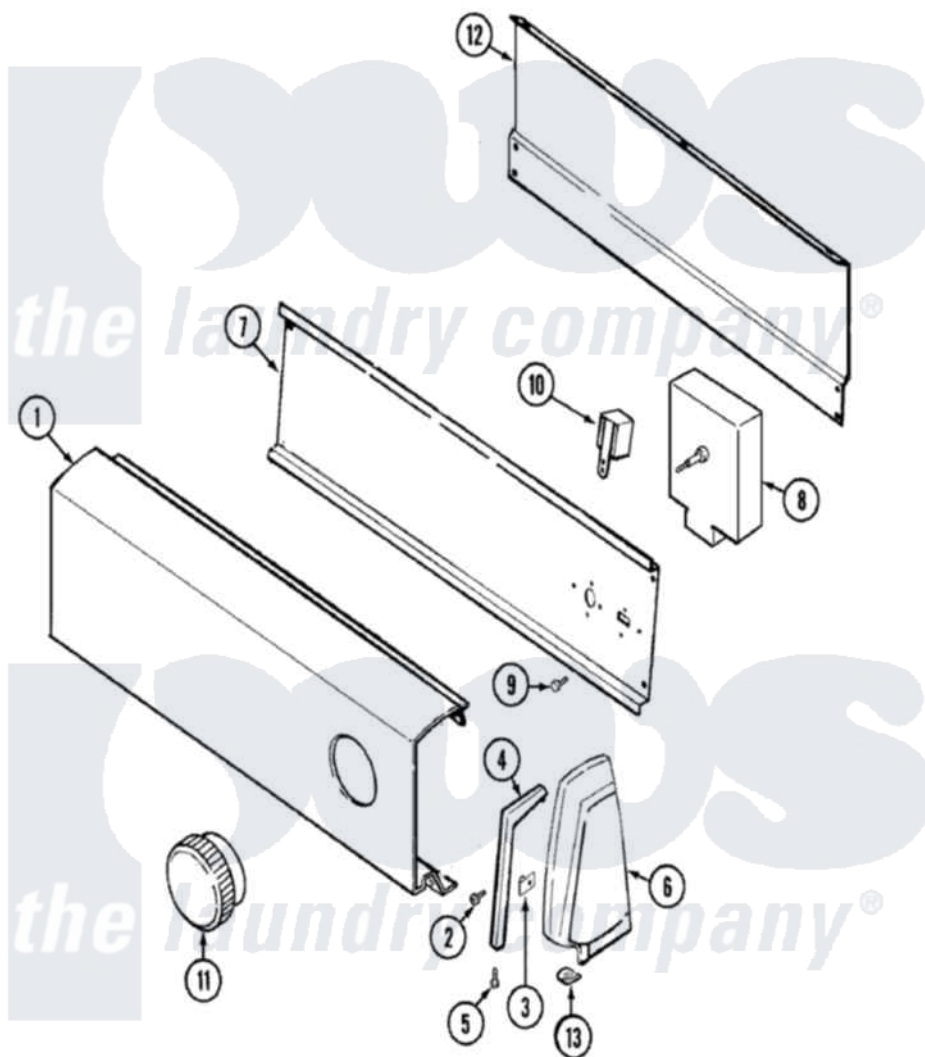

Magic Chef [Residential Magic Chef YE224LV Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001147		Not Available	PANEL, CONTROL
2	25-7649	910187		Screw
3	25-7702			Speedclip, End Cap To Control Panel
4	31001054		Not Available	TRIM, ENDCAP (RT WHT)
"	31001055		Not Available	TRIM, ENDCAP (LT WHT)
5	25-7760			Screw
6	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	21001453		Cap- End
7	31001128		Not Available	SHIELD, CONTROL
"	31001193			Pad, Shield
8	31001108			Timer
"	63-6743	31001484		Resistor Assembly
9	31001119	W100116760		Screw
10	53-1639			Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

11	53-2502		Knob And Skirt Assembly
12	35-2688	21001460	Shield, Rear
"	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	25-7851		Speedclip, End Cap To Top
14	31001327	Not Available	MANUAL, USE & CARE
"	31001331	Not Available	MANUAL, USE & CARE
15	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

