


Magic Chef YE225LM 02 - CONTROL PANEL

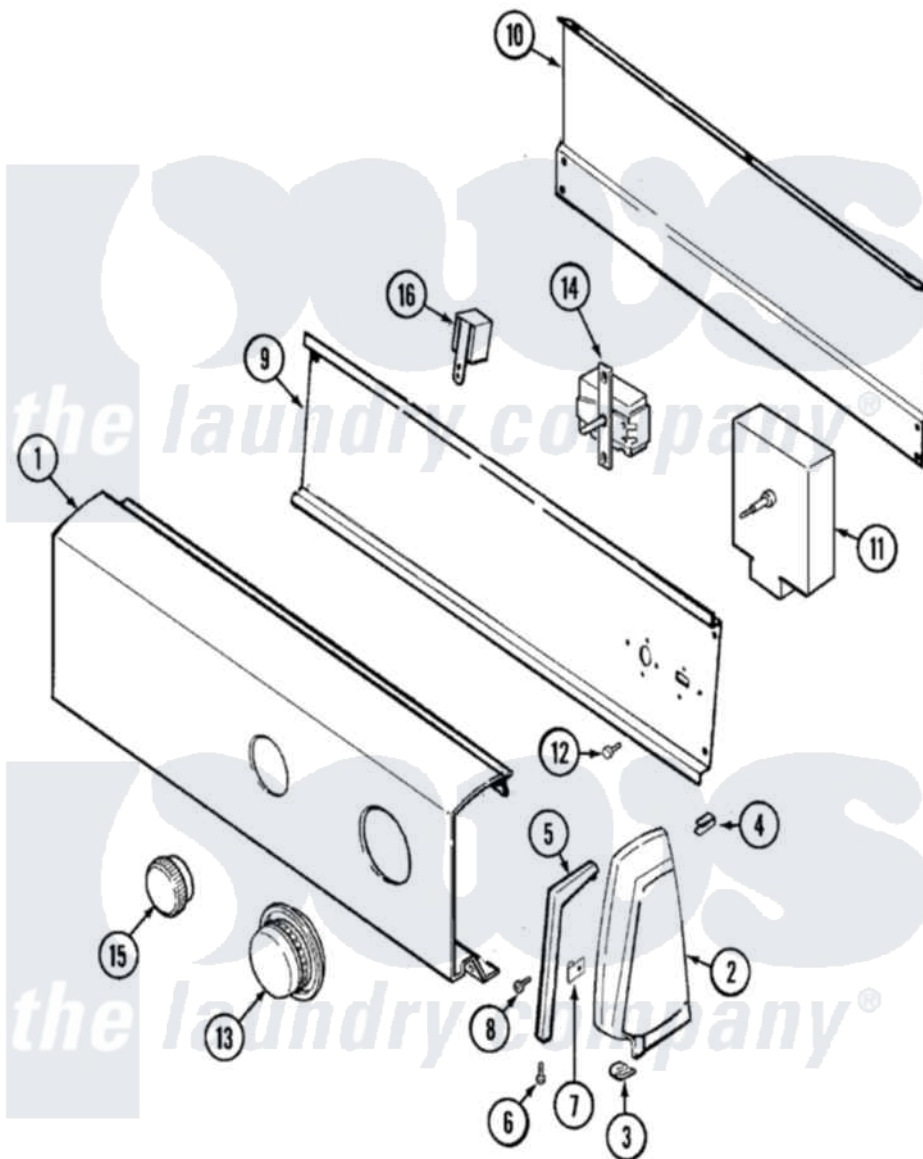

Magic Chef [Residential Magic Chef YE225LM Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001135		Not Available	PANEL, CONTROL
2	25-7851			Speedclip, End Cap To Top
"	21001069	12002263		Endcap Kit
"	21001070	21001456		Cap- End
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7649	910187		Screw
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
5	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel

8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	31001146	31001193	Pad, Shield
"	31001128		Not Available SHIELD, CONTROL
10	35-2688	21001460	Shield, Rear
11	53-1758		Timer
"	63-6743	31001484	Resistor Assembly
12	31001119	W10116760	Screw
13	31001089		Not Available KNOB & SKIRT ASSY.
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001150		Not Available SWITCH, HEAT
15	21001119		Knob, Selector
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1639		Buzzer Assembly
17	31001050		Not Available MANUAL, USE & CARE
"	31001149		Not Available MANUAL, USE & CARE
18	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF

