


# Magic Chef YE226LV 02 - CONTROL PANEL

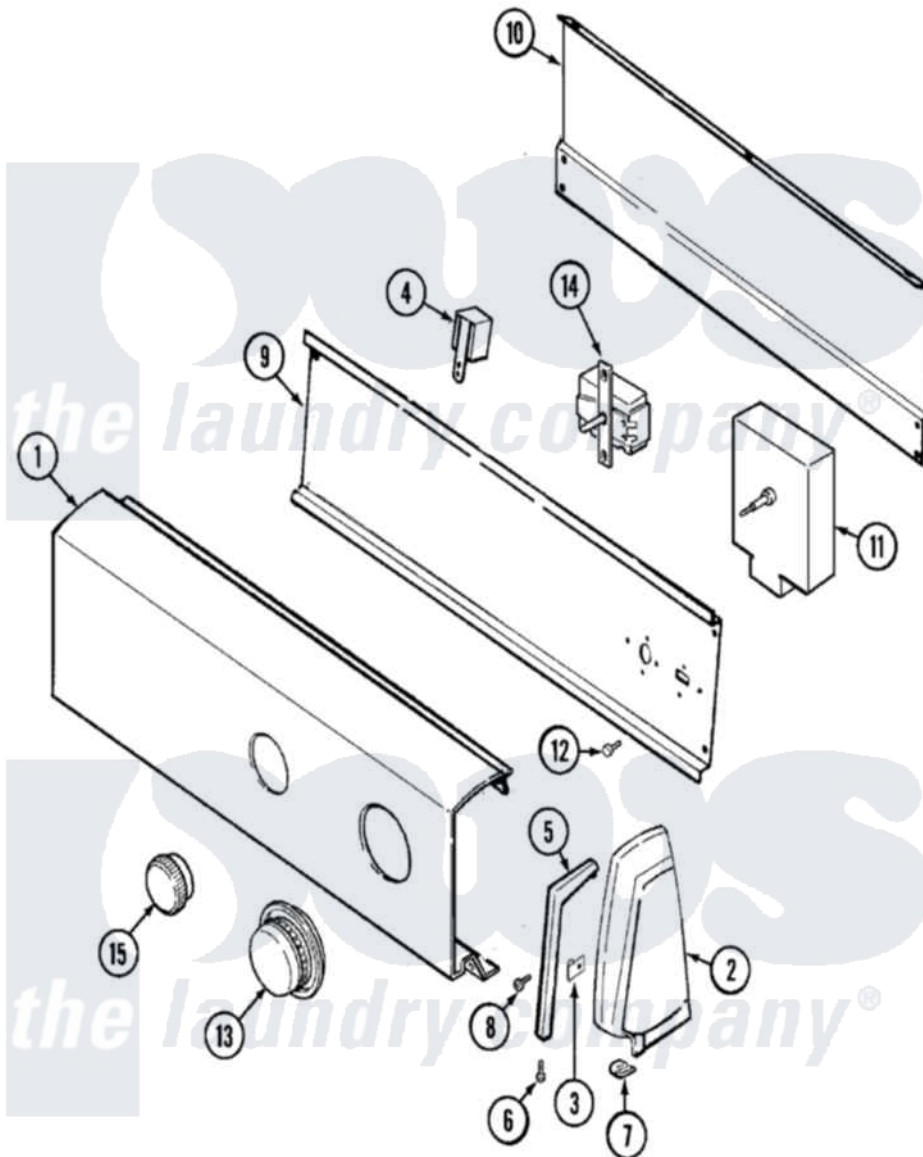

Magic Chef [Residential Magic Chef YE226LV Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001138		Not Available	PANEL, CONTROL
2	35-2669		Not Available	CAP, END (LT)(WHT)
"	35-2668	<a href="#">21001453</a>		Cap- End
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
4	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1639</a>			Buzzer Assembly
5	31001054		Not Available	TRIM, ENDCAP (RT WHT)
"	31001055		Not Available	TRIM, ENDCAP (LT WHT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7851</a>			Speedclip, End Cap To Top
8	25-7649	<a href="#">910187</a>		Screw
9	31001128		Not Available	SHIELD, CONTROL
"	31001146	<a href="#">31001193</a>		Pad, Shield

"	<a href="#">31001193</a>		Pad, Shield
10	35-2688	<a href="#">21001460</a>	Shield, Rear
11	63-6743	<a href="#">31001484</a>	Resistor Assembly
"	<a href="#">53-1758</a>		Timer
12	31001119	<a href="#">W10116760</a>	Screw
13	<a href="#">53-2502</a>		Knob And Skirt Assembly
14	<a href="#">31001236</a>		Switch, Temperature
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">31001129</a>		Switch, Temperature
15	35-3961	<a href="#">21001239</a>	Knob, Selector
16	31001152	Not Available	MANUAL, USE & CARE

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>