


Magic Chef YE228LM 02 - CONTROL PANEL

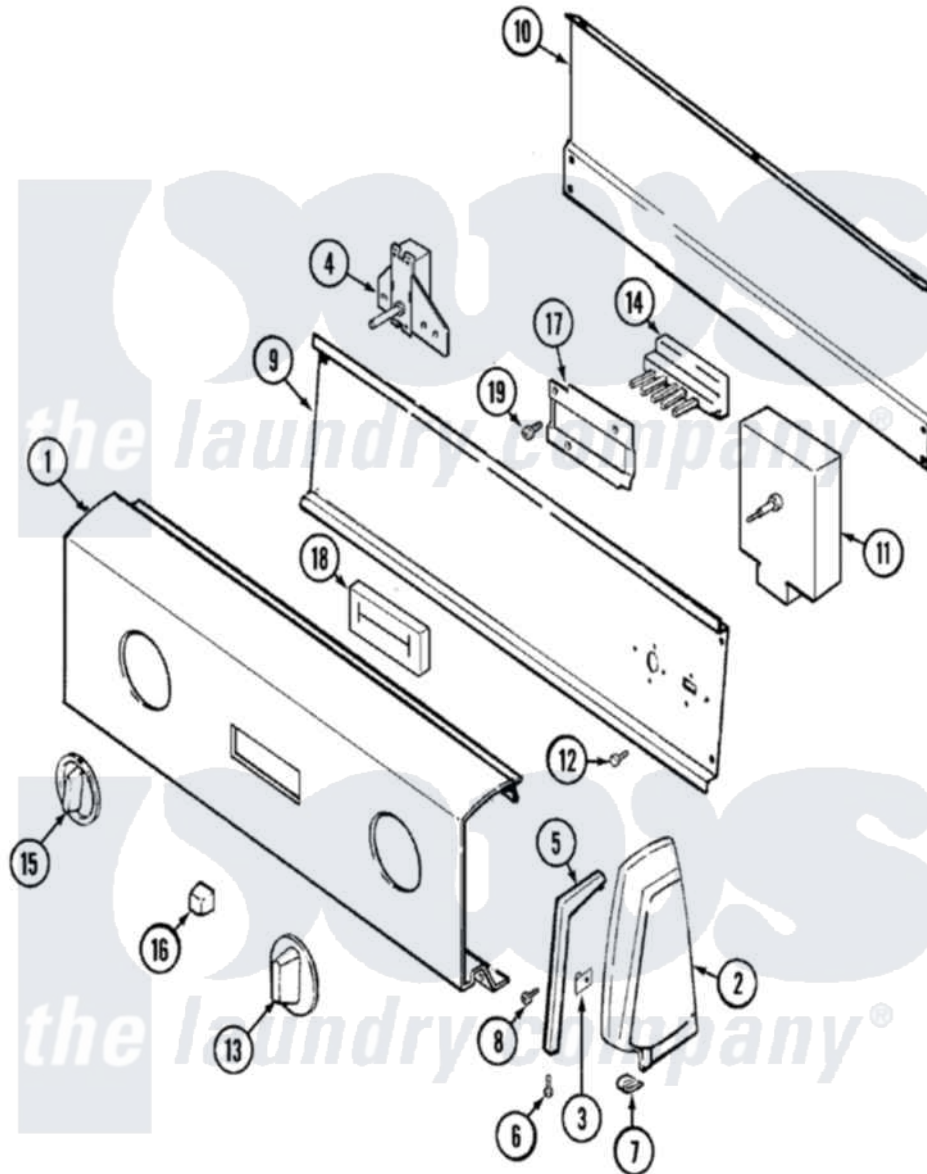

Magic Chef [Residential Magic Chef YE228LM Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001141		Not Available	PANEL, CONTROL
2	21001069	12002263		Endcap Kit
"	21001070	21001456		Cap- End
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-7702			Speedclip, End Cap To Control Panel
4	53-1666			Buzzer - Adjustable
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
6	25-7760			Screw
7	25-7851			Speedclip, End Cap To Top
8	25-7649	910187		Screw
9	31001146	31001193		Pad, Shield
"	31001193			Pad, Shield

"	31001124		Shield, Control
10	35-2688	21001460	Shield, Rear
11	63-6743	31001484	Resistor Assembly
"	53-1816		Not Available TIMER
12	31001119	W10116760	Screw
13	31001089		Not Available KNOB & SKIRT ASSY.
14	53-2416		Switch, 5 Pushbutton
"	25-7712		Not Available SCREW
"	31001242		Not Available SWITCH, PUSHBUTTON
15	21001119		Knob, Selector
16	21001118		Pushbutton
17	33-6621		Not Available BRACKET, SWITCH
18	35-3394		Not Available PAD, SWITCH
19	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
20	31001151		Not Available MANUAL, USE & CARE
"	31001050		Not Available MANUAL, USE & CARE
"	16000329		Not Available GUIDE, QUICK REF. - MAGIC CHEF

