


Magic Chef YE25HA2 02 - CONTROL PANEL (REV. E-F)

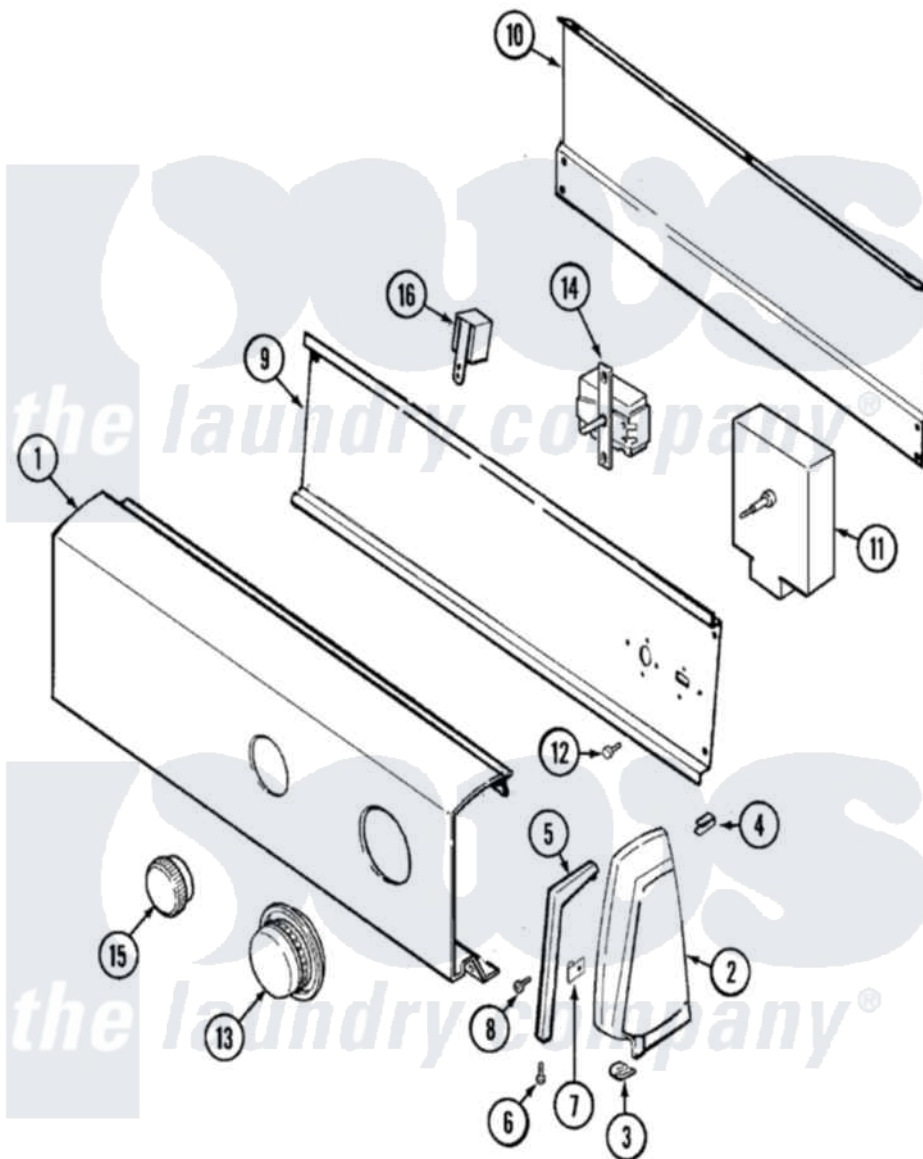

Magic Chef [Residential Magic Chef YE25HA2 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. E-F)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1277		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE NOT REQUIRED
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3002	00767		Screw, 8A X 3/8 HeX Washer

8	25-3092	90767		Head Tapping
9	53-1676			Shield, Control
10	35-2688	21001460		Shield, Rear
11	53-1806		Not Available	TIMER (PURCHASE)
"	53-1361		Not Available	TIMER MOTOR
"	53-1551			Timer
"	63-6743	31001484		Resistor Assembly
12	25-7435	33002917		Screw, No.10-16
"	25-0205	216412		Screw, Bracket To Timer
13	53-1529	31001219		Knob Ski
14	53-1267	53-0456		Switch, Selector
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2185	21001283		Knob, Selector---Piq
16	63-6731	53-1639		Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
17	53-1451-1		Not Available	MANUAL, USE & CARE

