


# Magic Chef YG204KA 01 - CONTROL PANEL

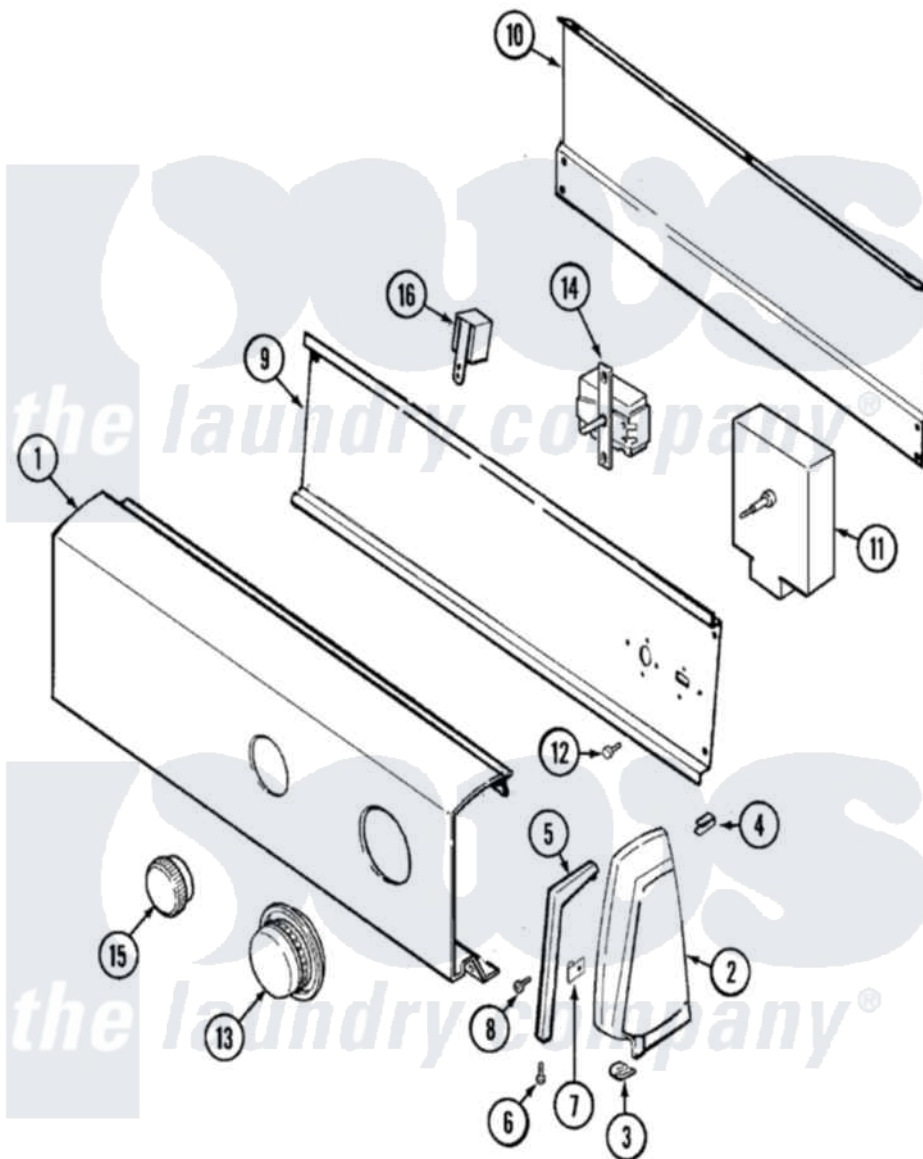

Magic Chef [Residential Magic Chef YG204KA Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2469		Not Available	PANEL, CONTROL
2	35-2487	<a href="#">21001451</a>		Cap- End
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2488	<a href="#">21001452</a>		Cap- End
3	25-7691		Not Available	SCREW, END CAP TO TOP
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0279		Not Available	TRIM, END CAP (RT)
"	53-0280		Not Available	TRIM, END CAP (LT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-2504	<a href="#">31001193</a>	Pad, Shield
"	<a href="#">53-1676</a>		Shield, Control
10	35-2688	<a href="#">21001460</a>	Shield, Rear
11	<a href="#">53-1803</a>		Timer
12	25-7435	<a href="#">33002917</a>	Screw, No.10-16
13	53-2501	<a href="#">31001219</a>	Knob Ski
14	<a href="#">53-0456</a>		Switch, Selector
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-3960	<a href="#">21001283</a>	Knob, Selector---Piq
16	<a href="#">53-1639</a>		Buzzer Assembly
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
17	31001050	Not Available	MANUAL, USE & CARE
"	53-2485	Not Available	MANUAL, USE & CARE
18	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

