


Magic Chef YG205KW 02 - CONTROL PANEL

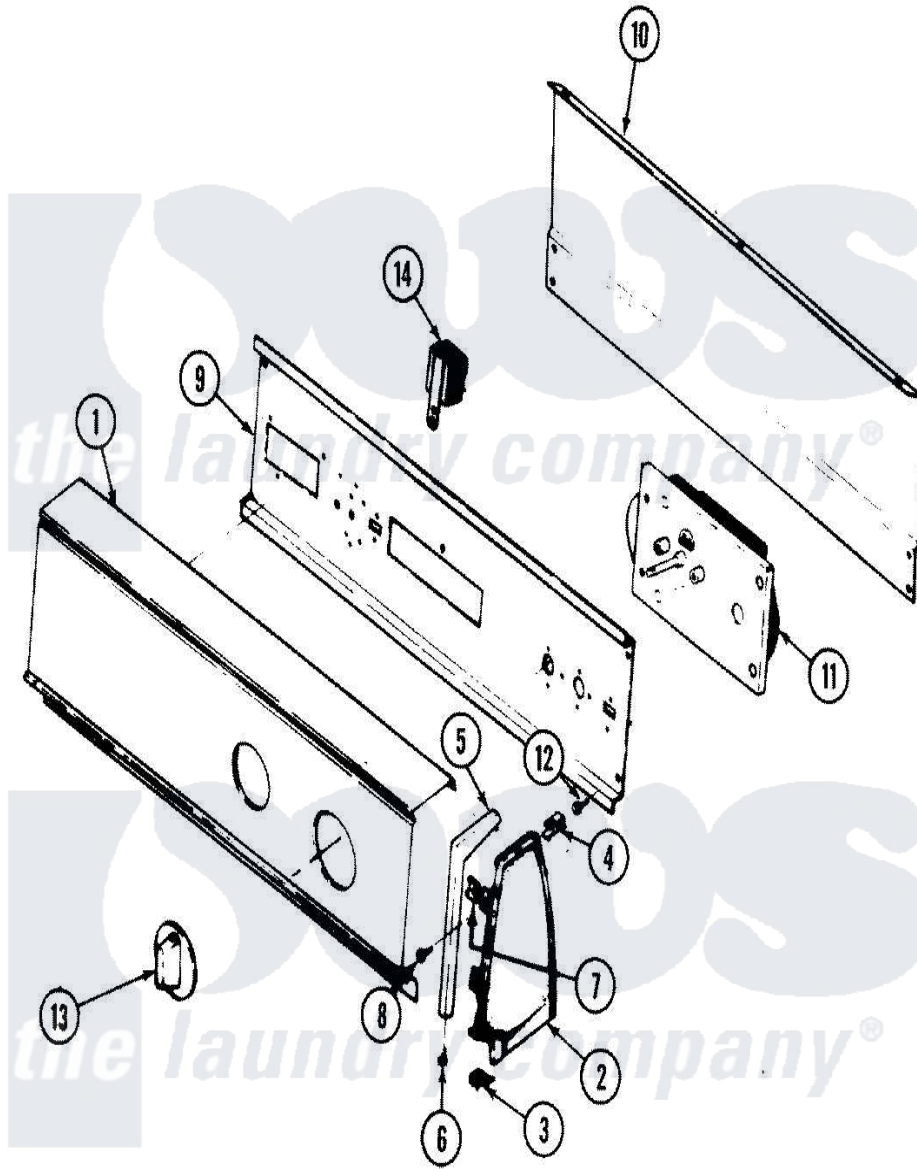

Magic Chef [Residential Magic Chef YG205KW Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2470		Not Available	PANEL, CONTROL
2	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	25-7851			Speedclip, End Cap To Top
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-2412			End Trim RH
"	53-2413			End Trim L.H.
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

7	25-7192			Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676			Shield, Control
"	53-2504	31001193		Pad, Shield
"	31001128		Not Available	SHIELD, CONTROL
10	35-2688	21001460		Shield, Rear
11	53-1758			Timer
12	25-7435	33002917		Screw, No.10-16
13	53-2501	31001219		Knob Ski
14	53-1639			Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
15	31001050		Not Available	MANUAL, USE & CARE
"	53-2486		Not Available	MANUAL, USE & CARE
16	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

